

Desobry 1

Desobry 10.5-inch Dual Car DVD Player Instruction Manual

Model: 1

Brand: Desobry

[Safety Information](#) [Package Contents](#) [Product Overview](#) [Setup](#) [Operating](#)
[Instructions](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. SAFETY INFORMATION

Please read all safety instructions carefully before using the Desobry 10.5-inch Dual Car DVD Player. Keep this manual for future reference.

- Do not expose the device to rain, moisture, or extreme temperatures.
- Avoid placing the device near heat sources or in direct sunlight for extended periods.
- Use only the provided power adapters and cables to prevent damage or fire.
- Do not attempt to disassemble or repair the unit yourself. Refer all servicing to qualified personnel.
- Ensure proper installation in the vehicle to prevent the device from becoming a projectile during sudden stops or accidents.
- Keep small parts and accessories out of reach of children to prevent choking hazards.

2. PACKAGE CONTENTS

Verify that all items are present in your package:

- 2x Desobry 10.5-inch Car DVD Players
- 2x Remote Controls
- 1x AC Adapter
- 1x Car Charger Splitter
- 1x AV Cable

- 1x RCA Cable
- 2x Mounting Brackets
- 2x Headrest Straps
- 1x Screwdriver
- 1x User Manual
- 1x Quick Start Guide



Figure 2.1: All components included in the Desobry Dual Car DVD Player package.

3. PRODUCT OVERVIEW

3.1 Main Unit Components

Each 10.5-inch DVD player unit features a high-resolution screen and intuitive controls.

HDMI Input - Screen Mirroring

Sync up to 1080P video to the player via HDMI Cable

Note: Only support HDMI input(output does not)



(Phone and HDMI Cable not included)



Figure 3.1: Front view of the DVD player with control buttons (Play/Pause, Stop, Next/Previous, Mode, Volume +/-).

3.2 Ports and Connections

The side of each player unit provides various ports for connectivity:

- **DC IN 12V:** Power input for car charger or AC adapter.
- **AV IN:** Audio/Video input for connecting external devices.
- **AV OUT:** Audio/Video output for connecting to another player or TV.
- **HDMI IN:** High-Definition Multimedia Interface input for connecting smartphones, game consoles, etc.
- **USB Port:** For playing media from USB flash drives (up to 32GB, FAT32 format).
- **SD Card Slot:** For playing media from SD cards (up to 32GB, FAT32 format).
- **Headphone Jack (3.5mm):** For private listening.

4. SETUP

4.1 Installation in Vehicle

The Desobry Dual Car DVD Player offers two installation methods: using the mounting brackets or the headrest

straps.

4.1.1 Mounting Bracket Installation

1. Clasp the bracket onto the headrest posts.
2. Install the base of the bracket securely.
3. Align the fixing hole on the player with the bracket's screw.
4. Tighten the screw to secure the player to the bracket.
5. Insert the player onto the base.
6. Loosen the adjustment knob to set the desired screen angle, then tighten to secure.

To remove the player, press the release button on the bracket and slide the player off.

4.1.2 Headrest Strap Installation

Alternatively, use the provided headrest straps to secure the players to the back of the car seats.



Figure 4.1: Two installation choices: mounting bracket or headrest straps.

Your browser does not support the video tag.

Video 4.1: This video demonstrates the installation process of the car headrest DVD player using the mounting bracket, including

how to clasp the bracket, install the base, align the fixing hole, tighten the screw, insert the player, adjust the screen angle, and remove the player. It also shows how to load a DVD disc.

4.2 Powering the Device

The Desobry DVD player supports three power modes:

- **Built-in Rechargeable Battery:** Provides approximately 5 hours of video playback for a single screen, or 2.5-3 hours when both screens are connected.
- **Car Charger:** Connect the car charger splitter to your vehicle's 12V power outlet and to the DC IN port on the players.
- **AC Adapter:** Use the AC adapter to power the players from a standard wall outlet.



Figure 4.2: The three power supply modes for continuous operation.

5. OPERATING INSTRUCTIONS

5.1 Playing DVDs

1. Open the disc cover on the player.

2. Carefully place a compatible DVD or CD onto the spindle, ensuring it clicks into place.
3. Close the disc cover.
4. The player will automatically detect and begin playing the disc. Use the control buttons or remote control for playback functions (Play, Pause, Stop, Skip).

Compatible Disc Formats: CD, DVD, VCD, SVCD, CD-R/+R, DVD-R/+R, DVD-RW/+RW (Note: Blu-ray DVDs are not supported).

5.2 USB/SD Card Playback

1. Insert a USB flash drive or SD card (up to 32GB, FAT32 format) into the respective port.
2. Use the 'Mode' button on the player or remote to select USB or SD mode.
3. Navigate through your media files using the control buttons or remote.

Compatible File Formats: VOB, AVI, MPEG, FLV, DAT, DIVX, MPG, MPEG, MP3, MP2 (max 720*576 pixels for video).

5.3 HDMI Input

Connect an external device (smartphone, Firestick, computer, Xbox, PlayStation, Kindle Fire, Raspberry Pi) to the player using an HDMI cable. The player will display content from the connected device.

Note: The player supports HDMI input only, not output. Ensure your external device supports HDMI output.



Figure 5.1: HDMI input for screen mirroring from compatible devices.

5.4 AV Output and Dual Screen Modes

The dual DVD players can operate in two modes:

- **Two Different Movies:** Each player operates independently, allowing different content to be viewed on each screen.
- **Share the Same Movie:** Connect the two players using the provided AV cable to mirror the content from the master player to the slave player.

Two Play Ways, Double Happiness

Watch 2 Different Movies



Share The Same Movie



AV Cable Included

Figure 5.2: Dual screen functionality for independent or mirrored playback.

You can also connect a single player to a larger display like a TV using the RCA cable for an enhanced viewing experience.

Full HD 1080P Vision

Provides crystal clear, vivid image



Figure 5.3: Syncing the player's screen to a TV for larger viewing.

5.5 Last Memory Function

The player features a 'Last Memory' function. If the device is powered off during playback, it will automatically resume from the exact point where it stopped when powered on again.

Last Memory

Never miss the last-time moment



Dual Louder Stereo Speakers

Bring you Clearer & Louder Sound



Figure 5.4: The Last Memory function ensures seamless playback continuity.

5.6 Audio Output

Each player is equipped with dual stereo speakers for clear and loud audio. For private listening, connect headphones to the 3.5mm earphone jack.

Your browser does not support the video tag.

Video 5.1: This video highlights the various features of the dual headrest DVD player, including its ability to play two different movies or mirror the same content, HDMI input, three charging modes, last memory function, and the option to sync the screen to a TV. It also shows the players installed in a car.

6. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the screen and exterior of the player. Do not use liquid cleaners or abrasive materials.
- **Disc Care:** Handle discs by their edges. Keep them clean and free of scratches to ensure optimal playback.
- **Storage:** When not in use, store the players and accessories in a cool, dry place, away from direct sunlight and extreme temperatures.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Player does not power on.	No power, low battery, faulty power adapter/cable.	Ensure power cable is securely connected. Charge the battery or try a different power source (car charger, AC adapter).
Disc does not play or skips.	Disc is dirty, scratched, or incompatible format.	Clean the disc with a soft cloth. Try a different disc. Ensure the disc format is supported (not Blu-ray).
No video/audio from HDMI input.	HDMI cable loose, external device not outputting, incorrect mode selected.	Check HDMI cable connection. Ensure external device is powered on and configured for HDMI output. Select HDMI mode on the player.
Second screen not displaying content in mirrored mode.	AV cable loose or faulty, incorrect connection.	Ensure the AV cable is securely connected between the AV OUT of the master player and AV IN of the slave player.
USB/SD card not recognized.	Incorrect format, unsupported file type, card/drive too large.	Ensure USB/SD card is FAT32 format and max 32GB. Check file formats are supported. Reinsert the card/drive.

8. SPECIFICATIONS

- **Brand:** Desobry
- **Model Number:** 1
- **Screen Size:** 10.5 Inches
- **Display Type:** LCD
- **Native Resolution:** 1920x1080 (Full HD 1080P)
- **Media Type:** CD-ROM, DVD+R, DVD+RW, DVD-R, DVD-RW
- **Connectivity Technology:** HDMI (Input), USB, AV (Input/Output)
- **Compatible Devices:** Headphone, Mobile Phone, Projector, Speaker (via AV Out)
- **USB/SD Card Support:** Up to 32GB, FAT32 format
- **Battery:** Built-in 5000mAh rechargeable battery
- **Color:** Black

9. WARRANTY AND SUPPORT

9.1 Return Policy

This product is eligible for a 30-day refund/replacement policy from the date of purchase.

9.2 Protection Plans

Extended protection plans are available for purchase:

- 2-Year Protection Plan
- 3-Year Protection Plan
- Complete Protect (monthly billing)

For detailed terms and conditions regarding protection plans, please refer to the specific plan documentation or contact the seller.

9.3 Customer Support

For any questions, technical assistance, or warranty claims, please contact Desobry customer support through the retailer where the product was purchased.