

[Manuals.plus](#) /

› [Momcozy](#) /

› Momcozy Wearable Breast Pump BP334 Air 1 User Manual

Momcozy BP334

Momcozy Wearable Breast Pump BP334 Air 1 User Manual

Model: BP334

1. PRODUCT OVERVIEW

The Momcozy Wearable Breast Pump BP334 Air 1 is designed for discreet and efficient milk expression. Its ultra-slim profile and transparent top offer convenience and ease of use for mothers on the go. This pump integrates smart technology for seamless operation and tracking.



Image: The Momcozy Wearable Breast Pump BP334 Air 1, showcasing its compact design.

Key Features:

- **Ultra-Slim & Discreet:** At just 2.4 inches thick, it is 20% thinner than many conventional pumps, ensuring ultimate privacy and comfort.
- **Transparent Top:** Simplifies nipple alignment and allows for easy monitoring of milk volume during pumping.
- **Smart App Connectivity:** Syncs with the Momcozy app for automatic mode switching, real-time milk tracking, and full-collector alerts.

2. PACKAGE CONTENTS

Please check the package to ensure all components are present and undamaged.



Image: The Momcozy Wearable Breast Pump BP334 Air 1 retail box, illustrating the included items.

The standard package includes:

- Momcozy Wearable Breast Pump BP334 Air 1 (Motor Unit)
- Milk Collector Cup
- Flange (various sizes may be included or sold separately)
- Silicone Diaphragm
- Valve
- USB-C Charging Cable
- User Manual

Note: Specific flange sizes and additional accessories may vary based on the purchased variant.

3. SETUP AND ASSEMBLY

Follow these steps to assemble your Momcozy Wearable Breast Pump BP334 Air 1 before first use.

1. **Clean and Sanitize:** Before initial use, wash all components that come into contact with breast milk (milk collector cup, flange, silicone diaphragm, valve) with warm soapy water. Rinse thoroughly and sterilize according to manufacturer guidelines (e.g., boiling water, steam sterilizer). The motor unit should not be washed or submerged in water.

2. **Assemble the Valve:** Insert the silicone valve firmly into the bottom of the milk collector cup. Ensure it is securely seated to prevent leaks and maintain suction.
3. **Attach the Diaphragm:** Place the silicone diaphragm onto the top of the milk collector cup, ensuring its edges are sealed completely around the rim.
4. **Insert the Flange:** Gently push the flange into the opening of the milk collector cup. Make sure it fits snugly.
5. **Connect the Motor Unit:** Align the motor unit with the assembled milk collector cup and press down firmly until it clicks into place. Ensure a secure connection for proper suction.
6. **Charge the Pump:** Before first use, fully charge the pump using the provided USB-C cable and a compatible power adapter. The indicator light on the motor unit will show charging status.



Image: A Momcozy Wearable Breast Pump BP334 Air 1 being worn, demonstrating its discreet profile.

4. OPERATING INSTRUCTIONS

This section guides you through the operation of your Momcozy Wearable Breast Pump BP334 Air 1.

1. **Positioning:** Place the assembled pump directly onto your breast, ensuring your nipple is centered within the flange tunnel. The transparent top helps with accurate alignment. Ensure a good seal around your breast to prevent air leakage.
2. **Power On:** Press and hold the power button on the motor unit to turn the pump on. The LCD display will illuminate.
3. **Select Mode:** The pump typically starts in a stimulation mode to initiate milk flow. Use the mode button to switch between available modes:
 - **Stimulation Mode:** Faster, lighter suction to stimulate milk let-down.

- **Expression Mode:** Slower, stronger suction for efficient milk expression once let-down occurs.
- (Other modes may be available depending on the model, refer to the display.)

4. **Adjust Suction Level:** Use the '+' and '-' buttons to increase or decrease the suction intensity to a comfortable and effective level. Start with a lower setting and gradually increase.
5. **Pumping Session:** Pump for your desired duration, typically 15-30 minutes per breast. Monitor the milk flow through the transparent top.
6. **Power Off:** Once finished, press and hold the power button to turn off the pump.
7. **Remove Pump:** Gently break the seal by inserting a finger between your breast and the flange before removing the pump.
8. **Store Milk:** Carefully detach the milk collector cup from the motor unit and pour the expressed milk into a sterile storage container.

Smart App Connectivity: For enhanced control and tracking, download the Momcozy app. Pair your pump via Bluetooth to access features such as automatic mode switching, real-time milk volume tracking, and alerts for a full collector cup.

5. MAINTENANCE AND CLEANING

Proper cleaning and maintenance ensure the longevity and hygiene of your breast pump.

1. **Disassemble:** After each use, disassemble all parts that come into contact with breast milk: milk collector cup, flange, silicone diaphragm, and valve.
2. **Wash:** Wash these components immediately in warm, soapy water. Use a dedicated brush for cleaning pump parts.
3. **Rinse:** Rinse all parts thoroughly under clean running water.
4. **Sterilize:** Sterilize parts at least once a day. Methods include boiling water for 5 minutes, using a steam sterilizer, or a dishwasher with a sanitize cycle (if parts are dishwasher safe). Refer to product packaging for specific sterilization compatibility.
5. **Dry:** Air dry all parts on a clean drying rack or a clean paper towel. Avoid using cloth towels as they can transfer germs.
6. **Motor Unit Cleaning:** Wipe the exterior of the motor unit with a clean, damp cloth. Do not submerge the motor unit in water or sterilize it.
7. **Storage:** Store all clean and dry pump parts in a clean, covered container until the next use.

Important: Replace silicone parts (diaphragm, valve, flange inserts) every 1-3 months, or sooner if signs of wear or reduced suction are observed.

6. TROUBLESHOOTING

If you encounter issues with your Momcozy Wearable Breast Pump, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
No suction or weak suction	• Improper assembly • Damaged silicone parts (valve, diaphragm) • Battery low • Flange not sealed correctly	• Reassemble all parts, ensuring a tight seal. • Inspect silicone parts for tears or wear; replace if necessary. • Charge the pump fully. • Ensure the flange forms a complete seal around the breast.
Pump not turning on	• Battery depleted • Power button not pressed correctly	• Charge the pump. • Press and hold the power button for a few seconds.
Milk leaking from pump	• Improper assembly • Collector cup overfilled • Damaged valve or diaphragm	• Check all connections, especially the valve and diaphragm. • Do not exceed the maximum fill line on the collector cup. • Inspect and replace damaged silicone parts.
App connectivity issues	• Bluetooth not enabled • Pump not in pairing mode • App outdated	• Ensure Bluetooth is active on your device. • Follow app instructions to put the pump in pairing mode. • Update the Momcozy app to the latest version.

If the problem persists, please contact customer support.

7. SPECIFICATIONS

Model Number	BP334
Brand	Momcozy
Material Type	Silicone
Color	Cozy Red
Additional Features	Adjustable Suction, LCD Display, Lightweight, Wearable
UPC	840506408166
Package Dimensions	11.1 x 9.29 x 5.63 inches
Weight	5.07 Pounds (approx.)
Manufacturer	Shenzhen Root Innovation Technology Co., Ltd.
Date First Available	October 14, 2025

8. WARRANTY INFORMATION

Momcozy products are manufactured with high-quality materials and undergo strict quality control. This product is covered

by a limited warranty against manufacturing defects from the date of purchase. Please retain your proof of purchase for warranty claims.

The warranty typically covers defects in materials and workmanship under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear of consumable parts (e.g., silicone valves, diaphragms).

For detailed warranty terms and conditions, please refer to the warranty card included in your product packaging or visit the official Momcozy website.

9. CUSTOMER SUPPORT

If you have any questions, concerns, or require assistance with your Momcozy Wearable Breast Pump BP334 Air 1, please contact our customer support team.

- **Website:** Visit the official Momcozy website for FAQs, support resources, and contact forms.
- **Email:** Refer to your product packaging or the official website for customer service email addresses.
- **Phone:** Check the Momcozy website for regional customer service phone numbers.

When contacting support, please have your product model number (BP334) and proof of purchase readily available.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question