

[Manuals.plus](#) /

› [SANPTENT](#) /

› SANPTENT 15.6 Inch Laptop User Manual - Model 15.6 N5095

SANPTENT 15.6 N5095

SANPTENT 15.6 Inch Laptop User Manual

Model: 15.6 N5095



Image: Front view of the SANPTENT 15.6 Inch Laptop, highlighting its key features like the 15.6-inch Full HD display, Windows 11 Pro operating system, Intel Celeron N5095 processor, 16GB DDR4 RAM, and 512GB SSD storage.

1. INTRODUCTION

This manual provides essential information for the proper setup, operation, and maintenance of your SANPTENT 15.6 Inch Laptop (Model: 15.6 N5095). Please read this manual thoroughly before using the device to ensure optimal

performance and safety.

For further assistance, please refer to the support section or contact customer service.

2. SAFETY INFORMATION

- Do not expose the laptop to extreme temperatures, direct sunlight, or high humidity.
- Avoid placing heavy objects on the laptop.
- Use only the provided power adapter to charge the device.
- Keep the laptop away from liquids and corrosive substances.
- Do not attempt to disassemble or repair the laptop yourself. Refer to qualified service personnel.
- Ensure proper ventilation to prevent overheating.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- SANPTENT 15.6 Inch Laptop
- Power Adapter
- User Manual (this document)

4. PRODUCT OVERVIEW

 
4.1. Components and Features

The SANPTENT 15.6 Inch Laptop is designed for daily computing tasks, featuring a Full HD display, an Intel Celeron N5095 processor, 16GB RAM, and a 512GB SSD.

1920x1080



15.6" FHD Visual Experience

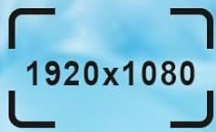

High Resolution: 1920*1080



Aspect Ratio: 16:9



Narrow Bezel: 5mm

Image: Visual representation of the laptop's 15.6-inch Full HD display, highlighting its 1920x1080 resolution, 16:9 aspect ratio, and narrow 5mm bezels for an immersive viewing experience.

Display

- **Screen Size:** 15.6 Inches
- **Resolution:** 1920 x 1080 pixels (Full HD)
- **Panel Type:** IPS

Intel 11th Gen Celeron N5095 Processor



2.9 Up to
GHz



4 Core



Intel UHD Graphics

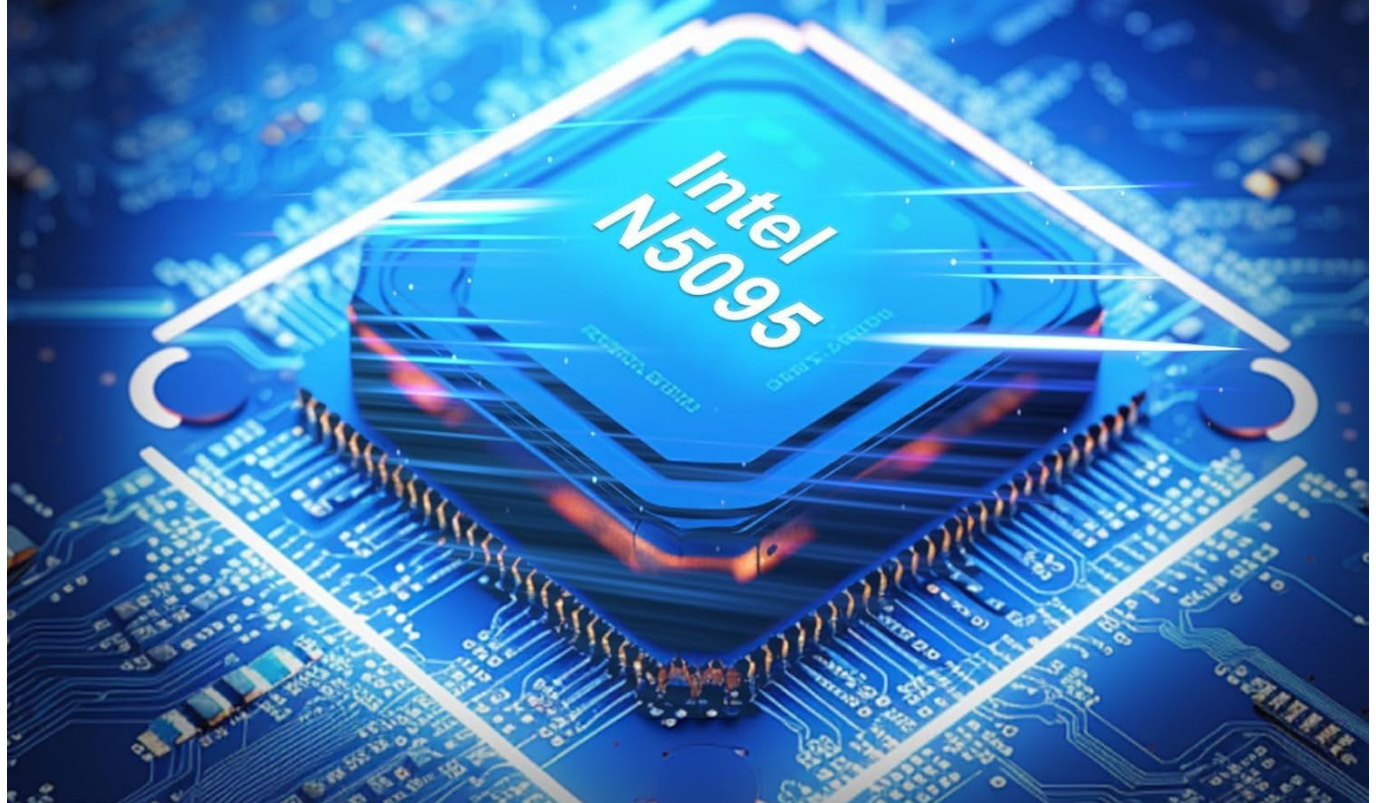 


Image: Diagram illustrating the Intel Celeron N5095 processor, emphasizing its 2.9 GHz turbo frequency, quad-core architecture, and integrated Intel UHD Graphics.

Processor

- **CPU:** Intel Celeron N5095 Quad-Core Processor
- **Max Turbo Frequency:** Up to 2.9 GHz
- **Graphics:** Intel UHD Graphics (Integrated)

16GB DDR4 RAM 512GB SSD

With an M.2 hard drive, you have the option to expand the storage to 1TB or possibly even 2TB, depending on your preference.



16GB DDR4 RAM



512GB SSD



2666MHz


 


Image: Graphic detailing the laptop's 16GB DDR4 RAM and 512GB SSD, along with a note about the M.2 slot allowing storage expansion up to 2TB. Performance metrics for DDR4 and DDR3 are also shown for comparison.

Memory and Storage

- **RAM:** 16GB DDR4 SDRAM
- **Storage:** 512GB Solid State Drive (SSD)
- **Expansion:** M.2 slot for storage expansion up to 2TB (user-installable)

 Full-size Keyboard with Sensitive Control

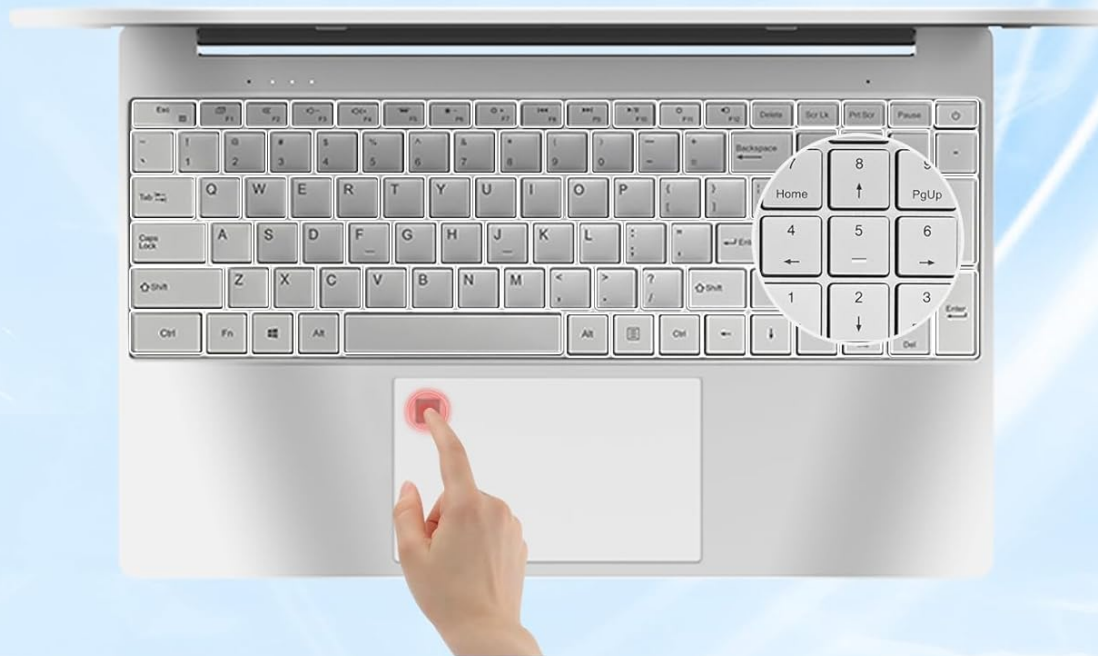

Backlit Keyboard



Numeric Keypad



Fingerprint Unlocking

Image: Top-down view of the laptop's full-size keyboard, illustrating the integrated numeric keypad, backlit keys, and the fingerprint sensor located on the touchpad for secure unlocking.

Input Devices

- **Keyboard:** Full-size with Numeric Keypad, Backlit
- **Touchpad:** Multi-touch gesture support, integrated Fingerprint Sensor

Rich Interface

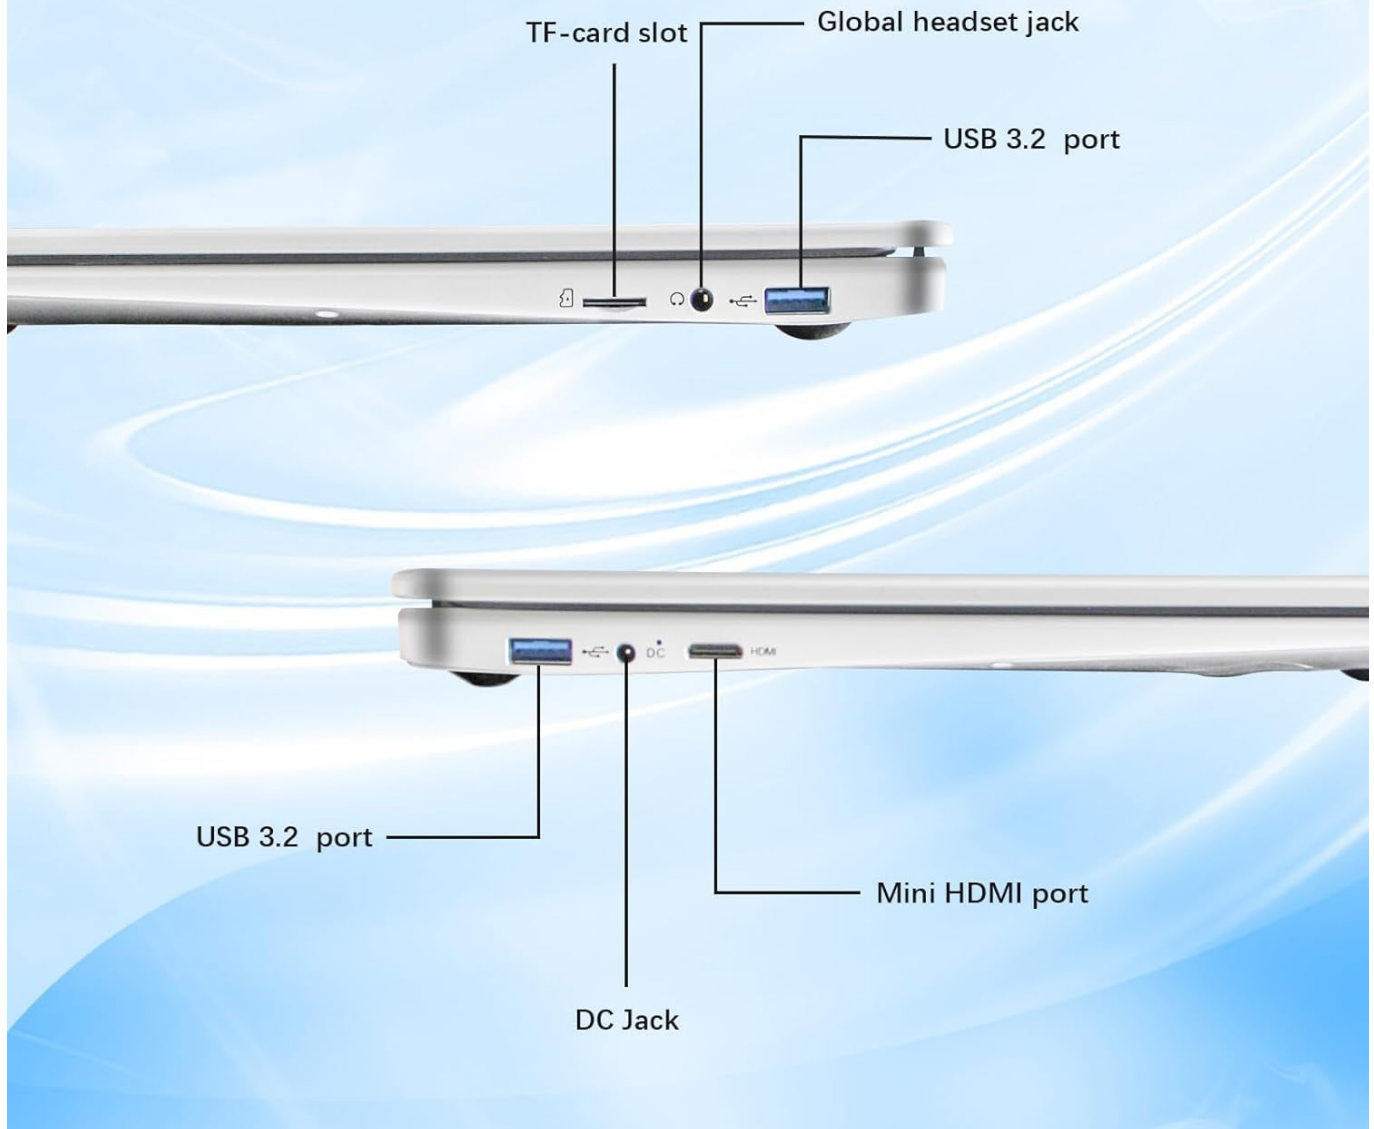 


Image: Side profile views of the laptop, labeling the various ports including a TF-card slot, global headset jack, two USB 3.2 ports, a DC power jack, and a Mini HDMI port for external display connectivity.

Ports and Connectivity

- **USB:** 2x USB 3.2 ports
- **Video Output:** Mini HDMI port
- **Audio:** Global Headset Jack (3.5mm)
- **Card Reader:** TF-card slot
- **Wireless:** Wi-Fi (802.11ac, 802.11ax), Bluetooth 5.0



Image: Lifestyle image depicting the laptop being used in various settings, highlighting its long battery life, dual-band Wi-Fi (2.4G/5G), Bluetooth 5.0, built-in microphone, and 720p HD camera for communication.

Other Features

- **Operating System:** Windows 11 Pro
- **Camera:** 720P HD Camera
- **Audio:** Built-in Microphone, Stereo Speakers

5. SETUP

5.1. Initial Power On

1. Unpack the laptop and power adapter from the box.
2. Connect the power adapter to the DC-in port on the laptop and then to a power outlet.
3. Open the laptop lid.

4. Press the power button located on the keyboard to turn on the device.
5. Follow the on-screen instructions to complete the initial Windows 11 Pro setup, including language, region, network connection, and user account creation.

5.2. Connecting Peripherals

You can connect various peripherals to your laptop:

- **USB Devices:** Insert USB drives, mice, or keyboards into the USB 3.2 ports.
- **External Display:** Connect an external monitor or projector using a Mini HDMI cable.
- **Headphones/Microphone:** Plug in a headset into the global headset jack.
- **Memory Card:** Insert a TF-card into the designated slot for additional storage or data transfer.

6. OPERATING INSTRUCTIONS

6.1. Basic Operation

- **Power On/Off:** Press the power button to turn on. To shut down, click the Start button, then Power, and select "Shut down."
- **Sleep Mode:** Close the lid or click the Start button, then Power, and select "Sleep."
- **Restart:** Click the Start button, then Power, and select "Restart."

6.2. Using the Keyboard and Touchpad

- **Backlit Keyboard:** Press **Fn + Fx** (where Fx is the specific function key for backlight control, usually F3 or F4) to adjust or toggle the keyboard backlight.
- **Numeric Keypad:** Use the dedicated numeric keypad for efficient data entry. Ensure Num Lock is enabled.
- **Fingerprint Sensor:** Register your fingerprint through Windows Settings > Accounts > Sign-in options for quick and secure login.
- **Touchpad Gestures:** Utilize multi-touch gestures for navigation, zooming, and scrolling. Refer to Windows settings for customization.

6.3. Windows 11 Pro Features

Your laptop comes pre-installed with Windows 11 Pro. Explore its features:

- **Start Menu:** Centralized access to apps, settings, and files.
- **Snap Layouts:** Organize open windows efficiently on your screen.
- **Widgets:** Quick access to personalized information.
- **Microsoft Edge:** The default web browser.
- **Windows Security:** Built-in antivirus and firewall protection.

7. MAINTENANCE

7.1. Cleaning Your Laptop

- **Screen:** Use a soft, lint-free cloth slightly dampened with water or a screen cleaner. Do not spray liquid directly onto the screen.
- **Keyboard and Chassis:** Use a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, ensuring no liquid enters openings.

- **Ports:** Use compressed air to gently clear dust from ports.

7.2. Battery Care

- Avoid fully discharging the battery frequently.
- Do not leave the laptop plugged in constantly after it is fully charged for extended periods.
- Store the laptop in a cool, dry place if not used for a long time, with the battery charged to around 50-70%.

7.3. Software Updates

Regularly update your Windows operating system and drivers to ensure optimal performance, security, and compatibility.

- **Windows Updates:** Go to Settings > Windows Update and check for updates.
- **Driver Updates:** Drivers are typically updated through Windows Update or can be downloaded from the manufacturer's website if specific issues arise.

8. TROUBLESHOOTING

Problem	Possible Solution
Laptop does not power on.	Ensure the power adapter is securely connected and the outlet is functional. Check if the battery is completely drained.
Screen is blank or black.	Check if the laptop is powered on. Try connecting an external monitor to verify if the issue is with the laptop's display. Adjust screen brightness.
Wi-Fi connection issues.	Ensure Wi-Fi is enabled in Windows settings. Restart your router and the laptop. Check for updated Wi-Fi drivers.
Slow performance.	Close unnecessary applications. Check for background processes consuming resources. Ensure sufficient free space on the SSD. Run a system scan for malware.
Keyboard backlight not working.	Press the designated function key combination (e.g., Fn + F3/F4) to toggle or adjust the backlight.

9. SPECIFICATIONS

Feature	Detail
Brand	SANPTENT
Model Name	15.6 N5095
Screen Size	15.6 Inches
Screen Resolution	1920 x 1080 pixels (Full HD)
Processor	Intel Celeron N5095 (Up to 2.9 GHz)
Graphics Coprocessor	Intel UHD Graphics
RAM	16GB DDR4 SDRAM
Hard Drive	512GB SSD

Feature	Detail
Operating System	Windows 11 Pro
Wireless Type	802.11ac, 802.11ax (Wi-Fi), Bluetooth 5.0
Special Features	Backlit Keyboard, Numeric Keypad, Fingerprint Reader, 720P Camera
Product Dimensions	14.04 x 8.97 x 0.78 inches
Color	Silver

10. WARRANTY AND SUPPORT

This product comes with a standard manufacturer's warranty. For specific warranty terms and conditions, please refer to the documentation included with your purchase or contact SANPTENT customer support. For technical support, troubleshooting assistance, or service inquiries, please visit the official SANPTENT website or contact their customer service department. Keep your purchase receipt and product serial number handy when seeking support.

© 2025 SANPTENT. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

