

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [occiam](#) /

› [occiam T19 Active Noise Cancelling Earbuds User Manual](#)

occiam T19

occiam T19 Active Noise Cancelling Earbuds User Manual

Model: T19

1. PRODUCT OVERVIEW

The occiam T19 Active Noise Cancelling Earbuds are designed to provide a high-quality audio experience with enhanced comfort and durability. Featuring active noise cancellation, these wireless Bluetooth headphones are suitable for various activities including work, sports, and running. The earbuds come with over-ear hooks for a secure fit and are IPX7 waterproof, making them resistant to sweat and splashes.



Image: occiam T19 Active Noise Cancelling Earbuds with charging case.

2. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- Wireless Earbuds (Left and Right)
- Charging Case
- USB-C Charging Cable

- User Manual
- Eartips (S, M, L sizes)



Image: All items included in the occiam T19 earbud package.

3. SETUP

3.1. Charging the Case and Earbuds

Before first use, fully charge the charging case and earbuds. The charging case features a digital battery display to show the remaining power and charging status of the earbuds.

1. Connect the provided USB-C charging cable to the charging port on the case and to a compatible USB power source.
2. The digital display on the case will show the charging progress.
3. Place the earbuds into the charging case. Ensure they are correctly seated; magnetic contacts will guide them into place.
4. The earbuds will begin charging automatically. The case display will indicate the charging status of each earbud.
5. A full charge for the case takes approximately 2 hours.

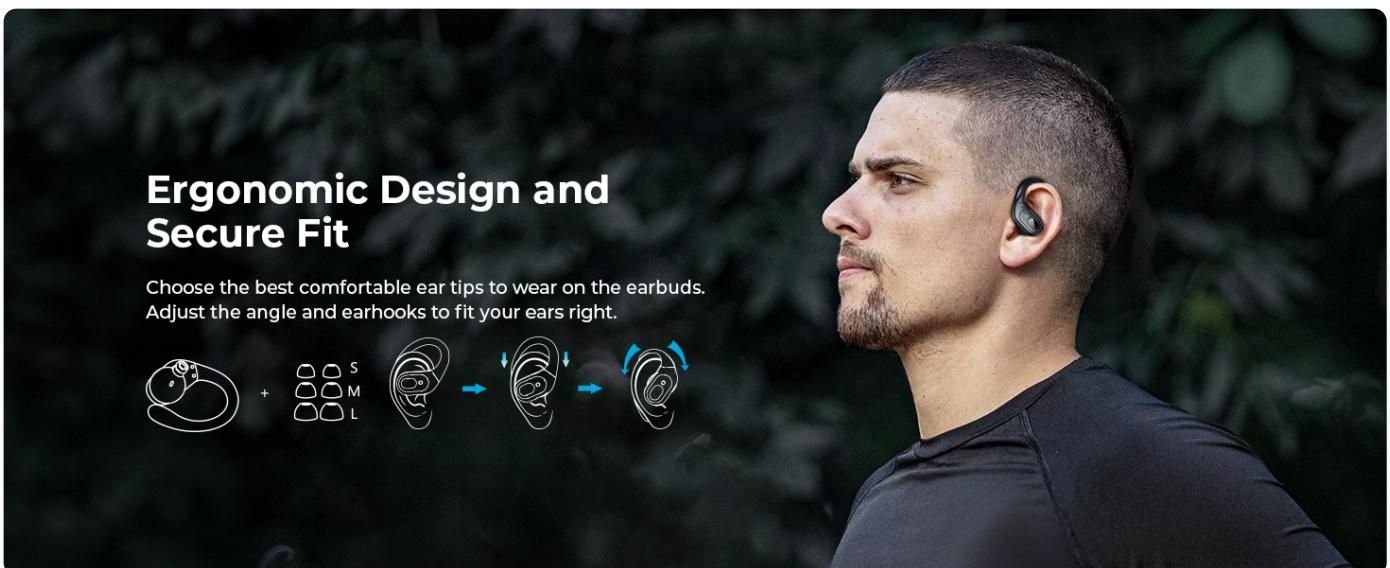


Image: Charging case showing battery levels for the case and individual earbuds.

3.2. Pairing with a Device

The earbuds feature one-step pairing and a built-in Hall switch for instant connection.

1. Open the charging case. The earbuds will automatically power on and enter pairing mode.
2. On your Bluetooth-enabled device (smartphone, tablet, laptop, etc.), go to the Bluetooth settings.
3. Search for available devices and select "T19" from the list.
4. Once connected, you will hear an audio prompt, and the earbuds will be ready for use.
5. For subsequent uses, simply open the case, and the earbuds will automatically connect to the last paired device.

Your browser does not support the video tag.

Video: A user demonstrates the unboxing and initial setup of the occiam T19 Wireless Earbuds, including opening the case and showing the charging indicators.

4. OPERATING INSTRUCTIONS

4.1. Wearing the Earbuds

The occiam T19 earbuds are designed for a comfortable and secure fit, especially during physical activity.

1. Choose the appropriate size eartips (S, M, L) for a snug fit in your ear canal.
2. Place the earbud in your ear, ensuring the ear hook wraps securely over your ear.
3. Adjust the angle of the earbud and ear hook until it feels comfortable and stable.

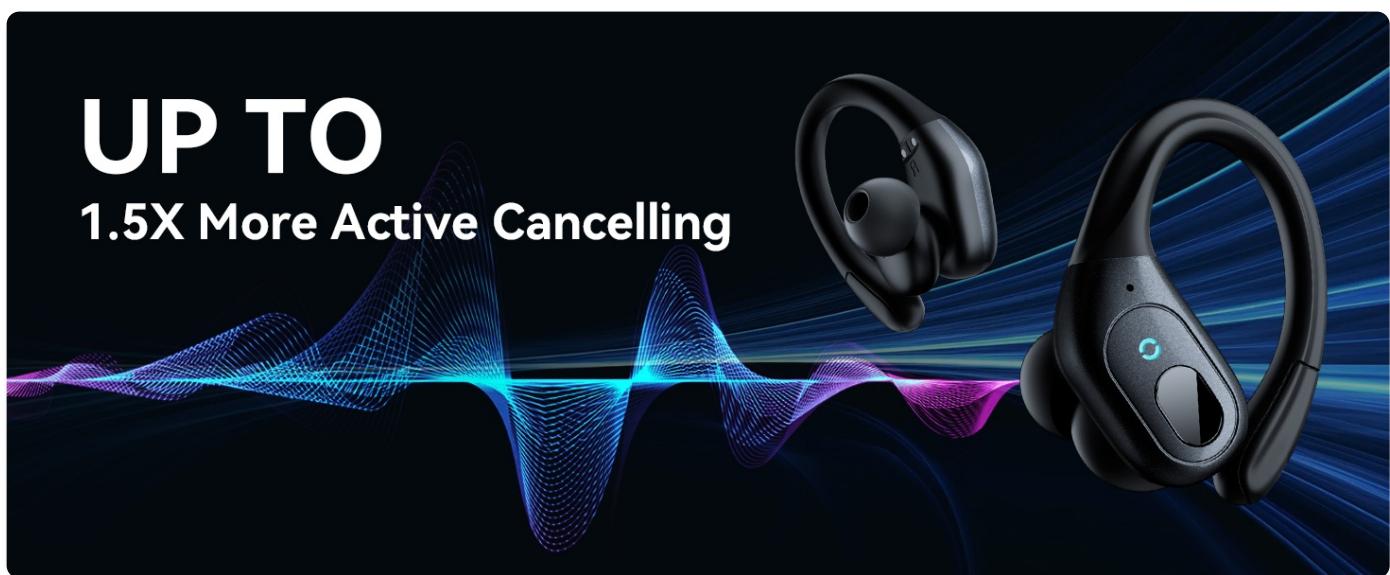


Image: Visual guide on selecting eartip sizes and correctly wearing the earbuds with over-ear hooks.

4.2. Button Controls

Each earbud features a physical button for easy control of audio playback and calls.

- **Play/Pause:** Single press the button on either earbud.
- **Volume Control:** Double press the button on the right earbud to increase volume, or on the left earbud to decrease volume.
- **Next Track:** Triple press the button on the right earbud.
- **Previous Track:** Triple press the button on the left earbud.
- **Answer/End Call:** Single press the button on either earbud during an incoming call or active call.
- **Reject Call:** Press and hold the button on either earbud during an incoming call.
- **Activate Voice Assistant:** Press and hold the button on either earbud for 2 seconds.

- **Active Noise Cancellation (ANC):** Press and hold the button on either earbud for 3 seconds to toggle ANC on/off.



Image: Detailed illustration of the multi-functional button controls on the earbuds.

4.3. Mono and Binaural Modes

The earbuds support both binaural (using both earbuds) and mono (using a single earbud) modes, offering flexible listening options.

- **Binaural Mode:** Use both earbuds for a stereo audio experience.
- **Mono Mode:** Use either the left or right earbud independently. The unused earbud can remain in the charging case.

5. MAINTENANCE

5.1. Cleaning

To ensure optimal performance and longevity, regularly clean your earbuds and charging case.

- Wipe the earbuds and charging case with a soft, dry, lint-free cloth.
- If the earbuds have been exposed to sweat or water, ensure they are completely dry before placing them back in the charging case to prevent charging failures due to electrolyte reaction.
- Gently remove any earwax or debris from the eartips and speaker mesh using a small, soft brush or cotton swab.

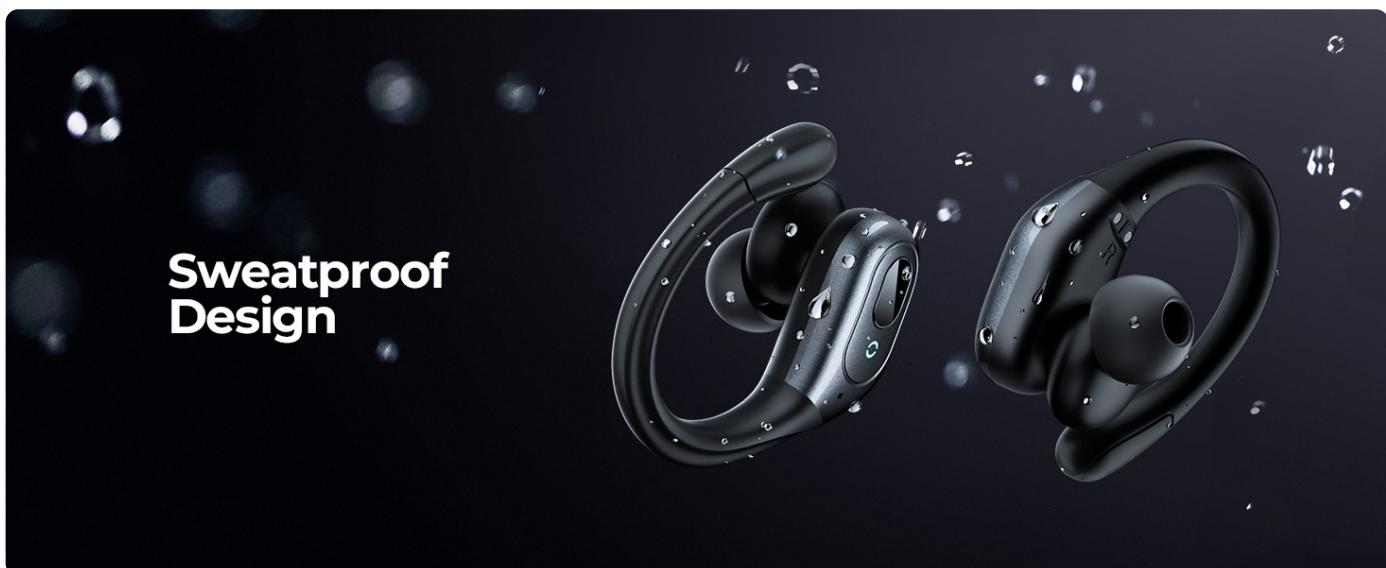


Image: occiam T19 earbuds showcasing their sweatproof design, emphasizing the need for drying after exposure to moisture.

5.2. Storage

When not in use, store the earbuds in their charging case to protect them and keep them charged.

- Store the earbuds and case in a cool, dry place away from extreme temperatures and direct sunlight.
- Avoid storing them near sharp objects that could scratch or damage the earbuds or case.

6. TROUBLESHOOTING

Issue	Possible Solution
Earbuds not pairing	Ensure earbuds are charged. Turn off and on Bluetooth on your device. Forget "T19" from your device's Bluetooth list and re-pair.
No sound or low volume	Check volume levels on both your device and earbuds. Ensure earbuds are properly seated in your ears. Clean eartips and speaker mesh.
One earbud not working	Place both earbuds back in the case, close it, then open again to reset. Ensure both earbuds are charged.
Charging case not charging	Verify the USB-C cable and power adapter are working correctly. Ensure the cable is securely connected to the case.
Earbuds falling out	Try different sizes of eartips for a more secure fit. Adjust the ear hooks for better stability.

7. SPECIFICATIONS

Feature	Detail
Model Name	T19
Noise Control	Active Noise Cancellation (up to 45dB reduction)
Connectivity Technology	Wireless, Bluetooth 5.4
Bluetooth Range	10 Meters (30ft)
Battery Life (Earbud)	8 hours per full charge
Total Playback Time (with Charging Case)	Up to 48 hours (both earbuds), Up to 90 hours (single earbud)
Charging Time	2 Hours (for case)
Water Resistance Level	IPX7 (Sweatproof)
Audio Driver Size	10 Millimeters Dynamic Driver
Frequency Response	20 KHz
Sensitivity	92 dB
Control Method	Push Button (Volume Control)

Feature	Detail
Included Components	Charging Case, Eartips, USB-C Charging Cable, User Manual, Wireless Earbuds
Material	Acrylonitrile Butadiene Styrene (ABS)
Item Weight	85 Grams (3 ounces)
Product Dimensions	3.46 x 2.44 x 1.46 inches

8. WARRANTY AND SUPPORT

For warranty information, technical support, or customer service inquiries, please refer to the contact details provided in the original product packaging or visit the official occiam website.

Keep your purchase receipt for warranty claims.

© 2026 occiam. All rights reserved.