

BISINNA ZL015

BISINNA 4 Season 2-Person Backpacking Tent Instruction Manual

Model: ZL015

1. PRODUCT OVERVIEW

The BISINNA 4 Season Tent (Model ZL015) is a versatile, lightweight shelter designed for backpacking, camping, and hiking across various weather conditions. This double-layer tent comfortably accommodates two people and features durable aluminum alloy poles for a stable and easy setup. Its construction prioritizes weather resistance, ventilation, and portability, making it suitable for year-round outdoor adventures.



Image: The BISINNA 4 Season Tent in its assembled state, showcasing its compact dome design.

2. KEY FEATURES

- **4-Season Design:** Equipped with a rollable snow skirt to adapt to cold, snowy, or warmer conditions.
- **Waterproof Material:** Constructed from 210T tear-resistant polyester with a PU3000mm waterproof coating for excellent rain and UV protection.
- **Spacious Interior:** Dimensions of 82.6"L x 59"W x 43.3"H provide ample space for two adults and camping gear.
- **Lightweight & Portable:** Weighs approximately 6.4 lbs (2.9 kg) with a packed size of 18" x 7" x 7", designed for easy transport in a backpack.
- **Optimal Ventilation:** Features a double layer of mesh and fabric, along with two doors and two windows, to ensure excellent air circulation and reduce condensation.
- **Easy Setup:** Freestanding design with two aluminum poles and hooks allows for quick and straightforward assembly by one person.

- **Integrated Storage:** Includes internal storage pockets for organizing small items.
- **Lamp Hook:** An internal hook is provided for hanging a camping lamp.
- **Durable Zippers:** Equipped with SBS two-way zippers for smooth operation.
- **Adjustable Corner Anchors:** For secure pitching and tensioning.
- **Large Vestibule:** Offers additional space for gear storage or sheltered entry/exit.



Lamps Hook



Adjustable Corner Anchors



SBS Two-ways Zipper



Ventilation Windows



Storage Pocket




Roll-up Buckles



Image: Close-up view of tent features such as the lamp hook, adjustable corner anchors, SBS two-way zippers, ventilation windows, internal storage pocket, and roll-up buckles.

3. PACKAGE CONTENTS

Before setting up your tent, ensure all components are present:

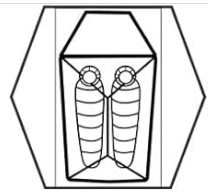

Accessories




Carry bag



Outer Tent *1



Inner Tent * 1

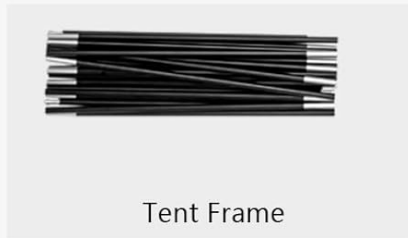

Tent Frame



Tent Peg * 13



Guy line * 4

Image: All components of the BISINNA tent package, including the carry bag, outer tent, inner tent, tent frame poles, 13 tent pegs, and 4 guy lines.

- Inner Tent (x1)
- Outer Tent (Rainfly) (x1)
- Tent Frame Poles (x2, aluminum alloy)
- Tent Pegs (x13)
- Guy Lines (x4)
- Carry Bag (x1)

4. SETUP INSTRUCTIONS

Follow these steps for a quick and easy tent setup:

1. **Unpack:** Lay out the inner tent on a flat, clear surface.
2. **Assemble Poles:** Connect the aluminum alloy tent poles.

3. **Insert Poles:** Thread the poles through the sleeves on the inner tent.
4. **Secure Inner Tent:** Attach the inner tent to the poles using the clips. This creates the freestanding structure.
5. **Drape Rainfly:** Place the outer tent (rainfly) over the inner tent, ensuring the doors align.
6. **Attach Rainfly:** Secure the rainfly to the inner tent's corners and poles using the buckles and straps.
7. **Stake Down:** Use the tent pegs to secure the tent corners and guy lines to the ground for stability, especially in windy conditions.

Your browser does not support the video tag.

Video: A demonstration of the tent setup process, highlighting its simplicity and ease of assembly for a single person.

5. OPERATING INSTRUCTIONS

5.1 4-Season Adaptability

Mesh door and snow skirt make it a 4 season tent



Roll-up snow skrit



Open the mesh



Drop the snow skirt



Close the mesh

Image: Visual guide demonstrating the tent's adaptability for different seasons by rolling up the snow skirt and opening the mesh for warm

weather, or dropping the snow skirt and closing the mesh for cold weather.

- **Cold/Snowy Weather:** Ensure the snow skirt is fully extended and lies flat against the ground. This helps to prevent snow and cold air from entering the tent, keeping the interior dry and warm. Close the fabric zippered doors for maximum insulation.
- **Warm Weather:** Roll up the snow skirt and secure it using the integrated buckles. Open the mesh zippered doors and windows to maximize airflow and ventilation, reducing internal heat and condensation.

5.2 Ventilation

The tent features a double-layer design with mesh and fabric doors/windows. Proper ventilation is crucial to minimize condensation inside the tent. Always ensure there is adequate airflow, especially during use. Avoid allowing the inner and outer tents to stick together, as this can lead to moisture transfer to the inner tent.

5.3 Internal Features

- **Lamp Hook:** Use the hook located at the top of the inner tent to hang a lightweight camping lamp for illumination.
- **Storage Pockets:** Utilize the internal mesh pockets to keep small personal items organized and easily accessible.

6. MAINTENANCE

6.1 Cleaning

- **Tent Fabric:** The tent fabric should be hand washed. Use a soft sponge or cloth with mild soap and lukewarm water. Avoid harsh detergents, bleach, or machine washing, as these can damage the waterproof coating and fabric integrity.
- **Poles and Pegs:** Wipe down aluminum poles and pegs with a damp cloth to remove dirt and debris. Ensure they are completely dry before storage to prevent corrosion.

6.2 Drying and Storage

- Always ensure the tent, including the inner tent and rainfly, is completely dry before packing it away. Storing a damp tent can lead to mildew growth, fabric degradation, and unpleasant odors.
- Store the tent in a cool, dry place, away from direct sunlight and extreme temperatures.

6.3 Zipper Care

- Keep zippers clean and free of dirt or sand.
- Periodically apply a zipper lubricant to ensure smooth operation and prevent sticking.

7. TROUBLESHOOTING

7.1 Condensation Inside Tent

- **Issue:** Moisture buildup on the inside of the tent fabric.
- **Solution:** Increase ventilation by opening mesh doors or windows. Ensure the inner and outer tents are not touching. Choose a campsite with good airflow if possible.

7.2 Zippers Sticking

- **Issue:** Zippers are difficult to open or close.
- **Solution:** Clean the zipper teeth with a small brush to remove any dirt or debris. Apply a silicone-based zipper lubricant. Avoid forcing the zipper, as this can cause damage.

7.3 Tent Instability in Wind

- **Issue:** Tent feels unstable or sways excessively in windy conditions.
- **Solution:** Ensure all tent pegs are securely driven into the ground. Utilize all available guy lines and tension them properly. Orient the tent with the narrowest side facing the wind if possible.

8. SPECIFICATIONS

Feature	Detail
Brand	BISINNA
Model Number	ZL015
Occupancy	2 Person
Seasons	4 Season
Product Dimensions (L x W x H)	82.6" x 59" x 43.3" (210cm x 150cm x 110cm)
Item Weight	6.4 lbs (2.9 Kilograms)
Material	210T Polyester
Water Resistance Technology	PU3000mm
Pole Material Type	Aluminum Alloy
Number of Doors	2
Number of Windows	2
Installation Type	Free Standing
Product Care Instructions	Hand Wash

9. WARRANTY AND SUPPORT

For warranty information, product support, or any inquiries regarding your BISINNA 4 Season Tent, please refer to the contact details provided with your purchase or visit the official BISINNA website. Ensure you have your model number (ZL015) and purchase date available when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0FWB4Y26Z>

More documents and user manuals: <https://manuals.plus/>