

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Nillkin](#) /

› [Nillkin Pocket Foldable Wireless Keyboard with Touchpad Number Pad User Manual](#)

Nillkin Pocket Foldable Wireless Keyboard

Nillkin Pocket Foldable Wireless Keyboard with Touchpad Number Pad User Manual

Model: Pocket Foldable Wireless Keyboard

1. INTRODUCTION

Thank you for choosing the Nillkin Pocket Foldable Wireless Keyboard. This manual provides essential information for setting up, operating, and maintaining your new keyboard. Please read it thoroughly before use to ensure proper functionality and to maximize your user experience.

2. PACKAGE CONTENTS

Verify that all items are present in your package:

- Nillkin Pocket Foldable Wireless Keyboard
- USB-C Charging Cable
- User Manual (this document)
- Carrying Bag

3. PRODUCT OVERVIEW

The Nillkin Pocket Foldable Wireless Keyboard is designed for portability and versatility, featuring a full-size (small) layout, integrated touchpad, and numerical pad. It connects wirelessly via Bluetooth to multiple devices.

NILLKIN

CREATING NEW EXPERIENCES

Dusk Gray

Velled in the mist atop snowy peaks, it stands apart from the noise of the world, leaving only purity, tranquility, and clarity.

PANTONE
Cool Gray 1C
Dusk Gray



Image: The Nillkin Pocket Foldable Wireless Keyboard in its fully unfolded state, displaying the complete QWERTY layout alongside the integrated numerical pad and touchpad.

The keyboard features a durable organic silicone cover and magnetic folding mechanism, making it compact for travel. Its design includes dedicated function keys for media control and shortcuts, enhancing productivity across various operating systems.



Pocket-Friendly, Fold & Go! The Ultimate Travel Keyboard!

Image: The keyboard in its compact, folded state, demonstrating its portability as it is easily stored in a bag.

4. SETUP

4.1 Charging the Keyboard

Before first use, fully charge the keyboard using the provided USB-C cable. Connect the cable to the keyboard's USB-C port and a compatible power source (e.g., computer USB port, USB wall adapter). The charging indicator light will show charging status (refer to Section 5.5 for details).

4.2 Bluetooth Pairing

The keyboard supports connection to up to three devices simultaneously.

1. Ensure your device's Bluetooth is turned on.
2. On the keyboard, press **Fn + Q** (for BT1), **Fn + W** (for BT2), or **Fn + E** (for BT3) to select a Bluetooth channel.
3. Press **Fn + C** to enter pairing mode. The Bluetooth indicator light will flash.

4. On your device, search for "Cube Pocket Keyboard" in the Bluetooth settings and select it to connect.
5. Once connected, the Bluetooth indicator light will turn off.
6. To connect additional devices, repeat steps 2-5 for BT2 and BT3.

Your browser does not support the video tag.

Video: A tutorial demonstrating Bluetooth connection and switching between multiple devices on the Nillkin Pocket Foldable Wireless Keyboard.

5. OPERATING INSTRUCTIONS

5.1 Switching Between Connected Devices

After pairing with multiple devices, you can switch between them by pressing **Fn + Q** (for Device 1), **Fn + W** (for Device 2), or **Fn + E** (for Device 3).



Image: Visual guide on seamlessly switching between up to three paired devices using the designated function key combinations.

5.2 Touchpad and Numerical Pad Functionality

The numerical pad area also functions as a touchpad. To switch between touchpad mode and numerical keypad mode, press **Fn + Command**.

- In numerical keypad mode, press a multi-function key alone to input numbers.
- Press **Shift + multi-function key** for punctuation.

"Number Pad + Touchpad 2-in-1"

Seamlessly switch between numeric input mouse control and multi-finger gestures



Multi-touch Gestures: Automatically adapts to your system



Palm Rejection Technology: Disables touchpad while typing to prevent accidental touches



Image: The numerical pad area, highlighting its dual functionality as a touchpad with support for multi-touch gestures.

Combination of Touchpad & Numer Keypad



Image: A visual representation of how the touchpad and numerical keypad functions are combined into one area.

5.3 Fn Keyboard Shortcuts (Multimedia and F-keys)

The keyboard's function keys have dual purposes:

- First press **Fn + Tab**: Keys output multimedia controls (e.g., volume, play/pause).
- Second press **Fn + Tab**: Keys output standard ESC/F1-F12 functions.
- Third press **Fn + Tab**: Keys return to number mode.

5.4 Language Switching

To switch input languages:

- For iOS/Mac devices: Press **Ctrl + Space**.
- For Android devices: Press **Ctrl + Space** or **Shift + Space**.
- For Windows devices: Press **Alt + Shift**.

5.5 Checking Battery Level

To check the current battery level, press **Fn + Command**. The indicator light will flash:

- Green light flashes 3 times: 70-100% battery.
- Blue light flashes 3 times: 30-70% battery.
- Red light flashes 3 times: 0-30% battery.

During charging, the red light stays on. When fully charged, the light turns off.

6. MAINTENANCE

To ensure the longevity of your Nillkin keyboard:

- **Cleaning:** Use a soft, dry cloth to wipe the keyboard surface. For stubborn dirt, slightly dampen the cloth with water or a mild cleaning solution. Avoid excessive moisture.
- **Storage:** When not in use, fold the keyboard and store it in the provided carrying bag to protect it from dust and scratches.
- **Avoid Extremes:** Do not expose the keyboard to extreme temperatures, direct sunlight, or high humidity.
- **Liquid Spills:** The keyboard is made from organic silicone that resists spills, but it is not waterproof. In case of a spill, immediately power off the keyboard and allow it to dry completely before reuse.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Keyboard does not turn on.	Low battery.	Charge the keyboard using the USB-C cable.
Unable to pair via Bluetooth.	Bluetooth not enabled on device; keyboard not in pairing mode; device too far.	Ensure device Bluetooth is on. Press Fn + C to enter pairing mode. Move keyboard closer to the device.
Keys are not responding or typing incorrectly.	Incorrect operating system mode; low battery; connection issue.	Ensure the correct operating system mode is selected (if applicable). Recharge the keyboard. Re-pair the keyboard.
Touchpad/Numerical pad not working as expected.	Incorrect mode selected.	Press Fn + Command to toggle between touchpad and numerical pad modes.

8. SPECIFICATIONS

- **Brand:** Nillkin
- **Model:** Pocket Foldable Wireless Keyboard
- **Connectivity Technology:** Wireless (Bluetooth)
- **Compatible Devices:** iPad, most tablets (e.g., Samsung, Pixel), Laptops, PCs, Fold Mobile Phones
- **Keyboard Description:** Multi-functional, Foldable, Portable, Numeric Keypad, Trackpad, Hotkeys and Media Keys, Lightweight, Rechargeable, Silent and Quiet
- **Material:** PC Basic + Organic Silicone Cover + Magnets
- **Folding Size:** Approximately 18 x 10.8 x 1.6 cm (7.09 x 4.25 x 0.63 inches)
- **Extended Size:** Approximately 34 x 10.8 x 0.95 cm (13.39 x 4.25 x 0.37 inches)
- **Item Weight:** Approximately 0.52 lbs (0.24 kg)
- **Battery:** 1 Nonstandard Battery (included)



Image: Detailed dimensions of the keyboard in both folded and unfolded states, presented with other devices for size comparison.

9. WARRANTY AND SUPPORT

Nilkin products are manufactured to high-quality standards. For warranty information, technical support, or service inquiries, please refer to the warranty card included in your package or visit the official Nilkin website. Keep your purchase receipt as proof of purchase.