

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [CRKD](#) /

› [CRKD Gibson Les Paul Pro Edition Guitar Controller Collectors Bundle - Instruction Manual](#)

CRKD 25-GC-LPCS-MULTI-COL

CRKD Gibson Les Paul Pro Edition Guitar Controller Collectors Bundle

Model: 25-GC-LPCS-MULTI-COL

INTRODUCTION

The CRKD Gibson Les Paul Pro Edition Guitar Controller is designed for an immersive rhythm gaming experience across multiple platforms. This Collectors Bundle offers enhanced features and accessories for dedicated players. This manual provides essential information for setup, operation, maintenance, and troubleshooting to ensure optimal performance.

WHAT'S IN THE BOX

Your Collectors Bundle includes the following components:

- CRKD Gibson Les Paul Guitar Controller Body (Cherry Sunburst)
- Pro Mechanical Neck (with 5 colored fret buttons)
- Solo Mechanical Neck (with 5 additional solo frets)
- Co-branded Gibson/CRKD Guitar Backpack
- Leather Strap
- Collector Pins & Stickers
- USB-C Cable
- Wireless USB Dongle

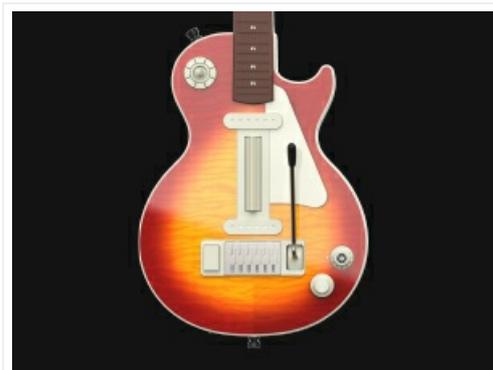


Image: The main body of the CRKD Gibson Les Paul Guitar Controller in Cherry Sunburst finish.



Image: Both the Pro Mechanical Neck with standard fret buttons and the Solo Mechanical Neck with additional solo frets.



Image: The co-branded Gibson/CRKD Guitar Backpack for transport and storage.

SETUP

1. **Attach the Neck:** Select either the Pro Mechanical Neck or the Solo Mechanical Neck. Align the neck with the body of the guitar controller and gently slide it into place until it clicks securely. Ensure a firm connection.
2. **Power On:** Locate the power button on the guitar body. Press and hold it until the indicator lights illuminate.
3. **Select Platform Mode:** Use the mode dial on the guitar body to select the appropriate platform: PC, PC handhelds, Nintendo Switch 1|2, Android devices, PlayStation 5, or PlayStation 4.
4. **Connect to Device:**
 - **Wireless (2.4 GHz):** Insert the wireless USB dongle into an available USB port on your gaming device. The controller should automatically pair.
 - **Bluetooth:** Activate Bluetooth on your device and search for 'CRKD Guitar Controller'. Select to pair.
 - **Wired:** Connect the USB-C cable from the guitar controller to your gaming device.
5. **KEYJAM Mode (PC/Xbox/PlayStation for Fortnite Festival):** For Fortnite Festival, switch the mode dial to Mode 9. This transforms the guitar controller into a keyboard and mouse, mapping fret buttons and the strum bar to keyboard controls, and the right thumbstick to mouse navigation. This offers a plug-and-play experience for song selection and gameplay.



Image: Close-up of the mode dial for selecting different platforms and KEYJAM mode.

OPERATING INSTRUCTIONS

Core Controls

- **Mechanical Frets:** Press the colored fret buttons on the neck to match on-screen notes. The mechanical frets provide precise and responsive feedback.
- **Hall Effect Strum Bar:** Use the strum bar to activate notes. The Hall effect technology ensures durability and allows for customizable actuation points. Haptic feedback provides a tactile sensation with each strum.
- **Whammy Bar:** Manipulate the whammy bar for expressive effects during gameplay.
- **Navigation Hub:** The integrated navigation hub (D-pad and thumbstick) allows for intuitive menu navigation within games.



Image: Detailed view of the mechanical fret buttons on the guitar neck.



Image: Close-up of the Hall Effect Strum Bar with haptic feedback.

Modular Design

The modular design allows you to easily swap between the Pro Mechanical Neck and the Solo Mechanical Neck. This enables customization to match your preferred playing style or game requirements. To swap, gently press the release

button on the back of the guitar body near the neck joint and slide the current neck out. Insert the desired neck until it locks into place.

CRKD CTRL Dashboard App

Download the CRKD CTRL Dashboard app to access product details, customize features, and manage your controller. The app allows you to:

- View product information and rarity ranking.
- Adjust strum bar sensitivity.
- Configure RGB lighting effects.
- Manage tilt sensor settings.
- Update firmware.

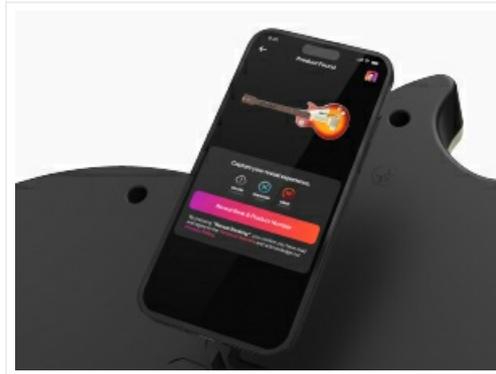


Image: Screenshot of the CRKD CTRL Dashboard app interface on a smartphone.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the surface of the guitar controller. Avoid abrasive cleaners or solvents.
- **Storage:** When not in use, store the controller in the provided Gibson/CRKD Guitar Backpack to protect it from dust and damage.
- **Battery:** The controller includes a nonstandard rechargeable battery. Charge as needed using the provided USB-C cable.

TROUBLESHOOTING

- **Connectivity Issues:** Ensure the controller is in the correct platform mode. Re-pair via Bluetooth or re-insert the USB dongle. Try a wired connection to rule out wireless interference.
- **Button/Strum Bar Unresponsiveness:** Check battery level. Ensure the neck is securely attached. Update firmware via the CRKD CTRL app.
- **Lag/Input Delay:** Ensure firmware is up to date. For PC, a wired connection or the 2.4 GHz dongle typically offers lower latency than Bluetooth.
- **RGB Lights Not Working:** Check settings in the CRKD CTRL app to ensure RGB is enabled and brightness is adjusted.

SPECIFICATIONS

Item Model Number	25-GC-LPCS-MULTI-COL
Item Weight	6.09 pounds

Package Dimensions	23.1 x 12.4 x 4.85 inches
Batteries	1 Nonstandard Battery (included)
Connectivity	2.4 GHz Wireless, Bluetooth, Wired (USB-C)
Compatibility	PC, PC handhelds, Nintendo Switch 1 2, Android devices, PlayStation 5, PlayStation 4

OFFICIAL PRODUCT VIDEO

Your browser does not support the video tag.

Video: An unboxing and first impressions video of the CRKD Cherry Sunburst Les Paul Pro Edition Guitar Controller, showcasing its features and accessories.

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included in your product packaging or visit the official CRKD website. Keep your proof of purchase for any warranty claims.