

IDIMEX Adamo 145cm

IDIMEX Adamo 145cm TV Rack Instruction Manual

Model: Adamo 145cm | Brand: IDIMEX

1. INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your IDIMEX Adamo 145cm TV Rack. Please read all instructions carefully before beginning assembly or use to ensure proper function and longevity of your product.

The IDIMEX Adamo 145cm TV Rack is a solid wood furniture piece designed for living rooms, accommodating TVs up to 65 inches. It features a sliding slatted door, a drawer with telescopic slides, and elevated feet for stability and ease of cleaning.

2. SAFETY INFORMATION

- Always follow assembly instructions carefully. Incorrect assembly can lead to instability and potential injury.
- Ensure all fasteners are securely tightened before use. Periodically check and re-tighten as necessary.
- Do not exceed the recommended weight capacity for the top surface (for TVs up to 65 inches) or internal compartments.
- Keep small parts and assembly hardware out of reach of children.
- Do not expose the furniture to direct sunlight or rain, as this can cause damage to the wood.
- Avoid placing hot items directly on the surface without protection.
- When moving the rack, lift it rather than dragging to prevent damage to the feet and structure.

3. PACKAGE CONTENTS

Before starting assembly, verify that all components are present and undamaged. If any parts are missing or damaged, please contact customer support.

- IDIMEX Adamo 145cm TV Rack components (wood panels, legs, etc.)
- Assembly hardware (Minifix, dowels, screws)
- Installation fittings

- Assembly Manual (this document)

4. SPECIFICATIONS

Feature	Detail
Product Dimensions (L x W x H)	145 cm x 40 cm x 52 cm
Drawer Dimensions (H x L x D)	13 cm x 69.7 cm x 30 cm
Product Weight	23 kg
Material (Structure)	Solid Pine Wood (Finger Joint)
Material (Drawer Bottom)	MDP
Finish	Matte
Number of Doors	1 (sliding, slatted)
Number of Drawers	1 (with telescopic slides and push-to-open system)
Number of Niches	1
TV Size Capacity	Up to 65 inches
Assembly Required	Yes
Assembly System	Minifix / Dowels / Screws
Assembly Complexity	Medium
Color	Freijó

***Ideal para TV de até 60 polegadas**



Figure 4.1: Detailed dimensions of the TV rack, including overall measurements and internal compartment sizes for the niche and drawer.

5. SETUP AND ASSEMBLY

Assembly of the IDIMEX Adamo 145cm TV Rack is required and is rated as medium complexity. It is recommended to have two people for assembly. Please ensure you have adequate space and the necessary tools (e.g., screwdriver, hammer) before starting.

5.1 Pre-Assembly Checklist

- Unpack all components and lay them out on a clean, soft surface to prevent scratches.
- Verify all parts against the included parts list (if provided separately from this manual).
- Ensure all hardware (Minifix, dowels, screws) is present.

5.2 Assembly Steps

1. **Attach the Legs:** Secure the four solid pine wood legs to the base structure using the provided screws and dowels. Ensure they are firmly attached and stable.
2. **Assemble the Main Frame:** Connect the side panels, top, and bottom panels using Minifix connectors and dowels. Follow the numerical sequence indicated in the separate assembly diagram (if applicable).
3. **Install Drawer Slides:** Attach the telescopic drawer slides to the designated internal sections of the rack and to the drawer box. Ensure they are aligned for smooth operation.
4. **Assemble the Drawer:** Construct the drawer box using the MDP bottom and solid wood sides. Insert the assembled drawer into the slides. The push-to-open mechanism should engage smoothly.

5. **Install the Sliding Slatted Door:** Carefully place the slatted door into its tracks. Test its sliding motion to ensure it moves freely.
6. **Final Checks:** Once assembled, gently shake the rack to ensure stability. Re-tighten any loose fasteners.

Important Note:

- Assembly and disassembly services are not included with the product and are the customer's responsibility.
- The manufacturer is not responsible for costs associated with carrying the product up stairs/elevators or using hoists in apartments during delivery.
- Upon receipt, inspect the packaging for any damage. Do not sign the delivery receipt if damage is observed.



Figure 5.1: Detail of the solid wood legs and base structure.

6. OPERATING AND USAGE

6.1 Placing Your TV

The top surface of the Adamo 145cm TV Rack is designed to accommodate televisions up to 65 inches. Ensure the TV's base fits securely within the rack's dimensions and that its weight does not exceed the rack's capacity.

6.2 Using the Sliding Slatted Door

The slatted door slides horizontally to reveal or conceal the internal compartments. Gently push the door to slide it along its track. Avoid forcing the door if it encounters resistance.



Figure 6.1: Detail of the sliding slatted door.

6.3 Using the Drawer

The drawer features a push-to-open system and telescopic slides for smooth, full extension. To open, gently push the drawer front inward until the mechanism releases, then pull it out. To close, push the drawer back until it clicks into place.



Figure 6.2: Open drawer with telescopic slides.

6.4 Cable Management

The rack includes designated spaces for cable passage to help organize and conceal wires from electronic devices.



Figure 6.3: Cable management opening.

7. MAINTENANCE AND CARE

7.1 Cleaning

To clean the IDIMEX Adamo TV Rack, use a lightly damp cloth. Avoid using abrasive cleaners, harsh chemicals, or excessive moisture, as these can damage the wood finish.

7.2 General Care

- Periodically check all screws and fasteners and tighten them if necessary to maintain stability.
- Protect the surface from spills and scratches by using coasters or protective mats.
- Avoid placing the rack in areas with extreme temperature fluctuations or high humidity.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Rack is wobbly or unstable.	Loose fasteners or uneven floor.	Check and tighten all screws and bolts. Ensure the rack is on a level surface. Use furniture pads if needed.
Sliding door sticks or does not move smoothly.	Debris in the track or misalignment.	Clean the door tracks. Ensure the door is properly seated in its grooves.
Drawer does not open or close smoothly.	Misaligned slides or obstruction.	Check that the telescopic slides are correctly installed and aligned. Remove any obstructions from the drawer path. Ensure the push-to-open mechanism is functioning.
Damage to wood surface.	Impact, moisture, or harsh cleaning agents.	For minor scratches, wood repair kits may be used. Avoid further exposure to damaging elements.

9. WARRANTY INFORMATION

The IDIMEX Adamo 145cm TV Rack comes with a **12-month manufacturer's warranty** against manufacturing defects. This warranty covers defects in materials and workmanship under normal use. The warranty does not cover:

- Damage resulting from improper assembly or installation.
- Damage caused by misuse, abuse, neglect, or accidents.
- Normal wear and tear.
- Damage due to exposure to extreme environmental conditions (e.g., direct sunlight, rain, excessive humidity).
- Alterations or modifications made to the product.

To make a warranty claim, please retain your proof of purchase and contact customer support.

10. CUSTOMER SUPPORT

For any questions, assistance with assembly, or to report missing/damaged parts, please contact IDIMEX customer support.

You can visit the official IDIMEX store on Amazon for more information and contact options:

IDIMEX do Brasil Amazon Store

Please have your product model number (Adamo 145cm) and proof of purchase ready when contacting support.

11. PRODUCT VIDEOS

No relevant official product videos from the seller were found in the provided data to embed in this manual.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question