

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [LivePure](#) /

› [LivePure LP2200 Turbine Vortex Auto-Duster Ceramic Heater Instruction Manual](#)

## LivePure LP2200HTR

# LivePure LP2200 Turbine Vortex Auto-Duster Ceramic Heater

Model: LP2200HTR | Brand: LivePure

## INTRODUCTION

Thank you for choosing the LivePure LP2200 Turbine Vortex Auto-Duster Ceramic Heater. This manual provides essential information for the safe and efficient operation of your new space heater. Please read all instructions carefully before use and retain this manual for future reference.



Image: The LivePure LP2200 Turbine Vortex Auto-Duster Ceramic Heater, illustrating its compact dimensions (14.44 inches high, 7 inches wide) and efficient warm air distribution.

## SAFETY INFORMATION

Your safety is paramount. Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- **Read All Instructions:** Before operating the heater, read all instructions carefully.
- **Placement:** Always place the heater on a firm, level surface. Avoid placing it on soft surfaces like beds or rugs where openings may become blocked.
- **Clearance:** Maintain at least 3 feet (0.9 meters) of clearance from combustible materials such as furniture, pillows, bedding, papers, clothes, and curtains from the front, sides, and rear of the heater.
- **Power Cord:** Do not run the power cord under carpeting or cover it with throw rugs, runners, or similar coverings. Arrange the cord away from traffic areas where it will not be tripped over.
- **Overheat Protection:** The heater is equipped with an automatic overheat safety shut-off. If the heater overheats, it will automatically turn off. Unplug the heater, let it cool for 30 minutes, then plug it back in.
- **Tip-Over Protection:** For added safety, the heater features a tip-over switch that automatically shuts off the unit if it is accidentally knocked over or placed on an uneven surface. Ensure the heater is always on a stable, flat surface.
- **Supervision:** Close supervision is necessary when any heater is used by or near children or invalids, and whenever the heater is left operating and unattended.
- **Indoor Use Only:** This heater is intended for indoor use only. Do not use outdoors.

## PRODUCT OVERVIEW

### Key Features

- **Compact Footprint:** Designed to fit anywhere in your home or office. Its 60° oscillation spreads warm air across a wide area, delivering consistent, even heat wherever you need it.
- **Adjustable Digital Thermostat:** Easily change the temperature between 60-99°F. Delivering clean warm air at your desired temperature.
- **Quiet Operation:** The Vortex Auto-Duster Heater runs smoothly without a loud fan, ideal for work or sleep.
- **Filtration:** The Auto-Duster pre-filter captures larger particles such as dust, pet hair, and dander, providing cleaner air.
- **Safety Features:** Includes tip-over shut-off and overheat protection.



Image: The LivePure LP2200 Heater showcasing its quiet operation, auto-off overheat protection, and soft-touch control panel for user convenience.

### Control Panel Overview



Image: A detailed diagram of the LivePure LP2200 Heater's control panel, indicating the Temperature Display, Temperature Settings, Rotation Function, Safety Tip Over Switch, Timer (Range 1-12 hours), and Power On/Off buttons.

## SETUP

1. **Unpack:** Carefully remove the heater from its packaging. Retain packaging for storage.
2. **Placement:** Place the heater on a firm, level surface, ensuring it is at least 3 feet (0.9 meters) away from any walls or combustible materials.
3. **Power Connection:** Plug the power cord directly into a 120V AC, 60Hz electrical outlet. Do not use extension cords or power strips.

## OPERATING INSTRUCTIONS

### Power On/Off

- Press the **Power On/Off** button on the control panel or remote control to turn the heater on or off.

### Adjusting Temperature (Digital Thermostat)

- Use the **+** and **-** buttons on the control panel or remote to set your desired temperature between 60°F and 99°F. The heater will maintain this temperature.

### Heating Modes

- Press the **Mode** button (often represented by three horizontal lines or 'M') to cycle through different heating modes (e.g., High, Low, Eco). The display will show 'H1', 'H2', 'H3' or 'ECO' depending on the mode.

### Oscillation

- Press the **Rotation Function** button (often represented by a curved arrow) to activate or deactivate the 60° oscillation feature, distributing warm air more widely.

### Timer Function

- Press the **Timer** button (often represented by a clock icon) to set an automatic shut-off time from 1 to 12 hours. Each press increases the timer by one hour.

### Auto-Duster Filter

Keeps the air in your home clean while heating by filtering out large particles such as dust, pet hair, and dander



Image: The LivePure LP2200 Heater positioned in a living space, emphasizing its 12-hour standby timer and adjustable temperature range of 60-99°F.

## MAINTENANCE

### Cleaning the Auto-Duster Pre-Filter

1. **Unplug:** Always unplug the heater from the power outlet before cleaning.
2. **Access Filter:** Locate the Auto-Duster pre-filter on the back or side of the unit. Gently remove the filter cover.
3. **Clean Filter:** Use a vacuum cleaner with a brush attachment to remove accumulated dust, pet hair, and dander from the filter. Do not wash the filter with water.
4. **Reinstall:** Once clean, reinsert the filter and secure the cover.



Image: The LivePure LP2200 Heater with an emphasis on its Auto-Duster filter, designed to capture large particles like dust, pet hair, and dander for cleaner air.

## TROUBLESHOOTING

### • Heater Not Turning On:

- Ensure the power cord is securely plugged into a working electrical outlet.
- Check if the tip-over switch has been activated (heater is on an uneven surface or has been knocked over). Place the heater on a flat, stable surface.

- Verify that the overheat protection has not been triggered. Unplug the heater, let it cool for 30 minutes, then plug it back in.

- **Heater Not Emitting Heat:**

- Confirm that a heating mode (e.g., High, Low) is selected, not just the fan-only mode.
- Increase the set temperature using the+ button to a level higher than the current room temperature.

- **Unusual Noises or Odors:**

- A slight odor or sound may occur during initial use as residual manufacturing oils burn off. This is normal and should dissipate quickly.
- If unusual noises or strong odors persist, immediately unplug the heater and contact customer support.

## SPECIFICATIONS

Attribute	Detail
Brand	LivePure
Model Number	LP2200HTR
Special Feature	Oscillating
Color	Pearl White
Form Factor	Tower
Indoor/Outdoor Usage	Indoor
Product Dimensions	6.63"D x 6.63"W x 15.38"H
Mounting Type	Tabletop Mount
Item Weight	4.47 Pounds
UPC	810067456326
Manufacturer	LivePure

## WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the warranty card included in your product packaging or visit the official LivePure website. You may also contact LivePure customer service directly for assistance with your LP2200HTR heater.