

Waring WRC60

Waring Commercial WRC60 60-Cup Rice Cooker Instruction Manual

Model: **WRC60** | Brand: **Waring Commercial**

1. INTRODUCTION

Thank you for choosing the Waring Commercial WRC60 60-Cup Rice Cooker. This appliance is designed for commercial use, offering versatility to prepare various dishes beyond just rice. Its multifunction capabilities allow for cooking porridge, oatmeal, soup, or broth with ease. The integrated Countdown Timer ensures precise results, while the Keep Warm function maintains food at serving temperature. Constructed with insulated double-walled stainless steel, it features a removable inner pot and a hinged lid for optimal performance and convenience.

This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your WRC60 rice cooker. Please read all instructions carefully before use.

THE WRC60 IS BUILT FOR...

**WHITE, BROWN &
JASMINE RICE**

**PORRIDGE,
GRITS & OATMEAL**

SOUP & BROTH

HARD-BOILED EGGS

MAC & CHEESE



Image 1: The Waring Commercial WRC60 Rice Cooker is designed for cooking white, brown, and jasmine rice, as well as porridge, grits, oatmeal, soup, broth, hard-boiled eggs, and mac & cheese.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury, including the following:

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse the cord, plug, or heating unit in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.

- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to “off,” then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- This appliance is for commercial use only.

3. INCLUDED COMPONENTS

The Waring Commercial WRC60 Rice Cooker comes with the following components:

- WRC60 Rice Cooker Unit
- Removable Heavy-Duty, PFAS-Free Non-Stick Ceramic-Coated Inner Pot
- Silicone Anti-Scorch Pad
- Rice Paddle
- Measuring Cup (1 standard rice cup = $\frac{3}{4}$ US cup or 180 mL)
- Instruction Manual (this document)



INCLUDED WITH WRC60

Image 2: Key accessories included with the WRC60: a silicone anti-scorch pad, a rice paddle, the removable inner pot, and a measuring cup.

4. SETUP AND FIRST USE

4.1 Unpacking

1. Carefully remove all components from the packaging.
2. Remove any protective films or packaging materials from the appliance.
3. Retain the packaging for future storage or shipping.

4.2 Initial Cleaning

1. Wash the removable inner pot, rice paddle, silicone anti-scorch pad, and measuring cup with warm, soapy water. Rinse thoroughly and dry completely.
2. Wipe the exterior of the rice cooker unit with a damp cloth. Do not immerse the main unit in water.

4.3 Placement

1. Place the rice cooker on a stable, level, heat-resistant surface.
2. Ensure there is adequate ventilation around the unit. Do not place it directly against a wall or under

cabinets.

3. Plug the power cord into a grounded electrical outlet. Ensure the voltage matches the appliance's requirements (120 Volts).

5. OPERATING INSTRUCTIONS

5.1 General Operation

1. Ensure the removable inner pot is clean and properly seated inside the main unit.
2. Add desired ingredients (e.g., rice and water) to the inner pot. Refer to specific recipes or guidelines for appropriate ratios.
3. Close the hinged lid securely.
4. Plug the unit into a power outlet. The digital display will illuminate.

5.2 Using the Touchpad Digital Controls

The WRC60 features easy-to-use touchpad controls for various cooking functions.



FEATURES

Image 3: The WRC60 features an intuitive touchpad digital control panel for selecting cooking modes and setting the timer.

- **POWER Button:** Press to turn the unit on or off.
- **TIMER Button:** Use to set a specific cooking duration. The digital display will show the countdown.
- **+/- Buttons:** Adjust the time for the timer function.
- **RICE COOK Button:** Selects the dedicated rice cooking mode. Suitable for white, brown, and jasmine rice.
- **PORRIDGE/OATMEAL Button:** Selects the mode optimized for cooking porridge and oatmeal.
- **SOUP/BROTH Button:** Selects the mode for preparing soups and broths.
- **KEEP WARM Function:** After cooking is complete, the unit will automatically switch to Keep Warm mode to maintain food temperature. This function can also be manually selected.

5.3 Cooking Rice

1. Measure the desired amount of rice using the provided measuring cup. Rinse rice if necessary.
2. Place the rinsed rice into the inner pot.
3. Add the appropriate amount of water. A common ratio for white rice is 1:1.5 (1 part rice to 1.5 parts water), but this can vary based on rice type and desired consistency. Consult specific rice package instructions.
4. Place the silicone anti-scorch pad on top of the rice to help prevent scorching.
5. Close the lid and press the **RICE COOK** button. The unit will begin cooking and the countdown timer will activate.
6. Once cooking is complete, the unit will automatically switch to Keep Warm mode. Fluff the rice with the rice paddle before serving.

5.4 Cooking Porridge, Oatmeal, Soup, or Broth

1. Add ingredients for your chosen dish to the inner pot.
2. Close the lid.
3. Select either the **PORRIDGE/OATMEAL** or **SOUP/BROTH** button, depending on your recipe.
4. If your recipe requires a specific cooking time, use the **TIMER** and **+/-** buttons to set it.
5. Monitor cooking progress as needed. The unit will switch to Keep Warm when the cycle is complete.

6. CLEANING AND MAINTENANCE

Proper cleaning and maintenance ensure the longevity and optimal performance of your WRC60 Rice Cooker.

6.1 Daily Cleaning

1. Always unplug the unit and allow it to cool completely before cleaning.
2. Remove the inner pot, silicone anti-scorch pad, rice paddle, and measuring cup. Wash these components by hand with warm, soapy water. Rinse thoroughly and dry completely. These parts are not dishwasher safe.
3. Wipe the exterior of the main unit, including the lid and control panel, with a damp cloth. For stubborn stains, use a mild, non-abrasive cleaner.
4. Ensure no water or liquid enters the electrical components.

6.2 Storage

Store the rice cooker in a clean, dry place when not in use. Ensure all components are dry before storage.

7. TROUBLESHOOTING

If you encounter issues with your WRC60 Rice Cooker, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Unit does not power on.	Not plugged in; power outlet malfunction; damaged cord.	Ensure unit is securely plugged into a working outlet. Check circuit breaker. Inspect power cord for damage. If damaged, contact service.
Rice is undercooked or too hard.	Insufficient water; incorrect rice-to-water ratio; lid not sealed properly.	Add more water next time. Ensure lid is closed tightly during cooking. Refer to rice package instructions for correct ratios.
Rice is overcooked or mushy.	Too much water; incorrect rice-to-water ratio.	Reduce water amount next time. Refer to rice package instructions for correct ratios.
Rice sticks to the bottom of the pot.	Not enough water; silicone anti-scorch pad not used; inner pot not clean.	Ensure proper water ratio. Always use the silicone anti-scorch pad. Ensure inner pot is clean and non-stick coating is intact.
Keep Warm function not working.	Unit malfunction.	Contact customer support for assistance.

8. SPECIFICATIONS

Detailed specifications for the Waring Commercial WRC60 Rice Cooker:

- **Model:** WRC60
- **Brand:** Waring Commercial
- **Capacity:** 60 Cups (cooked rice) / 30 Cups (uncooked rice)
- **Product Dimensions (D x W x H):** 21.5" x 17.25" x 13.75" (closed)
- **Height (Lid Fully Open):** 31.5"
- **Item Weight:** 24.7 Pounds
- **Power Source:** Corded Electric
- **Voltage:** 120 Volts
- **Wattage:** 1800 Watts
- **Material:** Stainless Steel (housing and lid)
- **Inner Pot Material:** Heavy-duty, PFAS-free non-stick ceramic-coated
- **Product Care Instructions:** Hand Wash (for removable parts)
- **Special Features:** Automatic Keep Warm, Non-Stick Inner Pot, One-Touch Operation, Programmable Countdown Timer
- **UPC:** 040072107764



DIMENSIONS

WIDTH 17.25" HEIGHT 12.75" (31.5" open) DEPTH 21.5"

Image 4: Detailed dimensions of the WRC60 rice cooker, illustrating its compact footprint and height with the lid open.

9. WARRANTY AND SUPPORT

9.1 Warranty Information

Waring Commercial products are manufactured to the highest standards and are warranted to be free from defects in material and workmanship for a specified period from the date of purchase. Please refer to the warranty card included with your product or visit the official Waring Commercial website for detailed warranty terms and conditions.

9.2 Customer Support

For technical assistance, service, or replacement parts, please contact Waring Commercial Customer Service. Have your product model number (WRC60) and purchase date available when contacting support.

- **Website:** www.waringcommercialproducts.com
- **Phone:** Refer to the official website for regional contact numbers.

