

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› **INTERGREAT** /

› **INTERGREAT 5-7 Gun Safe Instruction Manual, Model 20251016**

INTERGREAT 20251016

INTERGREAT 5-7 Gun Safe Instruction Manual

Model: 20251016

Brand: INTERGREAT

1. INTRODUCTION

This manual provides essential instructions for the safe and proper assembly, setup, operation, and maintenance of your INTERGREAT 5-7 Gun Safe, Model 20251016. Please read this manual thoroughly before using the product and retain it for future reference.

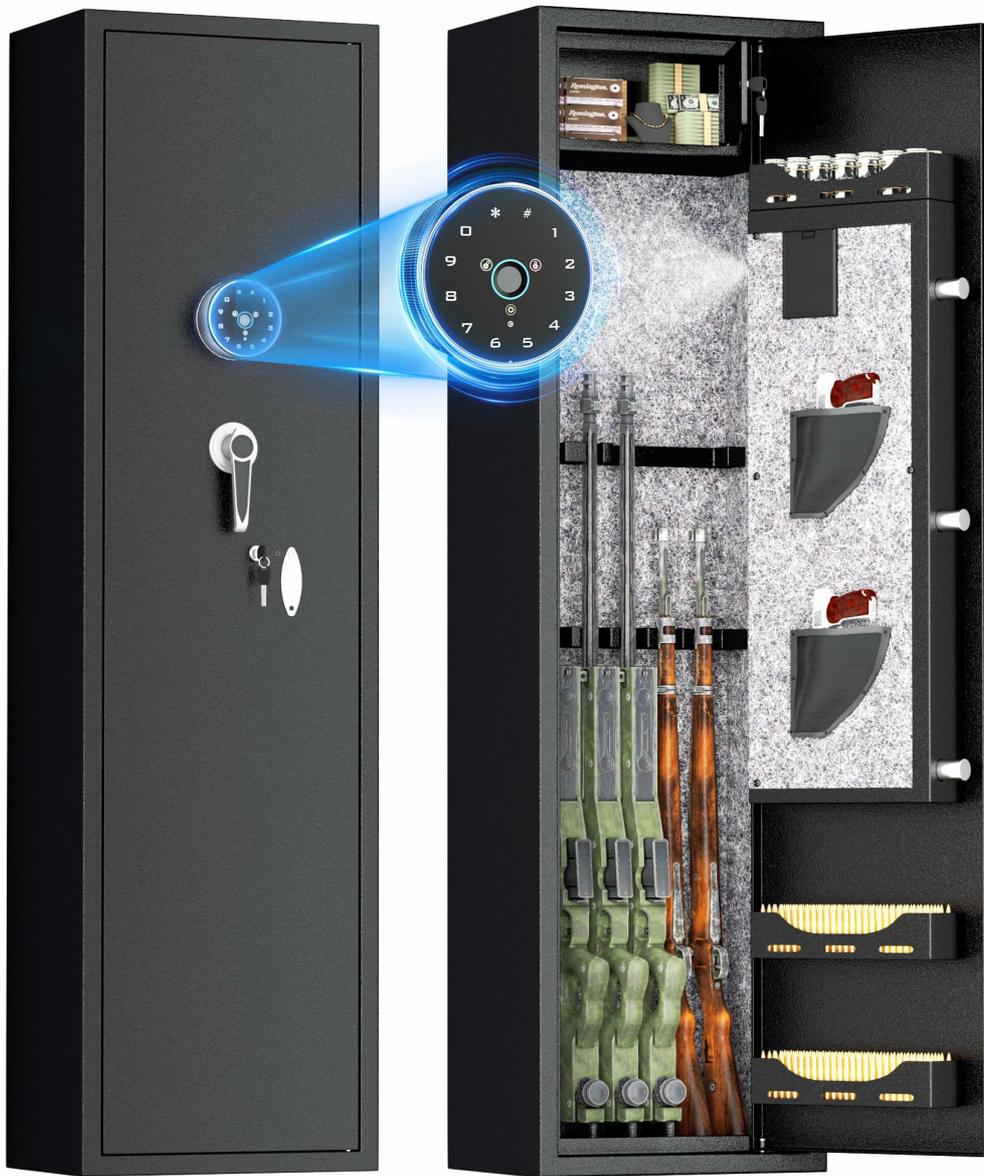


Figure 1: INTERGREAT 5-7 Gun Safe

2. SAFETY INFORMATION

- Always store firearms unloaded and locked.
- Keep keys and access codes in a secure location, away from the safe and unauthorized individuals.
- Ensure the safe is securely mounted to prevent tipping.
- Do not store emergency keys inside the safe.
- Keep children away from the safe and its contents.
- The safe is constructed from cold-rolled steel for durability and anti-prying resistance.

3. PACKAGE CONTENTS

Verify that all components listed below are present before beginning assembly.



Figure 2: Package Contents

- Door Frame (x1)
- Side Panel (x2)
- Back Panel (x1)
- Top Panel (x1)
- Bottom Panel (x1)
- Removable Shelf (x1)
- Back Mesh Panel (x1)
- Gun Bracket (x2)
- Back Mesh Gun Bracket (x2)
- Gun Rack (x4)
- Self-Tapping Screws (quantity as needed)
- Screwdriver (x1)
- Gloves (x1 pair)
- External Power Box (x1)

- Shelf Buckle (x4)
- Key (x2)
- Expansion Bolt (x4)

4. ASSEMBLY INSTRUCTIONS

Assembly requires at least two people. Follow the steps carefully.

4.1. Video Guide for Assembly

Your browser does not support the video tag.

Video 1: Gun Safe Assembly Guide

This video demonstrates the step-by-step assembly process for the gun safe, including connecting panels and installing internal components.

Your browser does not support the video tag.

Video 2: Gun Safe for Home Assembly Video

An additional assembly video providing visual guidance for setting up the gun safe.

4.2. Step-by-Step Assembly

1. **Unpack Components:** Carefully remove all parts from the packaging. Lay them out on a clean, flat surface.
2. **Assemble Base Frame:** Connect the bottom panel to the side panels using the provided self-tapping screws. Ensure all connections are secure.
3. **Attach Back Panel:** Secure the back panel to the assembled side and bottom panels.
4. **Install Top Panel:** Attach the top panel to complete the main cabinet structure.
5. **Insert Back Mesh Panel:** Place the back mesh panel inside the cabinet. Secure it with screws if necessary.
6. **Install Shelf Buckles:** Insert the shelf buckles into the desired slots for the removable shelf.
7. **Place Removable Shelf:** Position the removable shelf onto the installed shelf buckles.
8. **Attach Gun Brackets and Racks:** Install the gun brackets and gun racks to the interior panels as desired for firearm storage.
9. **Attach Door:** Carefully align the door frame with the main cabinet structure and secure it.

5. SETUP AND OPERATION

5.1. First-Time Opening and Battery Installation

1. **Open with Emergency Key:** For the first opening, use one of the provided emergency keys to unlock the safe. Turn the handle to open the door.

2. **Install Batteries:** Locate the battery compartment on the inside of the door. Insert 4 AA alkaline batteries (not included) into the compartment. Ensure correct polarity.

5.2. Setting Passcode

1. With the door open, press the red 'Setting Button' located on the inside of the door. The keypad will illuminate.
2. Enter your desired new passcode (3-8 digits).
3. Press '#' to confirm.
4. Re-enter the new passcode and press '#' again to finalize. A long beep indicates successful setting.

5.3. Setting Fingerprint

1. With the door open, press the red 'Setting Button'. The fingerprint scanner will activate.
2. Place your finger on the scanner. Lift and place your finger multiple times (typically 5 times) until you hear a confirmation beep.
3. You can enroll up to 30 different fingerprints.

5.4. Unlocking the Safe



Figure 3: Three Ways to Open the Safe

- **Fingerprint:** Place your enrolled finger on the scanner. The safe will unlock.
- **Passcode:** Enter your 3-8 digit passcode and press '#'. The safe will unlock.
- **Mechanical Key:** Insert the emergency key into the keyhole and turn.

5.5. Dual Security Mode (Fingerprint + Passcode)

To enhance security, you can require both a fingerprint and a passcode for unlocking.

1. Locate the internal switch (often labeled 'Normal/Secure') inside the door.
2. Flip the switch from 'Normal' to 'Secure'.
3. In this mode, you will need to provide an enrolled fingerprint followed by the correct passcode to unlock the safe.

5.6. Silent Mode



Figure 4: Dual Alarm and Mute Function

- **Activate Silent Mode:** Press and hold the '*' button on the keypad for approximately 3 seconds. The safe will enter silent mode, disabling audible feedback.
- **Deactivate Silent Mode:** Press and hold the '*' button again for approximately 3 seconds. The safe

will exit silent mode.

5.7. Alarm System

- **Vibration Alarm:** Press '9' on the keypad to activate the vibration alarm mode. If the safe is shaken or hit hard, it will trigger an immediate alarm.
- **Incorrect Entry Alarm:** If an incorrect passcode is entered 3 times consecutively, or an incorrect fingerprint is scanned 5 times consecutively, the anti-theft system will activate, and the safe will emit an alarm for 48 seconds.
- **Stopping the Alarm:** Enter the correct fingerprint or passcode to stop the alarm.

5.8. Emergency Power Access

- If the internal batteries run out, connect the external power box (with a 9V battery installed) to the emergency power port on the keypad.
- Enter your passcode or fingerprint to unlock the safe. Replace the internal batteries immediately.

6. STORAGE CONFIGURATION



Figure 5: Interior Storage Layout

- **Removable Shelf:** The safe includes one removable shelf, allowing you to customize the interior space.
- **Adjustable Gun Racks:** Two long gun racks can be adjusted up and down to accommodate long guns up to 54.13 inches, as well as shorter firearms.
- **Door Storage:** The inside of the door features two pistol pockets and three containers for ammunition or other small accessories.
- **Protective Lining:** The interior is lined with soft material to protect firearms from scratches.

7. MOUNTING INSTRUCTIONS

For maximum security, it is highly recommended to securely mount your gun safe to a wall or floor.

- **Location:** Choose a discreet and secure location, preferably against a wall stud or solid structure.
- **Drilling:** Use the pre-drilled holes on the back and bottom of the safe as templates. Drill pilot holes into the wall/floor.

- **Secure with Bolts:** Use the provided expansion bolts to firmly secure the safe to the wall or floor. Ensure all bolts are tightened to prevent movement.

8. MAINTENANCE

- **Battery Replacement:** Replace the 4 AA alkaline batteries every 6-12 months, or immediately if the low battery indicator appears.
- **Cleaning:** Clean the exterior of the safe with a soft, damp cloth. Avoid abrasive cleaners.
- **Lock Mechanism:** Do not lubricate the lock mechanism. If it becomes stiff, contact customer support.
- **Mounting Check:** Periodically check the mounting bolts to ensure they remain tight and secure.

9. TROUBLESHOOTING

- **Safe Not Opening:**
 - Check batteries and replace if necessary.
 - Use the external power box if batteries are completely drained.
 - Use the mechanical emergency key.
- **Alarm Triggered:**
 - Enter the correct fingerprint or passcode to disarm the alarm.
 - If the vibration alarm is too sensitive, ensure the safe is on a stable surface and securely mounted.
- **Keypad Not Responding:**
 - Ensure batteries are correctly installed and have sufficient charge.
 - If unresponsive, use the external power box.

10. SPECIFICATIONS

Feature	Description
Brand	INTERGREAT
Model Number	20251016
Color	Black
Material	Alloy Steel, Metal
Product Dimensions (H x W x D)	55.7" x 13" x 13.8"

Item Weight	90 pounds
Capacity	5-7 Guns
Lock Type	Fingerprint, Digital Keypad, Mechanical Key
Special Features	Alarm System, Anti-Theft, Removable Shelf, Scratch Resistant
Mounting Type	Wall Mount, Floor Mount
Batteries	4x AA Alkaline Batteries (not included)

11. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your purchase or contact INTERGREAT directly through their official channels.