

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [INTERGREAT](#) /
- › [INTERGREAT Purple Gun Safe Instruction Manual \(Model 20251019\)](#)

INTERGREAT 20251019

INTERGREAT Purple Gun Safe Instruction Manual

Model: 20251019

Brand: INTERGREAT

1. INTRODUCTION

This instruction manual provides essential information for the safe and effective use of your INTERGREAT Purple Gun Safe, Model 20251019. Please read this manual thoroughly before assembly and operation to ensure proper installation and functionality. Keep this manual for future reference.



Image 1.1: The INTERGREAT Purple Gun Safe, Model 20251019, shown in a home environment.

2. SAFETY INFORMATION

WARNING: Always store firearms unloaded and locked. Keep ammunition stored separately and securely. Ensure keys and access codes are kept confidential and out of reach of unauthorized individuals, especially children.

- This safe is designed to deter theft and restrict access to firearms. It is not fireproof or waterproof.
- Mount the safe securely to a wall or floor using the provided anchor bolts to prevent tipping or removal.
- Do not store the emergency keys inside the safe. Keep them in a secure, separate location.
- Regularly check the locking mechanism and batteries to ensure proper function.

3. PACKAGE CONTENTS

Verify that all components are present before beginning assembly:

- 1 x Rifle Gun Safe Cabinet


- 2 x Backup Keys
- 4 x Anchor Bolts for Mounting (Floor and Wall)
- 1 x Emergency Battery Pack
- 1 x Instruction Manual (This document)
- Other Screw Accessories
- 1 x Gray Carpet (for interior base)

4. SPECIFICATIONS


Feature	Description
Model Number	20251019
Dimensions (H x W x D)	55.2" x 21" x 15.2"
Material	Alloy Steel, Metal
Capacity	8-12 Guns
Item Weight	90 Pounds
Lock Type	Digital Keypad, Key Lock
Special Features	Alarm System, Anti-Theft, Removable Shelf, Scratch Resistant
Number of Shelves	3 (Adjustable)
Number of Compartments	2

Heavy Duty Gun Safe

Sturdy and Pry-resistant

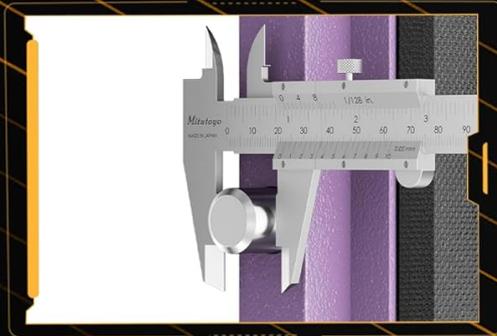

20 MM

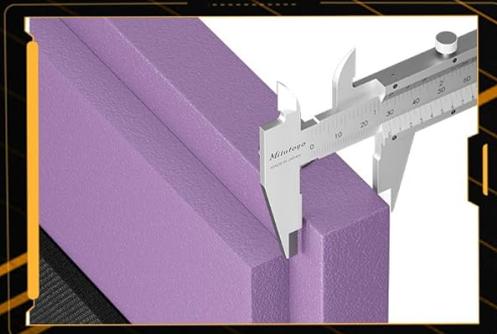

50 MM



Image 4.1: Product dimensions and included accessories such as gray carpet, anchor bolts, and emergency keys.

3

WAYS TO ACCESS

Quick access

INITIAL PASSWORD
123456 + #



Image 4.2: Details of the safe's construction, highlighting material thickness for enhanced security.

5. ASSEMBLY INSTRUCTIONS

The INTERGREAT Gun Safe is designed for quick assembly. Follow these steps for proper setup:

- 1. Unpack Components:** Carefully remove all parts from the packaging and verify against the 'Package Contents' list.
- 2. Initial Assembly:** Assemble the main body of the safe according to the diagrams provided in the separate assembly guide. Ensure all panels are correctly aligned and secured.
- 3. Install Shelves and Racks:** The safe features adjustable shelves and gun racks. Position them as desired to accommodate your firearms and accessories. If more height is needed for long guns, the middle partition can be removed.
- 4. Secure Mounting:** For optimal security, the safe must be mounted to a solid wall or floor.
 - **Drill Holes:** Mark and drill holes at the fixed installation position using appropriate tools.
 - **Fix Parts:** Use the provided 4 anchor bolts to securely fasten the safe to the chosen surface.
- 5. Final Checks:** Ensure all parts are fixed, and the safe is stable before storing any items.



Image 5.1: Overview of the three main steps for securing the safe: drill, fix, and assemble.



Image 5.2: Interior features of the safe, including adjustable shelving, gun racks, pistol pockets, and a bullet bag for organized storage.

6. OPERATING INSTRUCTIONS

6.1 Accessing the Safe

Your INTERGREAT Gun Safe offers three methods for quick access:

1. **Digital Keypad + Knob:** Enter your programmed digital password followed by the '#' key, then turn the knob to open. The initial password is **123456 + #**.
2. **Key + Knob:** Insert the backup key into the lock, turn it, and then turn the knob to open.
3. **Emergency Battery Box + Knob:** If the internal batteries are depleted, connect the emergency battery pack to the external port, enter your digital password, and turn the knob.

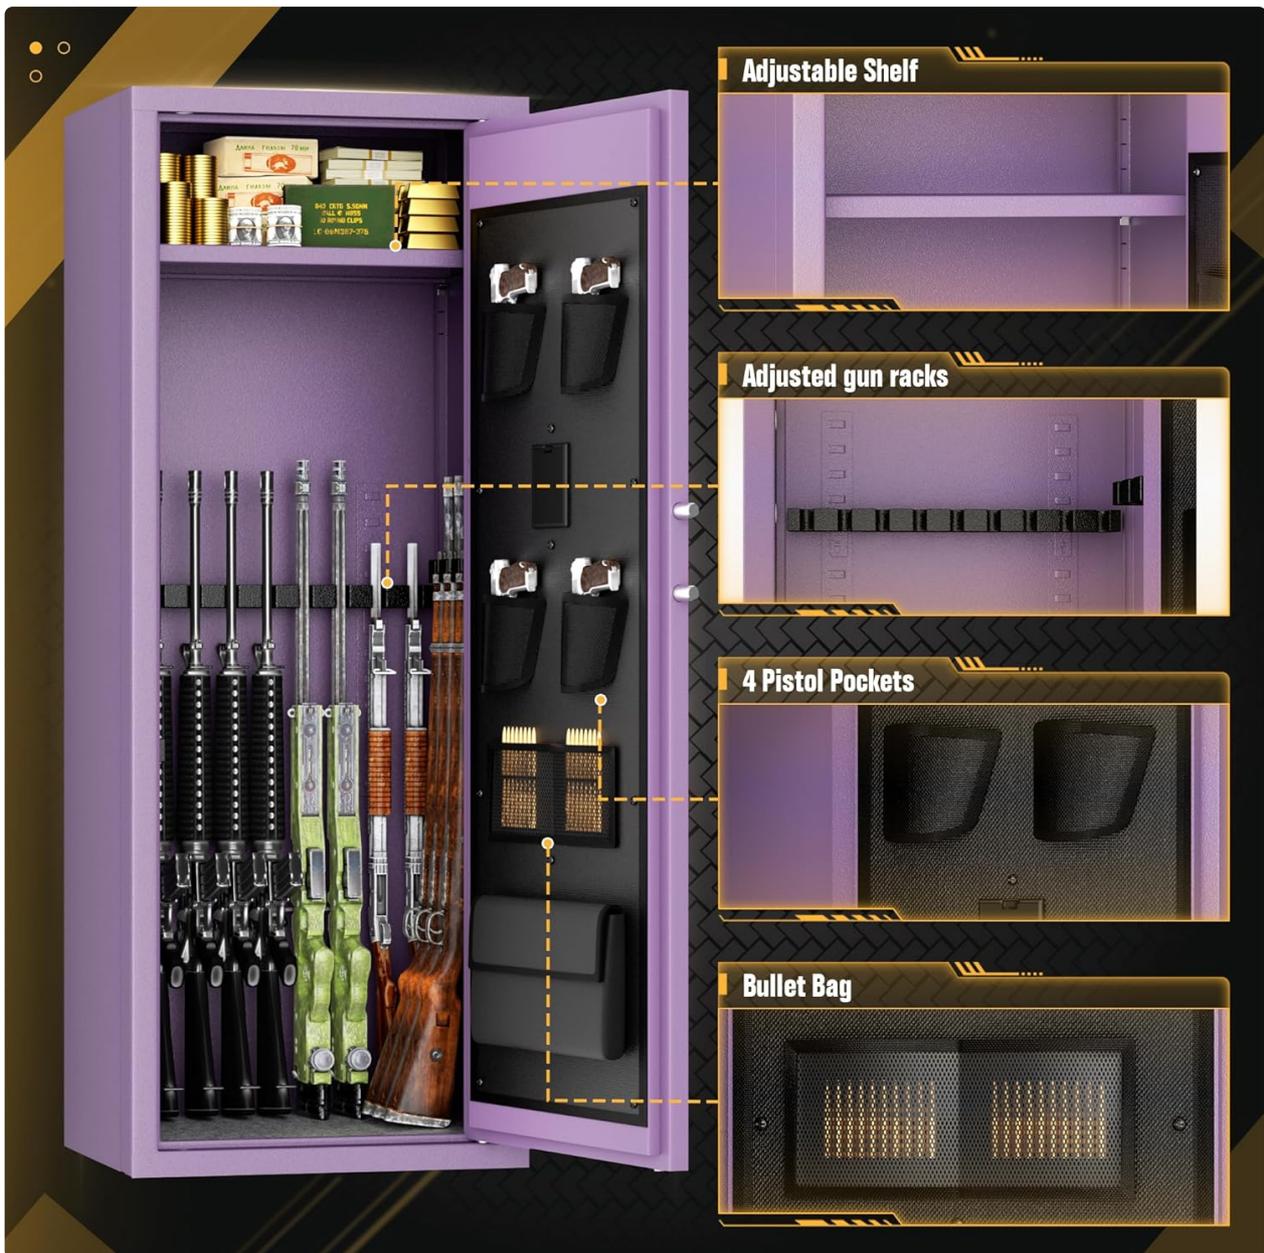


Image 6.1: Visual representation of the three access methods for the safe, including the initial password.

6.2 Setting/Changing Digital Password

Refer to the detailed instructions in the separate assembly guide for programming your personal digital password. It is recommended to change the initial password immediately after assembly.

6.3 Silent Mode

To activate silent mode, long press the "" sign on the digital keypad. This will disable keypad beeps for quiet

operation.

6.4 Locking System and Alarm

- **Automatic Lockout:** If an incorrect password is entered 5 times consecutively, the safe's locking system will activate, temporarily locking the keypad to prevent unauthorized access.
- **Dual Alert System:** The safe is equipped with an alarm system that activates upon 3 incorrect password attempts or any forceful breach attempt.



Image 6.2: Features of the safe including mute function for quiet operation and locking function for enhanced security.

DESIGNED FOR GUNS

H 55.2 IN

W 21.0 IN

L 15.2 IN



1 x Gray Carpet



4 x Anchor Bolts for
Floor and Wall Mount



2 x Emergency Keys

55.2 IN

15.2 IN

21.0 IN

Image 6.3: The dual alert system, designed to activate an alarm after multiple incorrect password attempts or a forceful entry.

7. MAINTENANCE

- **Cleaning:** Wipe the exterior of the safe with a soft, damp cloth. Avoid abrasive cleaners that could damage the finish.
- **Battery Replacement:** Replace the batteries in the digital keypad annually, or immediately if the low battery indicator appears. Use high-quality alkaline batteries.
- **Lock Mechanism:** Periodically check the locking bolts and hinges for smooth operation. Do not lubricate the digital keypad mechanism.
- **Interior:** Ensure the interior remains dry to prevent rust on firearms. Consider using a dehumidifier packet inside the safe.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Safe does not open with digital code.	Incorrect code entered; low batteries; keypad locked.	Re-enter code carefully. Replace batteries. Use emergency key or emergency battery pack. Wait for lockout period to expire.
Keypad is unresponsive.	Dead batteries.	Replace batteries. Use emergency battery pack.
Alarm sounds unexpectedly.	Multiple incorrect code entries; physical tampering.	Ensure correct code entry. Inspect safe for signs of tampering.
Door does not close or latch properly.	Obstruction; misalignment.	Check for items blocking the door or locking bolts. Ensure safe is level and securely mounted.

9. WARRANTY AND SUPPORT

INTERGREAT is committed to providing high-quality products and excellent customer service. While specific warranty details are not provided in this manual, if you encounter any issues or have questions regarding your gun safe, please contact INTERGREAT customer service. Our team is available to provide a satisfying solution.

For customer service inquiries, please refer to the contact information provided at the point of purchase or on the official INTERGREAT website.