

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Dinoo](#) /

› [Dinoo Wireless Controller for Xbox One Series X/S PC Instruction Manual](#)

Dinoo Wireless Controller

Dinoo Wireless Controller Instruction Manual

Model: Wireless Controller

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Dinoo Wireless Controller. Please read this manual thoroughly before using the product to ensure proper functionality and to maximize your gaming experience. This controller is compatible with Xbox One, Xbox Series X, Xbox Series S, PC (Windows 7/8/10/11), Android, and iOS devices.

SAFETY INFORMATION

- Keep the controller away from water and other liquids.
- Do not expose the controller to extreme temperatures.
- Avoid dropping or subjecting the controller to strong impacts.
- Do not attempt to disassemble or modify the controller. This will void the warranty.
- Use only specified batteries (not included).

CONTROLLER LAYOUT

Familiarize yourself with the buttons and features of your Dinoo Wireless Controller.



Image Description: A detailed diagram of the Dinosoo Wireless Controller, highlighting and labeling all buttons and ports, including the Left Stick, Right Stick, Cross Key (D-pad), A/B/X/Y buttons, LB/RB/LT/RT triggers, View, Menu, Home, Turbo, USB-C port, and the PR/PL programmable buttons on the back.

- **Left Stick:** Directional input, L3 button when pressed.
- **Right Stick:** Directional input, R3 button when pressed.
- **Cross Key (D-pad):** Directional input.
- **A/B/X/Y Buttons:** Action buttons.
- **LB/RB:** Shoulder buttons.
- **LT/RT:** Analog triggers with Hall Linear Trigger technology for precise input and vibration feedback.
- **View Button:** Access in-game menus or system functions.
- **Menu Button:** Access game options or system menus.
- **Home Button:** Power on/off the controller, access console dashboard.
- **Turbo Button:** Activates rapid-fire function.
- **USB-C Port:** For wired connection and charging (if rechargeable batteries are used).
- **3.5mm Headphone Jack:** For audio output and microphone input.
- **PL/PR Buttons:** Advanced programmable back buttons.

- **SET Button:** Used for programming PL/PR buttons.

SETUP AND CONNECTION

1. Powering the Controller

The controller requires batteries (not included). Insert appropriate batteries into the battery compartment. Ensure correct polarity.

2. Connecting to Xbox Consoles (Xbox One, Xbox Series X/S)

Wireless Connection (Bluetooth):

1. Ensure your Xbox console is powered on.
2. Press and hold the **Home** button on the controller to power it on.
3. Press the pairing button on the top of the controller (usually a small button near the USB-C port) until the Home button light flashes rapidly.
4. Press the pairing button on your Xbox console (usually on the front or side).
5. The Home button light on the controller will become solid when successfully connected.

Wired Connection:

- Connect the controller to your Xbox console using a USB-C cable. The controller will automatically connect.

3. Connecting to PC (Windows 7/8/10/11)

Bluetooth Connection:

1. Ensure your PC has Bluetooth enabled.
2. Press and hold the **Home** button on the controller to power it on.
3. Press the pairing button on the top of the controller until the Home button light flashes rapidly.
4. On your PC, go to Bluetooth & other devices settings, click "Add Bluetooth or other device," then select "Bluetooth."
5. Select the Dinosoo Wireless Controller from the list of available devices.
6. The Home button light on the controller will become solid when successfully connected.

Wired Connection:

- Connect the controller to your PC using a USB-C cable. The controller will be recognized as a game controller.

4. Connecting to Android/iOS Devices

1. Enable Bluetooth on your Android or iOS device.
2. Press and hold the **Home** button on the controller to power it on.
3. Press the pairing button on the top of the controller until the Home button light flashes rapidly.
4. On your device, search for Bluetooth devices and select the Dinosoo Wireless Controller.
5. The Home button light on the controller will become solid when successfully connected.

VERSATILE



Xbox Series X



Xbox Series S



Xbox One



Windows 10/11



iOS/Android



Image Description: An image showing the Dinosoo Wireless Controller being held, with icons above it indicating compatibility with Xbox Series X, Xbox Series S, Xbox One, Windows 10/11, and iOS/Android devices.

OPERATING INSTRUCTIONS

1. TURBO Function

The TURBO function allows for rapid, repeated input of a button press. This can be useful in games requiring fast button mashing.

1. **To activate TURBO:** Press and hold the **Turbo** button, then press the desired action button (A, B, X, Y, LB, RB, LT, RT). The button will now continuously register input as long as it's held.
2. **To deactivate TURBO:** Repeat the activation steps (hold **Turbo**, then press the same action button).

TURBO

Switch to turbo mode
for faster rapid fire

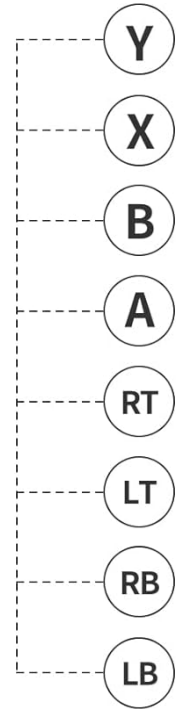


Image Description: A visual guide demonstrating how to activate the TURBO function on the Dinosoo Wireless Controller. It shows the 'T' (Turbo) button and a list of action buttons (Y, X, B, A, RT, LT, RB, LB) that can be assigned the rapid-fire function.

2. Macro/Programming Function (PL/PR Buttons)

The PL (left paddle) and PR (right paddle) buttons on the back of the controller can be programmed to replicate other button inputs, providing advanced control without software.

1. **To program a PL/PR button:** Press and hold the **SET** button for 3 seconds. The indicator light will change (e.g., flash).
2. While holding **SET**, press the PL or PR button you wish to program.
3. Then, press the button you want to map to PL/PR (e.g., A, B, X, Y, LB, RB, LT, RT, L3, R3, D-pad directions).
4. Release all buttons. The indicator light will return to normal, confirming the mapping.
5. **To clear a mapping:** Press and hold the **SET** button for 3 seconds, then press the PL or PR button you want to clear. The mapping will be removed.



Image Description: A view of the Dinosoo Wireless Controller from the back, highlighting the PL (left paddle), PR (right paddle), and SET buttons. An accompanying diagram illustrates which front-facing buttons (A, B, X, Y, RB, LB, RT, LT, L3, R3, D-pad) can be mapped to these back paddles.

3. Vibration Feedback

The controller features dual vibration motors in the side grips and Hall Linear Triggers with integrated vibration motors. These provide tactile feedback to enhance immersion during gameplay, simulating impacts, weapon recoil, and other in-game events.

HYPER-REALISTIC

4 RUMBLE MOTORS



Image Description: A transparent view of the Dinosoo Wireless Controller, revealing the internal placement of four rumble motors, two in the main body and two within the triggers, designed for enhanced vibration feedback.

4. 3.5mm Headphone Jack

A 3.5mm audio port is located on the bottom of the controller for connecting headphones or a headset. This allows for in-game audio and voice chat (if supported by the connected device and game).

3.5MM ANALOG AUDIO PORT

for convenient use of your favorite earphones or headset



Image Description: A close-up view of the Dinosoo Wireless Controller showing a 3.5mm audio cable plugged into the headphone jack located at the bottom of the controller.

5. Hall Effect Joysticks

The controller is equipped with Hall Effect Joysticks, which utilize magnetic sensors instead of traditional physical contacts. This technology provides increased precision, reduces joystick drift, and extends the lifespan of the joysticks up to 5 million cycles.

HALL EFFECT STICKS

Anti-drift jitter sensing technology



Up To 5
MILLION Cycles



Anti-Drift

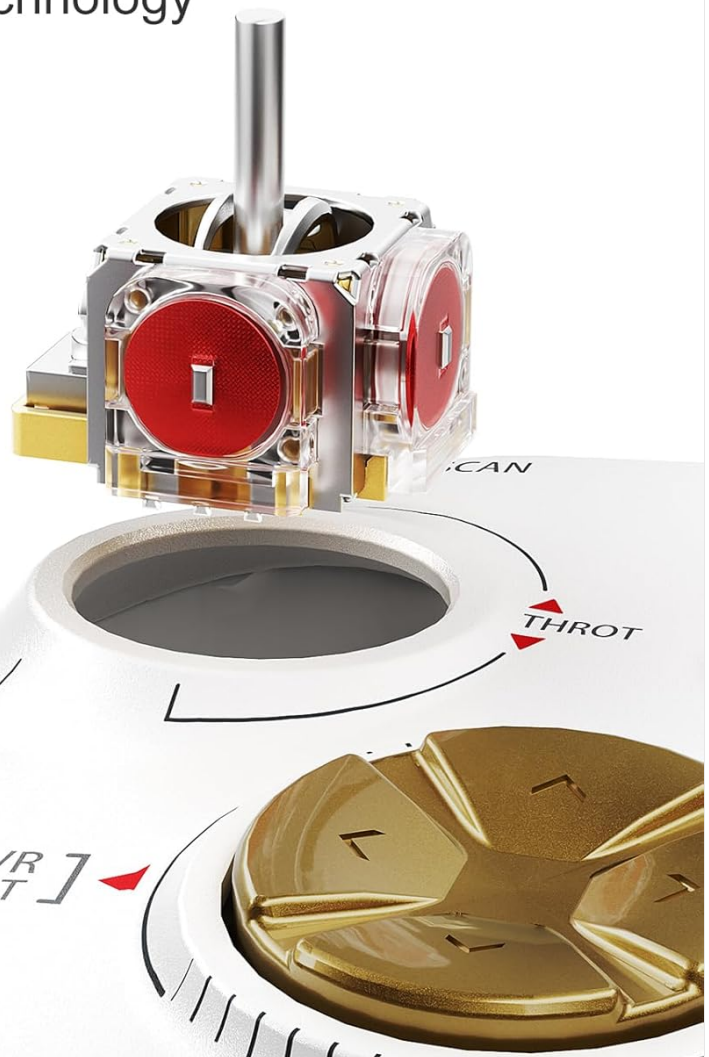


Image Description: A diagram illustrating the internal mechanism of Hall Effect Joysticks, showing the magnetic sensing technology that prevents drift and ensures a longer lifespan, indicated by "Up To 5 MILLION Cycles" and "Anti-Drift."

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the controller. For stubborn dirt, a slightly damp cloth can be used, but ensure no moisture enters openings. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** Store the controller in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** If using rechargeable batteries, follow the manufacturer's guidelines for charging. If the controller will not be used for an extended period, remove the batteries to prevent leakage.

TROUBLESHOOTING

- **Controller not connecting:**
 - Ensure the controller has sufficient battery power.
 - Verify Bluetooth is enabled on your device/console.

- Ensure the controller is in pairing mode (Home button flashing rapidly).
 - Try restarting your console/PC and the controller.
 - If issues persist, try a wired connection to rule out wireless interference.
 - Consider updating the controller's firmware. An upgrade program may be available.
- **Joystick drift or unresponsive buttons:**
 - Recalibrate the controller if your system allows.
 - Ensure the controller is clean and free of debris around the buttons/joysticks.
 - Check for firmware updates.
- **No audio from headphone jack:**
 - Ensure the headset is fully plugged in.
 - Check audio settings on your console/PC to ensure output is directed to the controller.
 - Test the headset with another device to confirm it is working.

Firmware Update Information: If you encounter connection problems or require technical upgrades, please download the upgrade program. The manufacturer provides a link for this purpose: we.tl/t-QpFRxa12Mc. Follow the instructions provided with the upgrade program or contact customer support for assistance.

If you can't connect your Xbox, upgrade your controller

Upgrade program download URL: we.tl/t-QpFRxaI2Mc
See the list video for upgrade instructions (very easy to follow)



Image Description: An image of the Dinosoo Wireless Controller with an overlay text instructing users to upgrade their controller if connection issues arise, providing the upgrade program download URL: we.tl/t-QpFRxaI2Mc.

SPECIFICATIONS

Feature	Detail
Brand	Dinosoo
Model	Wireless Controller
Connectivity	Bluetooth, Wired (USB-C)
Compatibility	Xbox One, Xbox Series X, Xbox Series S, PC (Windows 7/8/10/11), Android, iOS
Special Features	Hall Effect Joysticks, Dual Vibration (4 Rumble Motors), Six-axis Gyroscope, TURBO Function, Macro/Programming Function (PL/PR), 3.5mm Headphone Jack

Feature	Detail
Wireless Range	Over 30 feet
Dimensions	6.77 x 4.8 x 2.83 inches
Item Weight	5.5 ounces

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact Dinosoo customer service directly. Keep your purchase receipt as proof of purchase.

For further assistance, please visit the Dinosoo store on Amazon: [Dinosoo Store](#).