

## Vaydeer LB1082

# Vaydeer Metal Timed Lock Box LB1082 User Manual

Model: LB1082

## 1. PRODUCT OVERVIEW

---

The Vaydeer Metal Timed Lock Box LB1082 is designed to help manage access to items by locking them for a set period. It features a durable metal construction, an LED display for timer settings, and multiple power options. This manual provides detailed instructions for its setup, operation, and maintenance.

# Sturdy and Durable Metal

Once locked, no override



Image: Top-down view of the Vaydeer Metal Timed Lock Box, showcasing its sleek design and control panel.

## 2. FEATURES

- **Solid Metal Body:** Constructed with durable metal for enhanced security and stability. Interior dimensions: 8.03 × 5.33 × 1.97 inches. Net weight: 2.09 lbs.
- **Dual Power Options:** Can be powered via USB-C external power or 4 AA batteries (not included) for flexible placement.
- **Emergency Unlock Function:** A procedure is available for unexpected situations, detailed on the included emergency unlocking instruction card.
- **No-Override Timer:** Set a lock duration for up to 365 days. The box remains locked until the set time

expires.

- **Port-Free Design:** This upgraded version eliminates cable pass-through openings, ensuring the chamber is fully enclosed during the lock period.
- **LED Display:** Provides clear countdown and status information.
- **Child Lock:** Prevents accidental button presses during the locked period.
- **Audible Alarm:** Alerts for certain operations or conditions.



Image: Illustration highlighting the sturdy and durable metal construction of the lock box.



Image: The multi-function timed lock box storing various items like phones, snacks, and game controllers.

### 3. INCLUDED COMPONENTS

- 1 x Vaydeer Metal Timed Lock Box
- 1 x USB-C Charging Cable
- 1 x User Guide (this document)
- 2 x Emergency Unlocking Service Cards

### 4. SETUP

#### 4.1 Powering the Device

The Vaydeer Metal Timed Lock Box can be powered in two ways:

1. **USB-C External Power:** Connect the provided USB-C cable to the USB-C port on the device and to a

suitable power adapter (not included).

2. **AA Batteries:** Insert 4 AA batteries (not included) into the battery compartment located on the underside of the device. Ensure correct polarity.

It is recommended to use both power sources for uninterrupted operation, especially for long locking periods.



Image: The underside of the lock box, revealing the battery compartment for 4 AA batteries. The device also supports USB-C power.

## 5. OPERATING INSTRUCTIONS

---

### 5.1 Setting the Timer

1. Ensure the lock box is open and powered on.
2. Press the **Settings** button (gear icon) to select the time unit (Days, Hours, Minutes).
3. Use the **Up** (arrow up) and **Down** (arrow down) buttons to adjust the desired time.
4. Repeat for Days, Hours, and Minutes until your desired lock duration is set. The maximum duration is 365 days.
5. Once the time is set, press the **Lock** button (padlock icon) to initiate the locking process. The box will emit 5 beeps as an audio alert before locking.
6. Close the lid firmly. The box will now be locked for the set duration.

Your browser does not support the video tag.

Video: Official Vaydeer demonstration of setting the timer and locking the box. This video shows the process of adjusting days, hours, and minutes, and activating the lock function.

### 5.2 Child Lock Function

To prevent accidental changes to the timer or premature unlocking, activate the Child Lock:

- Locate the Child Lock button on the side/back of the device.
- Slide or press the Child Lock button to activate it. Once activated, the main control buttons on the top panel will become unresponsive.
- To deactivate, slide or press the Child Lock button again.

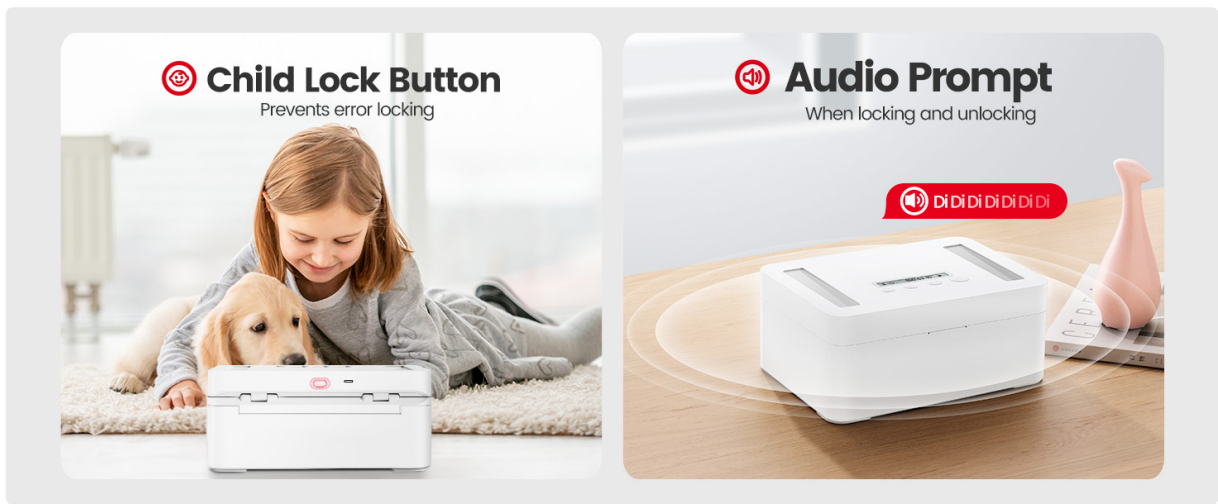


Image: Illustration of the child lock button and the audio prompt feature of the lock box.

## 6. EMERGENCY UNLOCK

In unforeseen circumstances, such as an incorrect timer setting or urgent need for access, the lock box provides an emergency unlock option. Refer to the dedicated [Emergency Unlocking Service Card](#) included with your product for the step-by-step procedure. This card contains specific instructions and a unique device ID required for the process.



Image: Diagram illustrating the steps for using the emergency unlocking function, including obtaining the device ID and entering the unlock code.

## 7. MAINTENANCE

- **Cleaning:** Wipe the exterior with a soft, dry cloth. Avoid abrasive cleaners or solvents.
- **Battery Replacement:** If using AA batteries, replace all four batteries simultaneously when the low battery indicator appears on the LED display.
- **Storage:** Store the lock box in a cool, dry place away from direct sunlight and extreme temperatures.

## 8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not power on.	No power source or depleted batteries.	Connect USB-C power or replace AA batteries.
Buttons are unresponsive.	Child Lock is activated.	Deactivate the Child Lock button.

Problem	Possible Cause	Solution
Box does not lock.	Lid not properly closed or timer not set.	Ensure the lid is fully closed and the timer is set before pressing the Lock button.
Need to open before timer expires.	Emergency access required.	Refer to the Emergency Unlocking Service Card for instructions.

## 9. SPECIFICATIONS

---

- **Brand:** Vaydeer
- **Model Number:** LB1082
- **Material:** Metal
- **Color:** Zinc Black
- **Product Dimensions (D x W x H):** 8.35" x 6.07" x 3.15"
- **Interior Chamber Depth:** 1.97 Inches
- **Capacity:** 2.62 Liters
- **Item Weight:** 200 Grams (0.44 lbs)
- **Lock Type:** Electronic Combination Lock
- **Max Lock Duration:** 365 Days
- **Power Source:** USB-C or 4 x AA Batteries (not included)
- **Special Features:** 365-day countdown, Child lock, Emergency Unlocking, No-override timer, Port-free design, Audible Alarm.
- **Water Resistance Level:** Not Water Resistant

## 10. WARRANTY AND SUPPORT

---

For warranty information, product support, or to purchase replacement parts, please visit the official Vaydeer store or contact customer service through the retailer where the product was purchased. Keep your purchase receipt for warranty claims.

**Vaydeer Store:** [Visit the Vaydeer Store on Amazon](#)