

[manuals.plus](#) /

› [PUSOKEI](#) /

› [PUSOKEI Senior Cell Phone B0FWJPY7HS Instruction Manual](#)

PUSOKEI B0FWJPY7HS

PUSOKEI Senior Cell Phone Instruction Manual

Model: B0FWJPY7HS

1. INTRODUCTION

This manual provides essential information for the safe and efficient use of your PUSOKEI Senior Cell Phone. Please read it thoroughly before operating the device and keep it for future reference.

The PUSOKEI Senior Cell Phone is designed for ease of use, featuring a 2.6-inch HD screen, large tactile buttons, a loud speaker, and a 3000mAh battery. It supports dual SIM cards and includes an emergency flashlight function.



Image: PUSOKEI Senior Cell Phone, showcasing its compact design and large buttons, held comfortably in a hand.

2. PACKAGE CONTENTS

Ensure all items are present in the package:

- 1 x PUSOKEI Senior Cell Phone
- 1 x Charging Cable
- 1 x User Manual (this document)



Image: The PUSOKEI Senior Cell Phone displayed alongside its included charging cable.

3. PRODUCT OVERVIEW

The PUSOKEI Senior Cell Phone is designed with user convenience and safety in mind. Key features include:

- **HD Display:** A 2.6-inch shatterproof HD screen provides clear visibility with vivid colors, enhanced by adhesion technology to prevent dust and air intrusion.
- **User-Friendly Design:** Large, tactile buttons with ample spacing minimize accidental presses, simplifying operation.
- **Loud and Clear Sound:** The front speaker delivers robust sound quality. Non-slip sides and round edges ensure a comfortable and secure grip.
- **Emergency Lighting Assistance:** A dedicated side key activates the flashlight, even when the phone is off or locked, for quick access in low-light conditions.
- **Dual SIM Convenience:** Supports two SIM cards (not included) for simultaneous standby, ensuring reliable communication.
- **Long-lasting Battery:** Equipped with a 3000mAh battery for extended use.



Image: A close-up view of the phone's large, well-spaced buttons, highlighting their tactile design for easy pressing.

Super large speaker sound, clear sound quality



Image: The rear of the phone, emphasizing the large speaker for clear audio output.



Image: A side view of the phone, illustrating the integrated flashlight feature.

4. SETUP

4.1 SIM Card Installation

This phone supports dual SIM cards. To install SIM cards:

1. Carefully remove the back cover of the phone.
2. Insert your standard SIM cards into the designated slots. Ensure the metal contacts face downwards.
3. Replace the back cover securely.

Important: Consult with your local operator to confirm if they support the GSM frequency bands: 850, 900, 1800, 1900 MHz.

4.2 Charging the Battery

Before first use, fully charge the phone's battery. Connect the provided charging cable to the phone's charging port and plug the other end into a compatible USB power adapter.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

- To power on: Press and hold the Power button until the screen lights up.
- To power off: Press and hold the Power button, then select 'Power off' from the options.

5.2 Making Calls

1. From the home screen, use the keypad to dial the desired phone number.
2. Press the Green Call button to initiate the call.
3. To end a call, press the Red End Call button.

5.3 Sending Text Messages

1. Navigate to the 'Messaging' menu.
2. Select 'New Message' or 'Write Message'.
3. Enter the recipient's phone number or select from contacts.
4. Type your message using the keypad.
5. Press 'Send'.

5.4 Using the Flashlight

The flashlight can be activated using the dedicated side key. Simply slide or press the flashlight button on the side of the phone to turn it on or off. This function works even when the phone is locked or powered off.

Your browser does not support the video tag.

Video: A brief demonstration of the PUSOKEI Senior Cell Phone, highlighting its features and ease of use.

6. MAINTENANCE

- Keep the phone dry. Moisture can damage the device.
- Use only approved chargers and accessories.
- Clean the screen and body with a soft, dry cloth. Avoid harsh chemicals.
- Do not attempt to disassemble the phone, as this will void the warranty.

7. TROUBLESHOOTING

7.1 Phone Not Turning On

- Ensure the battery is charged. Connect the phone to a charger for at least 30 minutes.
- Check if the battery is properly inserted.

7.2 No Network Signal

- Verify that the SIM card is correctly installed.
- Check if you are in an area with network coverage.
- Restart the phone.

7.3 Sound Issues

- Ensure the volume is turned up using the side volume keys.
- Check if the speaker is obstructed.

8. SPECIFICATIONS

Feature	Specification
Item Type	Big Key Phone
Material	ABS
Camera (Pixels)	0.13MP
Built-in Battery	3000mAh
Memory	32MB and 32MB, Supports up to 64G (not included)
Network Format	GSM: 850, 900, 1800, 1900 MHZ
Card Slot	Dual SIM Dual Standby (Memory Card x1 and Regular SIM x2, not included)
Features	Vibration, Video Player, FM Radio, Music Player, Recorder, Camera, Clock, Calculator, Calendar, BT, Games, Side Key Flashlight
Language	English, Arabic, French, Portuguese, Russian, Spanish, German
Product Dimensions	5.51 x 3.14 x 1.96 inches
Item Weight	5.3 ounces

9. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation included with your purchase or contact PUSOKEI customer service. Keep your proof of purchase for warranty claims.