

## ELEMARA S623

# ELEMARA 2 Seater 24V Ride-On UTV

MODEL: S623

## 1. Important Safety Information

Please read this entire manual before assembly and operation to ensure safe use and prevent injury. Keep this manual for future reference.

- **CHOKING HAZARD:** Small parts. Not suitable for children under 37 months. Keep children away during assembly.
- **Adult Supervision Required:** This product must be assembled and operated under direct adult supervision.
- **Age and Weight Limits:** Recommended for ages 3 years and up. Maximum weight capacity is 130 lbs (approximately two 8-year-old children).
- **Seat Belts:** Always ensure children are securely fastened with the two independent three-point seat belts provided.
- **Safe Operating Environment:** Operate the vehicle on flat, dry surfaces away from traffic, pools, or steep inclines. Avoid operating in wet conditions or near hazards.
- **Soft Start and Slow Stop:** The vehicle is equipped with soft start and slow stop functions to ensure a smooth and safe ride.

## 2. Package Contents

Carefully unpack all components and verify that all items are present before beginning assembly. If any parts are missing or damaged, contact customer support.

- ELEMARA 2 Seater 24V Ride-On UTV (main body and components)
- Remote Control (1 unit)
- Charger
- Instruction Manual
- Assembly Hardware (screws, washers, etc.)

## 3. Assembly and Setup

Adult assembly is required. Follow these general steps. Refer to the detailed diagrams in the printed manual for specific

instructions.

1. **Unpack Components:** Remove all parts from the packaging and lay them out on a clean, flat surface.
2. **Install Wheels:** Attach the four large tread wheels (13.8 inches each) to the vehicle axles, ensuring they are securely fastened.
3. **Connect Battery:** Locate the 24V battery compartment and connect the battery terminals. Ensure a secure connection.
4. **Install Steering Wheel and Seat:** Securely attach the steering wheel and the two-seater bench.
5. **Initial Charge:** Before first use, fully charge the 24V vehicle battery for 8-12 hours. Do not overcharge.
6. **Remote Control Battery:** Install 1 AAA battery (included) into the remote control.



Image 1: Fully assembled ELEMARA 2 Seater 24V Ride-On UTV. This image shows the overall design, including the large wheels, two seats, and general structure of the vehicle.

## 4. Operating Instructions

---

The ELEMARA UTV offers two distinct riding modes for varied control.

### 4.1 Manual Driving Mode

This mode allows the child to control the vehicle directly, simulating a real driving experience.

- **Power Button:** Press to turn the vehicle on.
- **Gear Shifter:** Use the manual gear shifting lever to select Forward, Reverse, or Neutral.
- **Accelerator Pedal:** Press the foot pedal to accelerate. Release to brake.
- **Steering Wheel:** Turn the steering wheel to control direction.
- **Speed Settings:** The vehicle offers two speed options, typically controlled via a switch on the dashboard, allowing for speeds of 4-5 MPH.

### 4.2 Remote Control Mode

Parents can use the remote control to guide the vehicle, ensuring safety and assisting younger drivers.

- **Pairing:** Follow the instructions in the printed manual to pair the remote control with the vehicle.
- **Remote Functions:** The remote typically controls forward/reverse movement, left/right steering, and speed selection.
- **Safety Override:** The remote control usually has priority over manual controls for safety.

### 4.3 Entertainment Features

- **Lights:** Two LED lights at the front provide illumination. Four red, blue, and green flashing lights at the rear enhance visibility and aesthetics.
- **Music Player:** The integrated music player allows for pre-loaded tunes.
- **Bluetooth Function:** Connect a Bluetooth-enabled device to play custom music through the vehicle's speaker.

## 5. Maintenance

Regular maintenance ensures the longevity and safe operation of your ELEMARA UTV.

- **Battery Charging:** Charge the 24V vehicle battery after each use. Do not allow the battery to fully discharge. If storing for extended periods, charge the battery at least once a month.
- **Cleaning:** Wipe the vehicle's exterior with a soft, damp cloth. Avoid using harsh chemicals or abrasive cleaners. Do not spray water directly onto electrical components.
- **Tire Inspection:** Periodically check the wheels and tires for wear, damage, or debris. Ensure all wheel fasteners are tight.
- **General Inspection:** Regularly check all screws, bolts, and connections to ensure they are secure.
- **Storage:** Store the vehicle in a dry, cool place away from direct sunlight and moisture.

## 6. Troubleshooting

If you encounter issues, refer to this section for common problems and solutions.

| Problem               | Possible Cause                      | Solution                                                 |
|-----------------------|-------------------------------------|----------------------------------------------------------|
| Vehicle does not move | Battery not connected or discharged | Check battery connections. Charge the 24V battery fully. |

| Problem                     | Possible Cause                          | Solution                                                                                          |
|-----------------------------|-----------------------------------------|---------------------------------------------------------------------------------------------------|
| Vehicle runs slowly         | Low battery charge                      | Charge the 24V battery fully.                                                                     |
| Remote control not working  | Remote battery low or not paired        | Replace the AAA battery in the remote. Re-pair the remote control with the vehicle as per manual. |
| Lights or music not working | Loose connection or low vehicle battery | Check connections to lights/speaker. Ensure vehicle battery is charged.                           |

## 7. Specifications

- **Model Number:** S623
- **Product Dimensions:** 45 x 28.3 x 34.4 inches
- **Item Weight:** 60.6 pounds
- **Battery:** 24V (for vehicle), 1 AAA (for remote control, included)
- **Motors:** Four robust electric motors (4WD)
- **Speed Options:** 2 (4-5 MPH)
- **Battery Life (Run Time):** 40-90 minutes (varies with usage and speed)
- **Max Capacity:** 130 lbs
- **Recommended Age:** 3 years and up
- **Features:** 2 Seater design, 4-Wheeler Suspension, Bluetooth, Rainbow Light\*4, Music Player, Front LED lights, Soft Start/Stop.

## 8. Warranty and Support

For warranty information, technical support, or replacement parts, please contact the ELEMARA customer service department or the retailer from whom the product was purchased. Keep your purchase receipt as proof of purchase. Contact information can typically be found on the product packaging or the official ELEMARA website.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

**Submit question**