

[Manuals.plus](#) /

› [UREVO](#) /

› UREVO Walking Pad Treadmill User Manual - Model Laufband Ftmwp1eubk44akgmden02

UREVO Laufband Ftmwp1eubk44akgmden02

UREVO Walking Pad Treadmill User Manual

Model: Laufband Ftmwp1eubk44akgmden02

1. INTRODUCTION

Thank you for choosing the UREVO Walking Pad Treadmill. This compact and versatile fitness equipment is designed to support your walking, jogging, and light running needs in various environments, including home and office settings. With its powerful 2.5 HP motor, quiet operation, and shock-absorbing system, it provides a comfortable and effective workout experience. This manual provides essential information for the safe and efficient use, setup, operation, and maintenance of your UREVO Walking Pad Treadmill.

2. IMPORTANT SAFETY INSTRUCTIONS


Please read all instructions carefully before using this treadmill. Keep this manual for future reference.

- Always place the treadmill on a flat, stable surface.
- Ensure there is adequate clear space (at least 2 meters) behind the treadmill for safety.
- Keep children and pets away from the treadmill during operation.
- Wear appropriate athletic footwear and clothing.
- Do not use the treadmill if you weigh more than 136 kg (300 lbs).
- If you experience dizziness, nausea, chest pain, or any other abnormal symptoms, stop your workout immediately and consult a physician.
- Unplug the treadmill from the power outlet when not in use or before cleaning and maintenance.
- Do not operate the treadmill if it has a damaged cord or plug, or if it is not working properly.
- Only use the treadmill for its intended purpose as described in this manual.

3. PACKAGE CONTENTS

Carefully unpack your UREVO Walking Pad Treadmill and check that all items listed below are present and undamaged. If any items are missing or damaged, please contact customer support.

Package Including

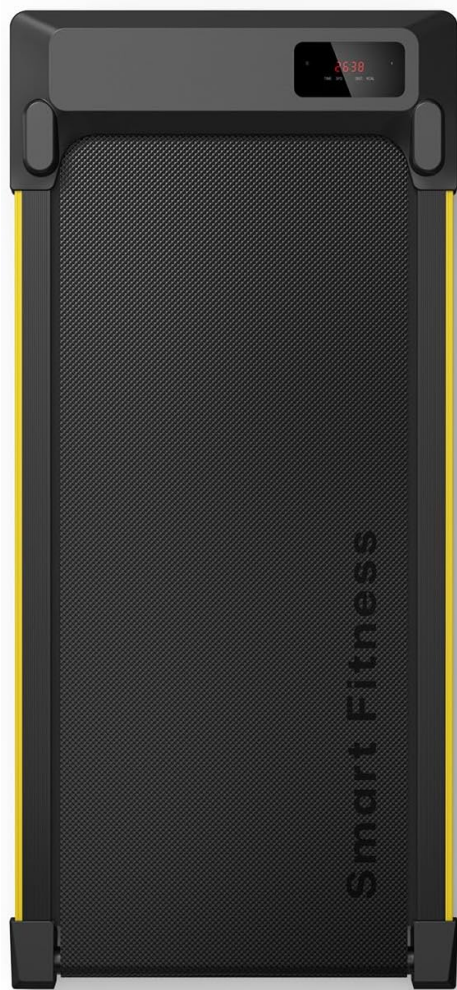

Hex Tool x 1



x 1



Power Cord x 1



Remote Control x 1



User Manual x 1



Image showing the UREVO Walking Pad Treadmill and its included accessories: Hex Tool, Lubricant, Power Cord, Remote Control, and User Manual.

- UREVO Walking Pad Treadmill x 1
- Hex Tool x 1
- Lubricant x 1 (small bottle)
- Power Cord x 1
- Remote Control x 1
- User Manual x 1

4. SETUP INSTRUCTIONS

The UREVO Walking Pad Treadmill comes pre-assembled, requiring minimal setup before first use.

1. **Unpack:** Carefully remove the treadmill from its packaging. It is recommended to have two people for this step due to its weight (approximately 16.6 kg).
2. **Placement:** Place the treadmill on a firm, level surface. Ensure there is sufficient space around the unit, especially at the rear, for safe operation.
3. **Connect Power:** Plug the power cord into the treadmill's power input, then plug the other end into a

grounded electrical outlet.

4. **Initial Check:** Before stepping on, turn on the treadmill and let it run at a low speed for a few minutes to ensure the belt is centered and moving smoothly.



Image illustrating the compact design and ease of storage for the UREVO Walking Pad Treadmill, showing it being rolled under furniture.

5. OPERATING INSTRUCTIONS

5.1 Basic Operation

To start your workout, ensure the treadmill is plugged in and powered on. Step onto the belt carefully.

- **Power On/Off:** Use the power button on the treadmill or the remote control to turn the unit on or off.
- **Start/Stop:** Press the 'Start' button on the remote control or app to begin the belt movement. Press 'Stop' to halt the movement.
- **Speed Adjustment:** Use the '+' and '-' buttons on the remote control or the app to increase or decrease the speed. The speed range is 1-6 km/h.

5.2 Control with Smart App & Remote

The UREVO Walking Pad Treadmill can be controlled via the included remote control or a dedicated

smartphone application. The app allows for tracking progress and more precise control.



Image displaying the smart app interface and remote control for tracking and adjusting workouts on the UREVO Walking Pad Treadmill.

- **Remote Control:** The compact remote allows for quick adjustments to speed and starting/stopping the treadmill.
- **Smartphone App:** Download the UREVO fitness app from your device's app store. Follow the in-app instructions to pair your treadmill. The app provides detailed workout data, speed control, and potentially pre-set programs.

5.3 Versatile 3-in-1 Modes

This treadmill supports various exercise intensities, making it suitable for different fitness levels.

Versatile 3-in-1 Treadmill

Ideal for all fitness levels,
from beginners to pros

 speed range of **1-6km/h**



Image demonstrating the three modes of use for the UREVO Walking Pad Treadmill: walking, jogging, and running, with a speed range of 1-6 km/h.

- **Walking:** Ideal for light activity, warm-ups, or maintaining movement while working.
- **Jogging:** Suitable for moderate cardio workouts.
- **Running:** For higher intensity exercise within the treadmill's speed capabilities.

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your treadmill.

- **Cleaning:** Wipe down the treadmill with a damp cloth after each use to remove sweat and dust. Do not use abrasive cleaners.
- **Belt Lubrication:** The running belt requires periodic lubrication to reduce friction and wear. Use the provided lubricant or a silicone-based treadmill lubricant. Refer to the specific instructions in the included user manual for frequency and application method.
- **Belt Adjustment:** If the running belt starts to shift to one side or slips, it may need adjustment. Use the hex tool to make small adjustments to the rear rollers as per the detailed instructions in the full user manual.
- **Storage:** When not in use, the treadmill can be easily rolled and stored under a sofa or bed due to its compact design and built-in wheels.

7. TROUBLESHOOTING

If you encounter issues with your UREVO Walking Pad Treadmill, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Treadmill does not power on.	Power cord not properly connected; power outlet issue.	Ensure power cord is securely plugged into both the treadmill and a working wall outlet. Check circuit breaker.
Running belt stops or slips.	Belt too loose; insufficient lubrication.	Adjust belt tension using the hex tool (refer to full manual). Apply lubricant if needed.
Unusual noise during operation.	Loose components; belt friction; motor issue.	Check for any loose screws. Lubricate the belt. If noise persists, contact customer support.
Remote control not working.	Dead battery; remote not paired.	Replace remote control battery. Refer to the full user manual for remote pairing instructions.

For issues not covered here, or if solutions do not resolve the problem, please contact UREVO customer support.

8. PRODUCT SPECIFICATIONS

- **Model:** Laufband Ftmwp1eubk44akgmden02
- **Dimensions (L x W x H):** 107 cm x 49 cm x 10.7 cm (42.1 in x 19.3 in x 4.2 in)
- **Product Weight:** 16.6 kg (36.6 lbs)
- **Maximum Recommended Load:** 136 kg (300 lbs)
- **Motor Power:** 2.5 HP
- **Speed Range:** 1 - 6 km/h
- **Noise Level:** <65 dB
- **Material:** Alloy Steel
- **Special Features:** Compact design, Lightweight, 6 Silicone Shock Absorbers, 5-Layer Non-Slip Running Belt, Built-in Wheels
- **Power Source:** Corded Electric



**Protects Your
Knees And Ankles**

Durability & Support

136 kg capacity and shock-absorbing system for stable, comfortable runs.



**136 kg Weight
Capacity**




**5-Layer Non-Slip
Running Belt**



**6 Silicone Shock
Absorbers**

Image highlighting the durability and support features of the UREVO Walking Pad Treadmill, including its 136 kg capacity, 5-layer non-slip running belt, and 6 silicone shock absorbers.

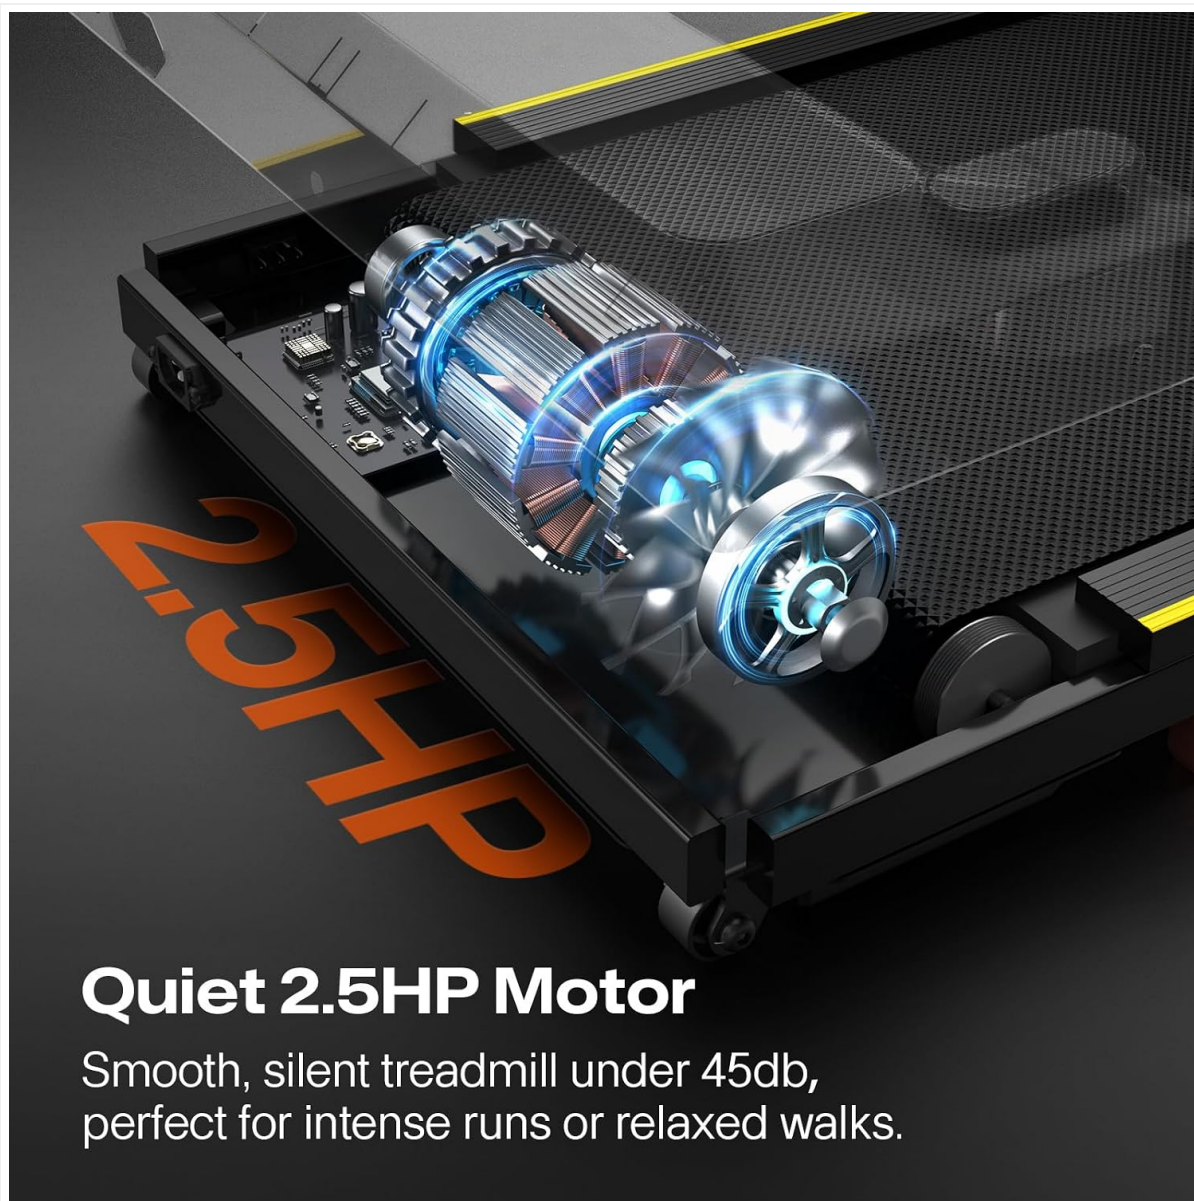

Quiet 2.5HP Motor

Smooth, silent treadmill under 45db,
perfect for intense runs or relaxed walks.

Image showcasing the quiet 2.5HP motor of the UREVO Walking Pad Treadmill, designed for smooth and silent operation.

9. WARRANTY AND SUPPORT

Warranty: The UREVO Walking Pad Treadmill comes with a 1-year warranty from the date of purchase, covering manufacturing defects. Please retain your proof of purchase for warranty claims. This warranty does not cover damage caused by misuse, accidents, or unauthorized modifications.

Customer Support: For technical assistance, warranty claims, or any questions regarding your product, please contact UREVO customer support. Contact information can typically be found on the UREVO official website or through your purchase platform.