

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Nakamichi](#) /

› [Nakamichi TW130NC Wireless Earbuds User Manual](#)

## Nakamichi TW130NC

# Nakamichi TW130NC Wireless Earbuds User Manual

Model: TW130NC

## INTRODUCTION

---

Thank you for choosing the Nakamichi TW130NC Wireless Earbuds. This manual provides essential information for setting up, operating, and maintaining your earbuds to ensure optimal performance and a satisfying audio experience. Please read this manual thoroughly before use and retain it for future reference.

## PACKAGE CONTENTS

---

Verify that all items listed below are present in your package:

- Nakamichi TW130NC Wireless Earbuds (Left and Right)
- Charging Case
- USB-C Charging Cable
- Eartips (Sizes S, M, L)
- User Manual

# Nakamichi

ワイヤレスイヤホン TW130NC  
より美しい型で、いちばんいい音を



## クリアな通話

ノイズキャンセリング用マイクを搭載し、周囲のノイズを低減してよりクリアな音声で通話ができる



## ANCノイズキャンセリング

周囲の騒音を効果的にカットし、自分の音楽世界に没入できる



## バスプースト

EDM、ロックなどの音楽を楽しむ時に迫力のある重低音を体感することができる



## 外音取り込み

イヤホンを装着したままでも周囲の音や会話など口聞き取ることができる



## 最大45時間再生

イヤホン本体 約7時間  
充電ケースを合わせる 約45時間



## 日本語提示音

操作をより簡単に理解し、快適に使用することができる

電源がはいました

接続されました

ANCモード

バッテリー残量が少ない

Image: The Nakamichi TW130NC wireless earbuds are shown inside their open charging case, with the USB-C charging cable and various eartip sizes laid out beside them, illustrating the complete package contents.

## PRODUCT OVERVIEW

The Nakamichi TW130NC earbuds are designed for high-quality audio and versatile functionality. Each earbud features touch controls and integrated microphones for calls and noise cancellation. The compact charging case provides extended battery life and convenient storage.



Image: A graphic illustrating the key features of the Nakamichi TW130NC earbuds, including high-performance noise cancellation, bass boost, Bluetooth 5.3 connectivity, hands-free calling, 45-hour playback, and ambient sound mode.

## SETUP

### 1. Charging the Earbuds and Case

Before first use, fully charge the earbuds and charging case.

- Place the earbuds into the charging case. Ensure they are correctly seated.
- Connect the USB-C charging cable to the charging port on the case and to a power source.
- The indicator lights on the case will show the charging status. Once fully charged, the lights will indicate completion.

A full charge for the earbuds takes approximately 1.5 hours. The earbuds provide about 7 hours of playback, and the charging case extends this to approximately 45 hours.

長時間再生

フィット感いい

日本語アナウンス

操作簡単

## 約45時間再生

大容量の 600 mAhバッテリーを内蔵し、イヤホン本体の連続再生時間は約7時間で、イヤホンケースを合わせると連続再生時間は45時間です。充電切れを気にすることなく1日中音楽を楽しめます。

約 **1.5** 時間  
充電時間

約 **7** 時間  
イヤホン本体

約 **45** 時間  
充電ケースを合わせる



Image: A visual representation of the Nakamichi TW130NC earbuds and charging case, highlighting the battery life: approximately 1.5 hours for a full charge, 7 hours of playback for the earbuds, and a total of 45 hours with the charging case.

## 2. Bluetooth Pairing

Follow these steps to pair your earbuds with a Bluetooth-enabled device:

1. Open the charging case. The earbuds will automatically enter pairing mode, indicated by flashing lights.
2. On your device (smartphone, tablet, etc.), enable Bluetooth.
3. Search for available Bluetooth devices and select "Nakamichi TW130NC" from the list.
4. Once connected, a voice prompt will confirm the successful pairing.

The earbuds will automatically reconnect to the last paired device when removed from the case, if Bluetooth is enabled on the device.

## 3. Wearing the Earbuds

For optimal sound quality and comfort, choose the correct eartip size and wear the earbuds properly.

- Select the eartips (S, M, L) that provide a snug and comfortable fit in your ear canal.
- Gently insert each earbud into your ear, twisting slightly to ensure a secure fit.
- Adjust the earbuds until they feel stable and the sound is clear and balanced.

長時間再生

フィット感いい

日本語アナウンス

操作簡単

## 快適な装着感

人間工学に基いたデザインで自然な装着感を実現しており、耳への負担を軽減できます。最適なイヤピース (S・M・L) を装着することで、装着安定性の向上を実現します。



Image: A diagram illustrating the ergonomic design of the Nakamichi TW130NC earbud and how it fits comfortably and securely within the ear.

ear, emphasizing reduced ear strain and improved stability.

## OPERATING INSTRUCTIONS

The Nakamichi TW130NC earbuds feature intuitive touch controls on each earbud.

### Touch Controls



Image: A visual guide to the touch controls on the Nakamichi TW130NC earbuds, detailing actions for music playback, call management, mode switching, and voice assistant activation.

### Earbud Touch Controls

Function	Action
Play/Pause Music	Double-tap R or L earbud
Next Track	Triple-tap R earbud
Previous Track	Triple-tap L earbud
Volume Up	Single-tap R earbud
Volume Down	Single-tap L earbud
Answer/End Call	Double-tap R or L earbud
Reject Call	Long press R or L earbud for 2 seconds
Switch ANC/Ambient Sound Mode	Long press R earbud for 2 seconds
Activate Bass Boost Mode	Long press L earbud for 2 seconds
Activate Voice Assistant	Quadruple-tap R earbud

### Active Noise Cancellation (ANC)

The ANC feature actively detects and cancels ambient noise, providing a quieter listening experience. This is ideal for noisy environments like commutes or offices.

ノイズキャンセリング

外音取り込み機能

バスブースト機能

## 音楽に没頭

周囲の騒音や雑音をアクティブに検知して効果的に除去します。電車やバス、飛行機の中でも騒音に邪魔されることなく、臨場感溢れる音楽の世界にハマることが可能です。



Image: A person wearing the Nakamichi TW130NC earbuds, with a visual representation of sound waves being cancelled around them, illustrating the effectiveness of the Active Noise Cancellation feature.

## Ambient Sound Mode

Ambient Sound Mode allows you to hear your surroundings without removing the earbuds. This is useful for staying aware of your environment or engaging in conversations while listening to audio.

ノイズキャンセリング

外音取り込み機能

バスブースト機能

## 外音を聞こえる

イヤホンをしたまま外音を聞こえる「外音取り込みモード」を搭載します。音楽を聴きながら、周囲の音を聞きたい時にわざわざイヤホンを外す必要がなく、ワンタッチで外音を取り込めます。



Image: Two individuals interacting while one wears the Nakamichi TW130NC earbuds, demonstrating the Ambient Sound Mode which allows users to hear their surroundings and converse without removing the earbuds.

## Bass Boost Mode

Activate Bass Boost Mode to enhance low frequencies, providing a more powerful and impactful bass experience for certain music genres.

ノイズキャンセリング

外音取り込み機能

バスブースト機能

## 迫力の重低音再生

低音が不足していると感じる場合や、音楽のジャンルによっては低音を強調したい場合に、バスブースト機能を活用することで、ワンタッチで迫力の重低音を体験できます。



Image: A detailed diagram of the Nakamichi TW130NC earbud's internal driver, with sound waves emanating outwards, illustrating the powerful deep bass reproduction achieved through the Bass Boost function.

## Clear Hands-free Calling

Equipped with dual microphones (one for ANC and one for calls), the earbuds effectively reduce ambient noise during phone calls, ensuring your voice is transmitted clearly to the other party.

ナカミチサウンド

クリアな通話

## クリアな通話が可能

二つのマイクを搭載し、周囲の不要な音を抑えてクリアな通話を実現できます。ビデオ会議やオンライン授業などでも騒音に邪魔されることなく、相手に明瞭な声を届けることも可能です。

ノイズキャンセリング用マイク

通話マイク



Image: A diagram highlighting the dual microphone system (noise-cancelling mic and call mic) on the Nakamichi TW130NC earbuds, demonstrating how they work together to provide clear hands-free communication by reducing ambient noise.

## Japanese Voice Prompts

The earbuds provide voice prompts in Japanese to guide you through operations, making it easy to understand the status and prevent incorrect actions.

## MAINTENANCE

### Cleaning

- Regularly clean the earbuds and charging case with a soft, dry, lint-free cloth.
- Remove eartips and clean them with mild soap and water, then dry thoroughly before reattaching.
- Do not use abrasive cleaners, alcohol, or chemical solvents.

## Storage

- When not in use, store the earbuds in their charging case to protect them and keep them charged.
- Store in a cool, dry place away from extreme temperatures and direct sunlight.

## TROUBLESHOOTING

If you encounter issues with your Nakamichi TW130NC earbuds, refer to the following common problems and solutions:

### Common Issues and Solutions

Problem	Solution
Earbuds not pairing	Ensure earbuds are charged. Turn off and on Bluetooth on your device. Forget the device in Bluetooth settings and re-pair.
No sound from one earbud	Place both earbuds back in the case, close it, then open again to reset. Check device audio balance settings.
Charging issues	Ensure the charging cable is securely connected. Try a different USB-C cable and power adapter. Clean charging contacts on earbuds and case.
Low volume or poor sound quality	Adjust volume on both earbuds and connected device. Ensure eartips provide a good seal. Clean any debris from earbud nozzles.
Earbuds disconnect frequently	Ensure you are within Bluetooth range (typically 10 meters/33 feet). Avoid obstacles between earbuds and device.

## SPECIFICATIONS

The following are the technical specifications for the Nakamichi TW130NC Wireless Earbuds:

### Nakamichi TW130NC Technical Specifications

Feature	Detail
Model Number	TW130NC
Noise Control	Active Noise Cancellation
Frequency Response	20 Hz - 20 KHz (typical range)
Sensitivity	96 dB
Connectivity Technology	Wireless
Wireless Communication	Bluetooth 5.3
Impedance	32 Ohm
Control Type	Touch Control
Item Weight	0.05 kg (50 g)
Product Dimensions	5.78 x 3 x 5.28 cm
Earbud Playback Time	Approx. 7 hours

Feature	Detail
Total Playback Time (with case)	Approx. 45 hours
Compatible Devices	Gaming consoles, Tablets, Desktop PCs, Laptops, Mobile Phones

## WARRANTY AND SUPPORT

---

### Manufacturer's Warranty

The Nakamichi TW130NC Wireless Earbuds come with a **1-year manufacturer's warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use.

The warranty does not cover:

- Damage caused by misuse, accident, or unauthorized modification.
- Normal wear and tear.
- Damage from exposure to liquids or extreme temperatures.

### Customer Support

If you have any questions, concerns, or require assistance with your Nakamichi TW130NC Wireless Earbuds, please contact our customer support team. Refer to the contact information provided with your purchase or visit the official Nakamichi website for support details.