



[Manuals.plus](#) /

› [Nakamichi](#) /

› Nakamichi TW130NC Wireless Earphones Instruction Manual

Nakamichi TW130NC

Nakamichi TW130NC Wireless Earphones Instruction Manual

Model: TW130NC

[Contents](#) [Setup](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

[Overview](#) [Package](#)

1. PRODUCT OVERVIEW

The Nakamichi TW130NC Wireless Earphones offer a premium audio experience with advanced features designed for daily use. These in-ear earphones provide Active Noise Cancelling (ANC) to minimize ambient distractions, a Transparency Mode to stay aware of your surroundings, and a Bass Boost function for enhanced low-frequency sound. With Bluetooth 5.3 connectivity, hands-free calling, and up to 45 hours of total playback time, the TW130NC is built for convenience and high-quality sound.



Image: Nakamichi TW130NC Wireless Earphones in their charging case, showcasing the sleek design.

2. PACKAGE CONTENTS

Please check that all items are present in your package:

- Nakamichi TW130NC Wireless Earphones (Left and Right)
- Charging Case
- USB-C Charging Cable

- Eartips (S, M, L sizes)
- Instruction Manual

3. SETUP

3.1. Charging the Earphones and Case

Before first use, fully charge the earphones and charging case.

1. Place the earphones into the charging case. Ensure they are correctly seated; the indicator lights on the earphones will illuminate.
2. Connect the USB-C charging cable to the charging port on the case and the other end to a USB power adapter (not included) or a computer's USB port.
3. The charging case indicator will show charging status. A full charge for the case takes approximately 1.5 hours. The earphones themselves charge in the case, providing up to 7 hours of playback on a single charge, and up to 45 hours total with the charging case.



Image: Earphones and charging case illustrating battery life and charging times.

3.2. Wearing the Earphones

For optimal sound quality and comfort, choose the correct eartip size and ensure a secure fit.

- Select the eartips (S, M, L) that best fit your ears. A good seal is crucial for effective noise cancellation and bass response.
- Gently insert each earphone into your ear canal and twist slightly to secure it. The earphones are designed for a comfortable and stable fit.

ノイズキャンセリング

外音取り込み機能

バスブースト機能

迫力の重低音再生

低音が不足していると感じる場合や、音楽のジャンルによっては低音を強調したい場合に、バスブースト機能を活用することで、ワンタッチで迫力の重低音を体験できます。



Image: Diagram illustrating the ergonomic design for a comfortable and stable fit in the ear.

3.3. Bluetooth Pairing

Follow these steps to pair your earphones with a Bluetooth-enabled device:

1. Open the charging case. The earphones will automatically enter pairing mode, indicated by flashing LED lights.
2. On your device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
3. Select "Nakamichi TW130NC" from the list of found devices.
4. Once connected, a voice prompt will confirm "Connected" (in Japanese). The earphone LEDs will turn off or show a steady light.
5. For single earbud mode, simply remove one earbud from the case. The other earbud can remain in the case or be used independently.

4. OPERATING INSTRUCTIONS

The Nakamichi TW130NC earphones feature touch controls on each earbud for easy management of music, calls, and sound modes.

長時間再生

フィット感いい

日本語アナウンス

操作简单

快適な装着感

人間工学に基づいたデザインで自然な装着感を実現しており、耳への負担を軽減できます。最適なイヤークッション (S・M・L) を装着することで、装着安定性の向上を実現します。

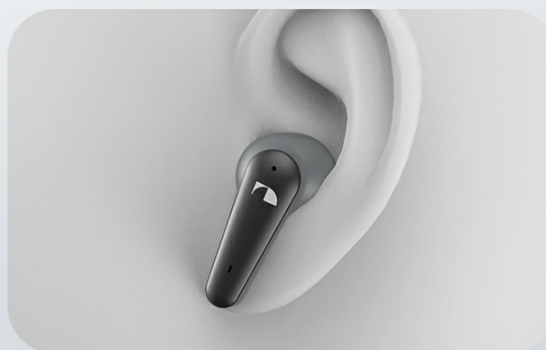


Image: Diagram illustrating the touch control areas on the earphones.

4.1. Music Control

- **Play/Pause:** Double-tap R/L earbud.
- **Next Track:** Triple-tap R earbud.
- **Previous Track:** Triple-tap L earbud.
- **Volume Up:** Single-tap R earbud.
- **Volume Down:** Single-tap L earbud.

4.2. Call Control

- **Answer/End Call:** Double-tap R/L earbud.
- **Reject Call:** Press and hold R/L earbud for 2 seconds.



Image: Earphones in use for a clear call, highlighting the microphone technology.

4.3. Sound Modes

The earphones offer different sound modes to adapt to your environment and preferences.

- **Switch ANC/Transparency Mode:** Press and hold R earbud for 2 seconds. (Voice prompt will confirm mode change).
- **Bass Boost Mode:** Press and hold L earbud for 2 seconds. (Voice prompt will confirm mode change).

Active Noise Cancelling (ANC)

ANC actively detects and cancels out ambient noise, providing a quieter listening experience. Ideal for travel or noisy environments.



Image: A person enjoying music, illustrating the effect of active noise cancellation.

Transparency Mode

This mode allows you to hear your surroundings while still enjoying your audio. Useful for conversations or when you need to be aware of traffic.



Image: A person interacting while wearing the earphones, demonstrating transparency mode.

Bass Boost Mode

Activate this mode for a more powerful and impactful bass response, enhancing genres like EDM and rock.



Image: Internal diagram of the earphone driver, illustrating the bass boost technology.

4.4. Voice Assistant

Activate your device's voice assistant (e.g., Siri, Google Assistant) by quadruple-tapping either R or L earbud.

5. MAINTENANCE

Proper care will extend the life of your Nakamichi TW130NC earphones.

- **Cleaning:** Regularly clean the earphones and charging case with a soft, dry, lint-free cloth. Do not use harsh chemicals or abrasive materials.
- **Eartips:** Remove and clean the eartips with mild soap and water if necessary. Ensure they are completely dry

before reattaching.

- **Storage:** When not in use, always store the earphones in their charging case to protect them and keep them charged.
- **Water Exposure:** The earphones are not waterproof. Avoid exposure to water, moisture, or extreme temperatures.

6. TROUBLESHOOTING

If you encounter issues with your earphones, refer to the following common problems and solutions:

Problem	Solution
Earphones do not turn on.	Ensure the earphones are charged. Place them in the charging case and check the indicator lights.
Cannot pair with device.	Make sure Bluetooth is enabled on your device. Ensure earphones are in pairing mode (open case). Try forgetting the device in your Bluetooth settings and re-pairing.
No sound from one earbud.	Check if both earbuds are charged. Try placing both back in the case, closing it, and then reopening to reset the connection.
Sound quality is poor or distorted.	Ensure eartips provide a good seal. Try different eartip sizes. Move closer to your device to avoid interference.
ANC is not effective.	Ensure ANC mode is activated. Adjust earbud position and eartip size for a better seal.

7. SPECIFICATIONS

Feature	Detail
Brand	Nakamichi
Model	TW130NC
Color	Gray
Ear Placement	In-Ear
Connectivity	Wireless (Bluetooth 5.3)
Bluetooth Version	5.3
Noise Control	Active Noise Cancellation (ANC)
Audio Driver Size	11 mm Dynamic Driver
Impedance	32 Ohms
Sensitivity	96 dB

Feature	Detail
Frequency Response	20 Hz - 20 KHz (typical range)
Playback Time (Earbuds)	Approx. 7 hours
Total Playback Time (with Case)	Approx. 45 hours
Charging Time (Case)	Approx. 1.5 hours
Control Method	Touch
Item Weight	0.05 kg (50 grams)
Additional Features	Bass Boost, Microphone, Transparency Mode, Lightweight
Compatible Devices	Gaming Consoles, Tablets, Desktop PCs, Laptops, Mobile Phones

8. WARRANTY AND SUPPORT

8.1. Manufacturer's Warranty

The Nakamichi TW130NC Wireless Earphones come with a **1-year manufacturer's warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use.

The warranty does not cover:

- Damage caused by misuse, accident, abuse, negligence, or improper operation.
- Damage caused by unauthorized modification or repair.
- Normal wear and tear, including cosmetic damage.
- Damage caused by exposure to water, moisture, or extreme temperatures.

8.2. Customer Support

If you have any questions, concerns, or require assistance with your Nakamichi TW130NC Wireless Earphones, please contact our customer support team. Details for contacting support can typically be found on the Nakamichi official website or through your retailer.

Please have your purchase receipt and product model number (TW130NC) ready when contacting support.