

Gyfirmoie I870001127A

Gyfirmoie 9-Drawer Dresser with Charging Station & LED

MODEL: I870001127A - USER MANUAL

1. Introduction

Thank you for purchasing the Gyfirmoie 9-Drawer Dresser with Charging Station and LED lighting. This dresser is designed to provide ample storage and modern convenience for your bedroom or living space. It features nine spacious drawers, an open storage cubby, an integrated charging station with AC outlets and USB ports, and adjustable LED lights. This manual provides essential information for assembly, operation, maintenance, and troubleshooting to ensure safe and optimal use of your new furniture.



Image: Overview of the 9-Drawer Dresser highlighting its features including ample storage, open cubby, charging station, LED lights, and high-quality materials.

2. Safety Information

WARNING: Serious or fatal crushing injuries can occur from furniture tip-over. To help prevent tip-over:

- Always use the tip-over restraint provided.
- Never allow children to climb or hang on drawers, doors, or shelves.
- Never open more than one drawer at a time.
- Place heaviest items in the lowest drawers.
- Do not place a television or other heavy objects on top of this product unless it is specifically designed to accommodate them.

Electrical Safety:

- Ensure the power cord for the charging station is not pinched or damaged during assembly or use.
- Do not overload the electrical outlets.

- Keep liquids away from the charging station and LED light components.
- Unplug the dresser from the power source before cleaning or if not in use for extended periods.

3. Package Contents

Before beginning assembly, ensure all parts are present and undamaged. Refer to the included parts list in your packaging. Typically, your package will include:

- Dresser panels (top, bottom, sides, back)
- Drawer panels and bottoms
- Drawer slides
- Handles
- Assembly hardware (screws, dowels, cam locks, etc.)
- Charging station unit with power cord
- LED light strip with controller
- Anti-tip kit
- Assembly instructions booklet

4. Assembly Instructions

Assembly requires two adults. Please follow the step-by-step instructions provided in the separate assembly booklet included with your product. Ensure you have a clear, spacious area for assembly and use appropriate tools. Do not overtighten screws.

For a visual guide, please refer to the official assembly video below:

Your browser does not support the video tag.

Video: Detailed assembly guide for the Gyfimoie 9-Drawer Dresser with Charging Station.

Key components and dimensions for reference during assembly:

DIMENSIONS

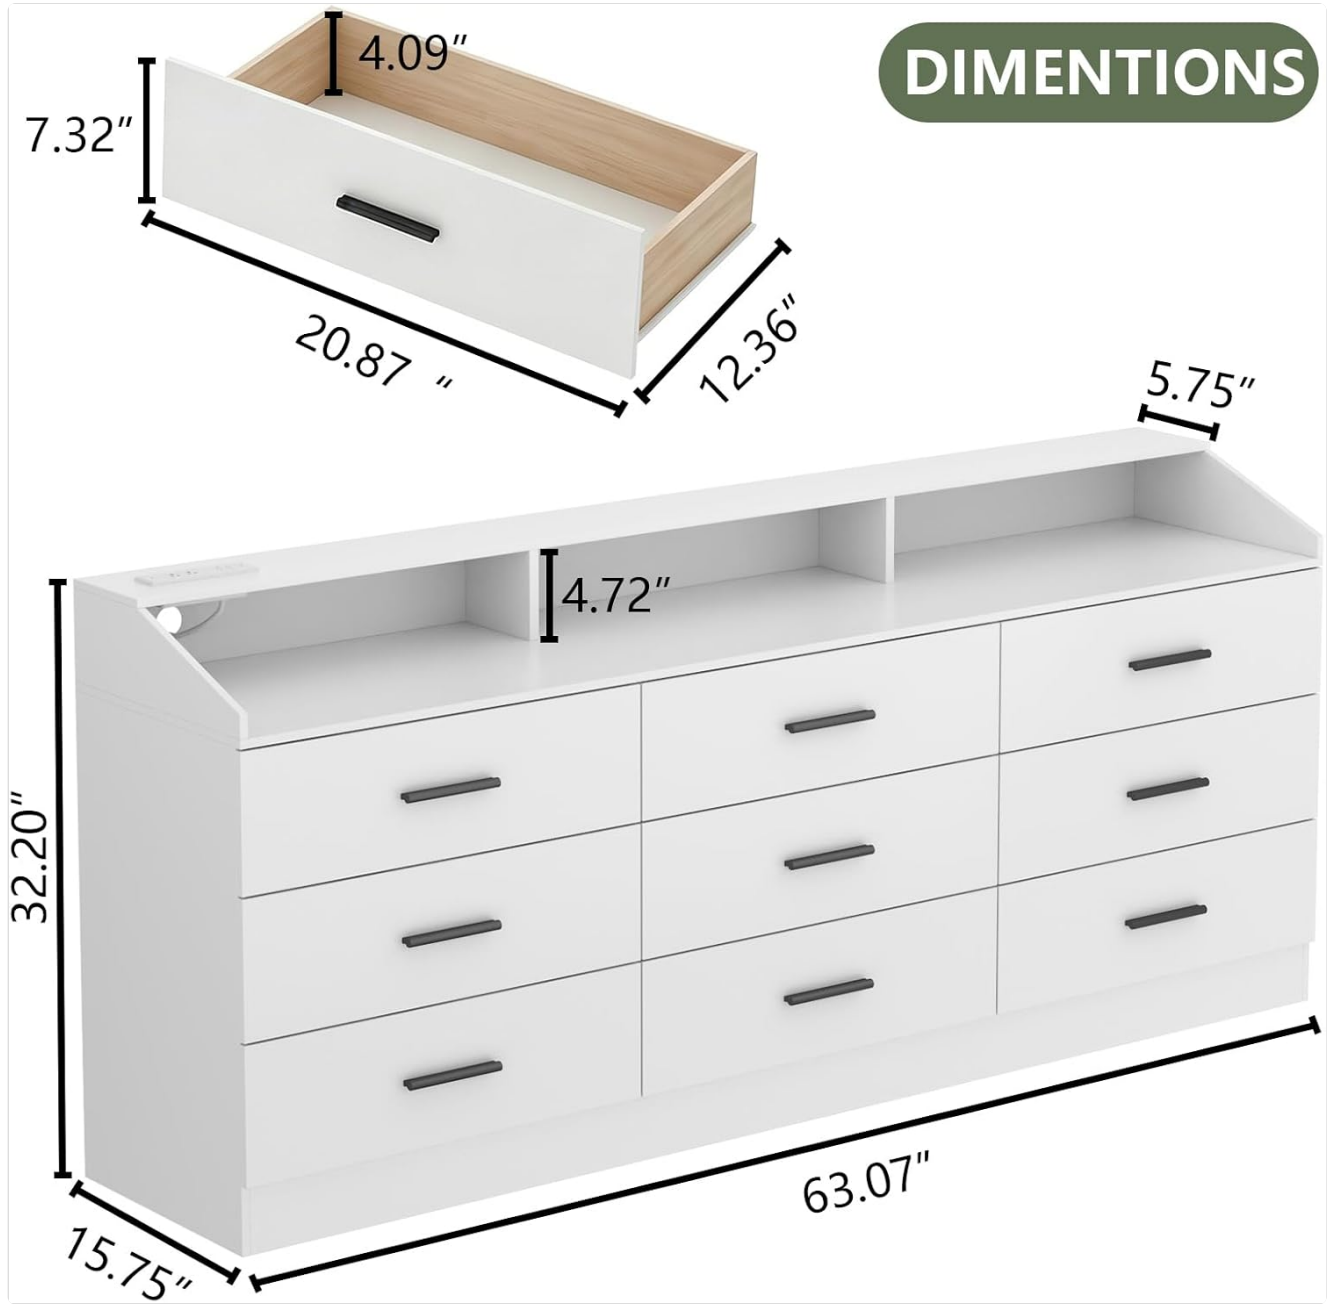


Image: Product dimensions, including overall dresser size and individual drawer measurements.



Image: Details of the dresser's construction, including premium MDF, metal handles, metal drawer slides, and the integrated wire hole.

5. Operating Instructions

5.1 Charging Station

The dresser includes a built-in charging station located on the top surface. To use, simply plug the dresser's main power cord into a standard wall outlet. The charging station provides:

- 2 AC outlets (125V/12A)
- 2 USB ports (5V/2A)

You can charge your phones, tablets, and other electronic devices directly from the dresser. The power cord is approximately 4.9 feet long.

Charging Station

Provide a more convenient charging method



-125V/12A-
2AC outlets



-5V/2A-
2USB Ports



-4.9 Feet-
Power Cord



Image: Detail of the charging station with specifications for AC outlets and USB ports.

5.2 LED Lights

The integrated LED light strip offers adjustable colors and brightness. Control the lights using either the included key control remote or a dedicated smartphone application.

- **Key Control:** Use the physical remote to cycle through RGB colors, adjust brightness, and select various light modes (e.g., static, dynamic, music sync).
- **App Control:** Download the compatible app (refer to the LED light instruction sheet for app details) to access advanced features, including custom color settings, music synchronization, and timing modes.

Adjustable RGB Light Strips



Key Control



RGB Colors



Light Mode



Mic Mode



Music Mode



Timing Mode




App Control

Sync your lights with your favourite music



Light Off Status

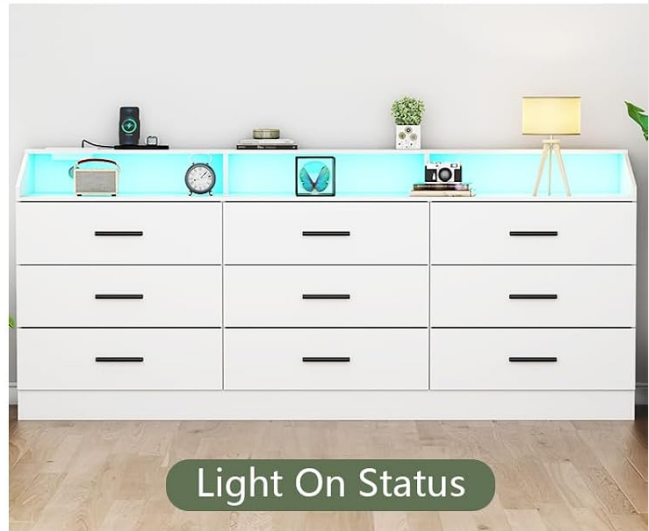

Light On Status



Image: Controls for the adjustable RGB LED light strips, showing options for key control and app control.

See the LED lights and charging station in action:

Your browser does not support the video tag.

Video: Demonstration of the dresser's LED lighting and charging station features.

Your browser does not support the video tag.

Video: Showcase of the dresser's storage capacity and dynamic LED lighting.

6. Maintenance

- **Cleaning:** Wipe the dresser surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners that may damage the finish.
- **Dusting:** Regularly dust with a dry, soft cloth.
- **Drawer Care:** Periodically check drawer slides for smooth operation. If needed, a small amount of silicone lubricant can be applied to the slides.
- **Hardware:** Occasionally check and tighten any loose hardware to ensure stability.

- **Electrical Components:** Keep the charging station and LED lights free from dust and debris. Do not attempt to repair electrical components yourself.

7. Troubleshooting

Problem	Possible Cause	Solution
Drawers do not slide smoothly.	Misaligned slides, debris in tracks, overtightened screws.	Check alignment of drawer slides. Clean tracks. Loosen screws slightly if overtightened.
Charging station not working.	Dresser not plugged in, power outage, faulty outlet, damaged cord.	Ensure dresser is plugged into a working wall outlet. Check circuit breaker. Inspect power cord for damage.
LED lights not turning on/changing color.	LED strip unplugged, remote battery dead, app connection issue.	Check LED strip connection to power source. Replace remote battery. Re-pair app if necessary.
Dresser feels unstable.	Loose hardware, uneven floor.	Tighten all assembly hardware. Ensure dresser is on a level surface; use shims if needed. Install anti-tip kit securely.

8. Specifications

- **Brand:** Gyfimoie
- **Model Name:** Dresser
- **Model Number:** I870001127A
- **Material:** Engineered Wood
- **Color:** White
- **Product Dimensions (D x W x H):** 15.75" x 63.07" x 32.2"
- **Number of Drawers:** 9
- **Item Weight:** 111.6 pounds
- **Charging Station:** 2 AC outlets (125V/12A), 2 USB ports (5V/2A), 4.9 ft power cord
- **LED Lights:** Adjustable RGB, Key Control & App Control
- **Included Components:** Dresser, Charging Station, LED Lights, Anti-Tip Kit

9. Warranty and Support

For warranty information or technical support, please refer to the documentation included with your purchase or contact Gyfimoie customer service through the retailer where the product was purchased. Please have your model number (I870001127A) and purchase date available when contacting support.

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question