

[Manuals.plus](#) /

› [Patoolio](#) /

› Patoolio W6 Electric Pressure Washer User Manual

Patoolio W6

Patoolio W6 Electric Pressure Washer User Manual

Model: W6 | Brand: Patoolio

1. IMPORTANT SAFETY INFORMATION

Please read and understand all safety warnings and instructions before operating the pressure washer. Failure to follow these instructions may result in electric shock, fire, and/or serious injury.

General Safety

- Always wear appropriate personal protective equipment, including eye protection, when operating the pressure washer.
- Ensure the work area is clear of bystanders, children, and pets.
- The unit is equipped with a child safety lock on the handle to prevent accidental activation. Always engage the safety lock when not actively spraying.
- The Total Stop System (TSS) automatically shuts off the pump when the trigger is not engaged, saving energy and prolonging motor life.

Electrical Safety

- Connect the pressure washer to a properly grounded outlet.
- Do not use the pressure washer if the power cord or plug is damaged.
- If an extension cord is necessary, use only outdoor-rated extension cords with a grounded plug and receptacle that accepts the product's plug. Ensure connections remain dry.

Water Safety

- Ensure all water connections are tight to prevent leaks.
- Do not use the pressure washer with contaminated water.

2. PACKAGE CONTENTS

Verify that all items are present in your package:

- Patoolio W6 Electric Pressure Washer Unit
- High-Pressure Hose (23 feet)
- Spray Gun with Adjustable Nozzle
- Foam Cannon/Detergent Bottle
- Water Hose Adapter
- Wheels (2)
- Handle Assembly
- Accessory Hooks
- Microfiber Wash Mitt

3. SETUP INSTRUCTIONS

Follow these steps to assemble and prepare your pressure washer for use.

3.1 Assembly

1. **Attach Wheels:** Insert the two wheels into their designated slots at the base of the pressure washer unit until they click into place.
2. **Install Handle:** Slide the handle assembly onto the top of the main unit. Secure it with the provided screws.
3. **Attach Accessory Hooks:** Install the accessory hooks onto the designated areas of the handle for convenient storage of the spray gun and power cord.

PATOOLIO Pressure Washer

Widely use in different scenerio



Image: Visual guide for installing the handle, connecting the water outlet, and water inlet.

3.2 Connecting Water Supply

1. **Attach Water Hose Adapter:** Securely screw the water hose adapter onto the water inlet connection on the pressure washer unit. Ensure it is tightened to prevent leaks.
2. **Connect Garden Hose:** Attach your garden hose to the water hose adapter. Turn on the water supply to the garden hose.

3.3 Connecting Power and Spray Gun

1. **Connect High-Pressure Hose:** Connect one end of the high-pressure hose to the outlet on the pressure washer unit and the other end to the spray gun. Push firmly until it clicks into place.
2. **Attach Nozzle/Foam Cannon:** Choose between the adjustable nozzle or the foam cannon and attach it to the end of the spray gun.
3. **Plug in Power Cord:** Plug the pressure washer's power cord into a grounded electrical outlet. If needed, use an appropriate outdoor-rated extension cord.

4. OPERATING INSTRUCTIONS

Learn how to effectively use your Patoolio W6 Electric Pressure Washer.

4.1 Starting the Unit

1. Ensure the water supply is turned on and all connections are secure.
2. Turn the main power switch on the pressure washer unit to the 'ON' position.
3. Point the spray gun in a safe direction and squeeze the trigger. The pump will activate and water will begin to spray.

4.2 Adjusting Spray Pattern

The all-in-one nozzle allows for easy adjustment of the spray pattern without changing nozzles. Simply twist the nozzle to select the desired spray angle:

- **0° (Pencil Jet):** For concentrated, high-impact cleaning on tough stains.
- **15-25° (Fan Spray):** Ideal for general cleaning of outdoor furniture, decks, and patios.
- **25-60° (Wider Fan Spray):** Suitable for surface clearing and rinsing.
- **60-120° (Gentle Spray):** For extensive, delicate cleaning tasks like washing cars.

Intensive Foam Sprayer

Detergent does not pass through the pump to extend pump life



External Foam Sprayer

*Detergent does not pass through the pump to extend pump life

Image: The adjustable nozzle allows for quick changes between spray patterns by twisting the head.

4.3 Using the Foam Cannon

For deep cleaning with detergent, attach the foam cannon:

1. Fill the foam cannon bottle with appropriate pressure washer detergent.
2. Attach the foam cannon to the spray gun.
3. Spray the desired surface. The foam cannon will mix the detergent with water to create a thick foam.
4. After applying detergent, remove the foam cannon and reattach the adjustable nozzle to rinse the surface with clean water.

Electric Pressure Washer



Powerful
Pressure



2.6GPM
High Flow Rate



1600w
Power Motor



Image: The external foam sprayer applies detergent without passing it through the pump, extending pump life.

4.4 Adjusting Spray Gun Length

The spray gun features three length adjustments for versatility in various cleaning scenarios. Extend or retract the wand by pressing the release button and sliding the sections to your preferred length.

Easily Adjust Angle

No need to change the nozzle



0° Stains on
solid surfaces



15-25° Outdoor
furniture cleaning



25-60° Surface
clearing



60-120° Extensive
Pressure Cleaning

Image: The spray gun can be adjusted to three different lengths to suit various cleaning needs and reach.

5. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your pressure washer.

5.1 Cleaning

- After each use, flush the system with clean water to remove any detergent residue.
- Clean the exterior of the unit with a damp cloth. Do not use harsh chemicals.
- Inspect the nozzle for blockages and clean if necessary.

5.2 Storage

- Before storing, ensure all water is drained from the pump and hoses to prevent freezing damage.
- Store the pressure washer in a dry, frost-free area.
- Wrap the high-pressure hose and power cord neatly around the designated hooks.

6. TROUBLESHOOTING

Refer to this section for solutions to common issues.

| Problem | Possible Cause | Solution |
|------------------------------|--|---|
| Unit does not start | Power switch off; Not plugged in; Trigger not pulled | Turn power switch ON; Plug into outlet; Squeeze spray gun trigger |
| No water pressure | Water supply off; Kinked hose; Clogged nozzle | Turn on water supply; Straighten hose; Clean nozzle |
| Water leaks from connections | Loose connections; Damaged O-rings | Tighten all connections; Replace damaged O-rings |

7. SPECIFICATIONS

- **Brand:** Patoolio
- **Model Number:** W6
- **Power Source:** Electric
- **Item Weight:** 15 Pounds
- **Hose Length:** 23 Feet
- **Product Dimensions:** 17"L x 13"W x 7"H
- **UPC:** 758675877426

8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your product or contact Patoolio customer service. Keep your purchase receipt for warranty claims.

