

GE 84666

GE BigEZ OneTouch Universal Remote Control User Manual

Model: 84666

1. PRODUCT OVERVIEW

The GE BigEZ OneTouch Universal Remote Control (Model 84666) is designed for simplified control of your television and other audio/video devices. It features an extra-large, white design with large, easy-to-see backlit buttons, and colorblind-friendly volume and channel buttons. This remote is pre-programmed for quick setup with popular TV brands and offers control for up to two devices.

Key Features:

- **OneTouch Setup:** Pre-programmed for Samsung, LG, Vizio, Sony, and Roku TVs.
- **Vision-Friendly Design:** Extra-large remote with backlit buttons and simplified keypad.
- **Colorblind-Friendly:** Distinct blue volume and orange channel buttons.
- **Multi-Device Control:** Operates up to two devices, including TVs, Blu-ray/DVD players, streaming media players, soundbars, and cable/satellite boxes.
- **Master Volume:** Controls volume across all devices.



BigEZ™

Effortless control at
your fingertips

OneTouch®

Image: The GE BigEZ OneTouch Universal Remote in use, highlighting its ease of control for users.



Roku boxes



Roku TV



Samsung, LG, Sony, Vizio



All major brands



Roku streaming sticks

OneTouch®



Image: A visual representation of compatible devices, including Roku boxes, Roku TV, Samsung, LG, Sony, Vizio, and other major brands.

Note: Roku streaming sticks are not compatible.

2. SETUP INSTRUCTIONS

2.1 Battery Installation

The remote requires two (2) AA batteries (not included).

1. Remove the battery cover on the back of the remote by sliding it down.
2. Insert two AA batteries, matching the (+) and (-) polarity indicators inside the battery compartment.
3. Replace the battery cover by sliding it back into place until it clicks.

Your browser does not support the video tag.

Video: This video demonstrates the simple setup process for the GE OneTouch Universal Remote, including battery installation and initial TV programming.

2.2 OneTouch TV Setup (Pre-programmed Brands)

The OneTouch feature allows for quick setup with Samsung, LG, Vizio, Sony, and Roku TVs without needing to enter codes.

1. Ensure your TV is powered on.
2. Press and hold the dedicated brand button on the remote for your TV (e.g., **SAMSUNG**, **LG**, **VIZIO**, **SONY**, or **ROKU TV**).
3. While holding the brand button, press the **POWER** button.
4. Release both buttons. The remote is now programmed for your TV.
5. Test the remote's functions (Power, Volume, Channel). If it does not work, repeat the steps.



Image: The remote highlighting the dedicated brand buttons (Samsung, LG, Sony, Vizio, Roku TV, AUX) for OneTouch programming.

OneTouch®



TV buttons preset
for top brands

Vision-friendly design



Requires 2 AA batteries
(not included)



PATENT
PENDING

Image: A visual guide showing the remote's TV brand buttons and indicating the need for two AA batteries.

2.3 AUX Device Setup

The **AUX** button is preset for Roku boxes. To program it for another device (e.g., soundbar, Blu-ray player, cable box):

1. Turn on the device you wish to control (e.g., soundbar).
2. Press and hold the **AUX** button.
3. While holding **AUX**, press the **POWER** button.
4. Release both buttons.
5. Test the remote's functions with the AUX device. If it does not work, refer to the online programming videos or contact technical support for code entry instructions.

3. OPERATING THE REMOTE

3.1 Basic Functions

- **Power** (⏻): Turns your device on or off.
- **Volume** (**VOL** +/-): Adjusts the volume. The master volume feature allows this to control the volume of the selected device, or a programmed soundbar.
- **Channel** (**CH** +/-): Changes channels.
- **Directional Pad** (▲ ◀ **OK** ▶ ▼): Navigates menus and selects options. The **OK** button also functions as play/pause for streaming devices.
- **Back** (↶): Returns to the previous screen or menu.
- **Home** (🏠): Accesses the home screen of smart TVs or streaming devices.
- **Menu** (☰): Opens the device's menu.
- **Rewind** (⏮), **Fast Forward** (⏭): Controls playback for media.

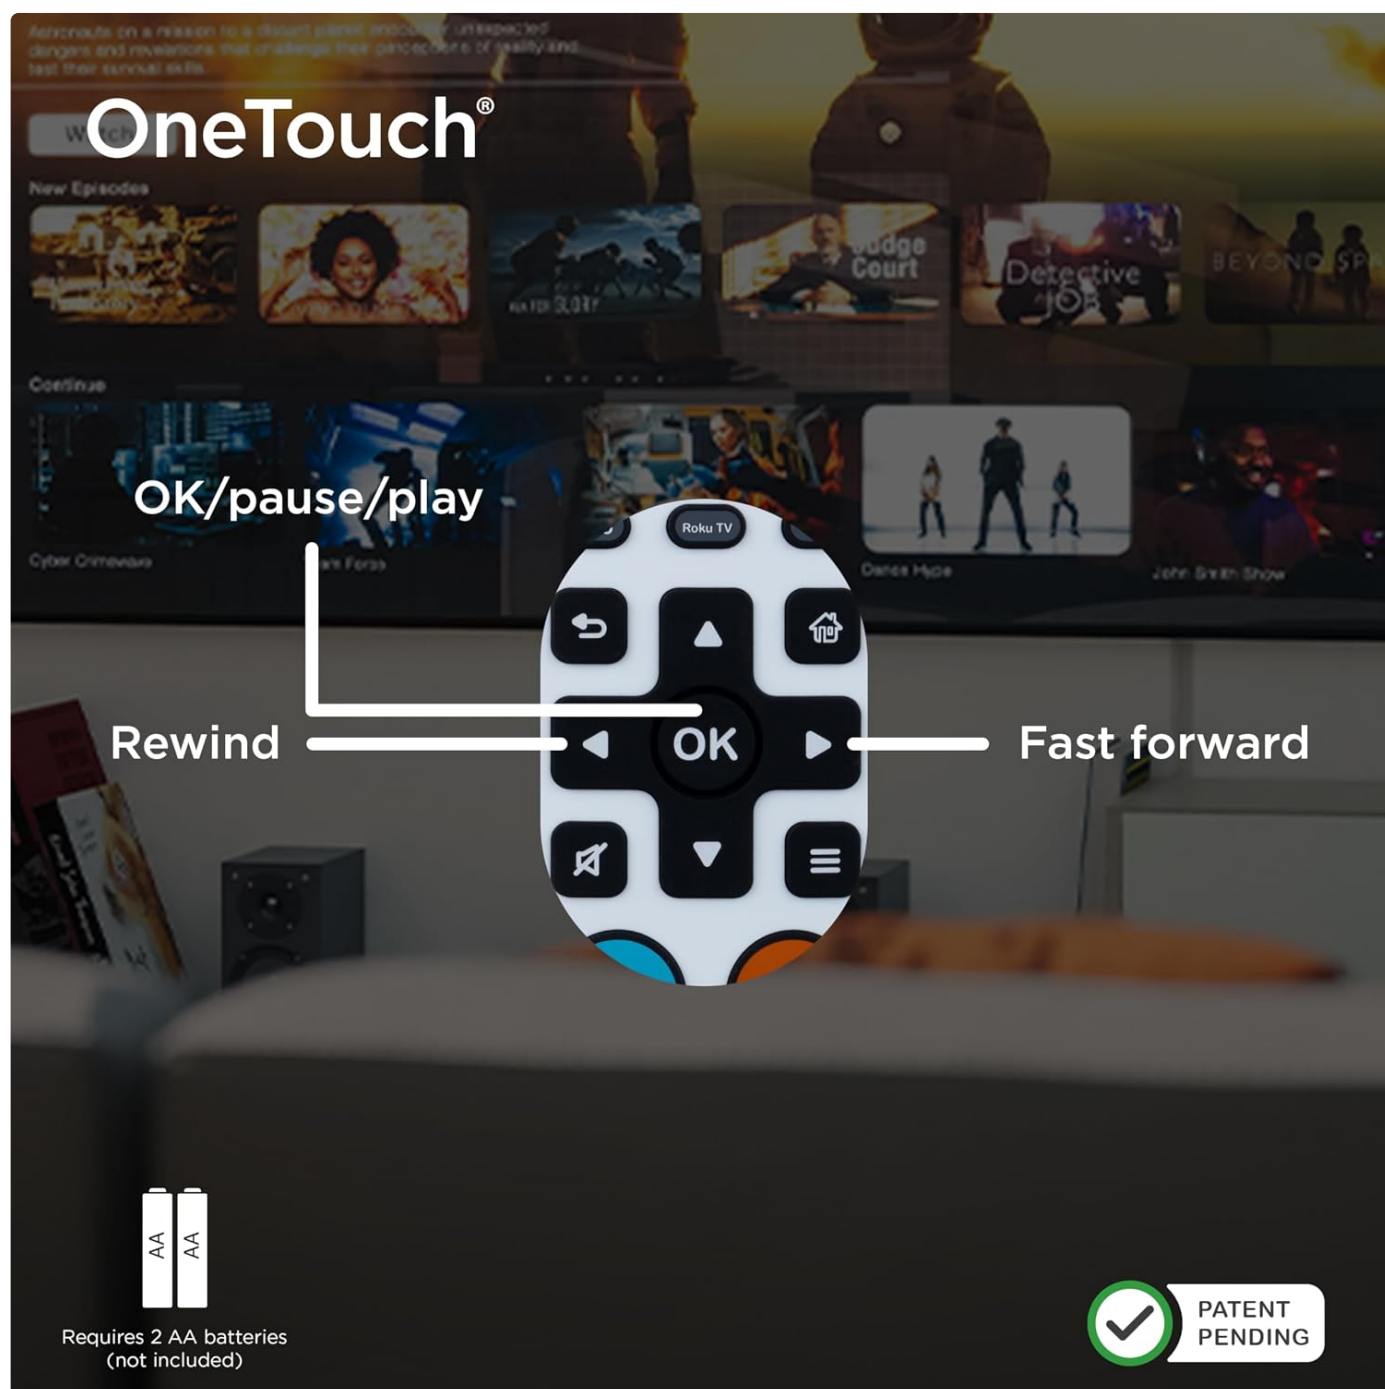


Image: The remote's directional pad, illustrating the functions of OK/play/pause, rewind, and fast forward buttons.

3.2 Backlit Buttons

The remote features backlit buttons for improved visibility in low-light conditions. The backlighting activates automatically when buttons are pressed.



Image: The remote showcasing its easy-to-read backlit buttons, enhancing usability in various lighting conditions.

4. MAINTENANCE

- **Cleaning:** Wipe the remote with a soft, dry cloth. Do not use abrasive cleaners or liquids.
- **Battery Replacement:** Replace batteries when the remote's performance diminishes or if the backlighting becomes dim. Always replace both batteries at the same time with new AA alkaline batteries.
- **Storage:** Store the remote in a dry place away from extreme temperatures.

5. TROUBLESHOOTING

5.1 Remote Not Operating Device

- **Check Batteries:** Ensure batteries are fresh and inserted with correct polarity.
- **Line of Sight:** Make sure there is a clear line of sight between the remote and the device. Obstructions can block the infrared signal.
- **Re-program:** If the remote stops working or was recently moved to a new device, try re-programming it using the OneTouch setup steps (Section 2.2) or AUX setup (Section 2.3).
- **Device Compatibility:** Verify that your device is compatible with a universal remote. While the BigEZ remote works with most major brands, some older or very specific models may not be fully supported.

5.2 Buttons Not Responding Correctly

- **Sticky Buttons:** If buttons feel sticky or unresponsive, clean the remote as described in Section 4.
- **Re-program:** Sometimes a button mapping can become corrupted. Re-programming the remote for your device may resolve this.

5.3 Remote Not Controlling Roku Streaming Stick

The GE BigEZ OneTouch Universal Remote is designed to control Roku boxes and Roku TVs, but it **isnot compatible with Roku streaming sticks**. Please ensure you are attempting to control a compatible Roku device.

6. SPECIFICATIONS

Feature	Detail
Model Number	84666
Brand	GE
Color	White
Power Source	2 AA Batteries (not included)
Max Number of Supported Devices	2
Compatible Devices	Television, Streaming Device (Roku Box/TV), DVD/Blu-ray Player, Soundbar, Cable/Satellite Box
Special Features	Backlit, Big Button, OneTouch Programming, Universal, Vision-Friendly Design
Item Weight	5.6 ounces
Package Dimensions	9.25 x 2.52 x 1.3 inches

7. WARRANTY AND SUPPORT

For technical assistance or any questions regarding your GE BigEZ OneTouch Universal Remote Control, please contact U.S.-based technical support. Support is available Monday-Friday. Additionally, online step-by-step programming videos are available to assist with setup and advanced programming needs. Refer to the manufacturer's website for more details and contact information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

How can I program my GE BigEZ OneTouch Universal Remote (Model 84666) with my Hisense Smart TV so that all buttons, including the OK, Guide, and Source buttons, work properly?

When a universal remote controls only basic functions like volume and numbers but fails to operate advanced keys like OK, Guide, or Source, it usually means the remote is programmed to a code that...

[Read full answer](#)