



Manuals.plus /

› Izzo /

› Izzo Swami 7000i Golf GPS Rangefinder Instruction Manual

## Izzo 7000i

# Izzo Swami 7000i Golf GPS Rangefinder Instruction Manual

Model: 7000i

---

## INTRODUCTION

---

This manual provides detailed instructions for the Izzo Swami 7000i Golf GPS Rangefinder. It covers device setup, operational procedures, maintenance guidelines, and troubleshooting tips to ensure optimal performance and a comprehensive understanding of its features. The Swami 7000i is designed to assist golfers with precise distance measurements and course management.

## SETUP

---

### 1. Charging the Device

Before first use, fully charge the Swami 7000i. Connect the provided USB-C cable to the device's charging port and plug the other end into a compatible USB power adapter. A full charge provides up to 16 hours of operation in GPS mode.

### 2. Power On/Off

To power on the device, press and hold the power button located on the side. To power off, press and hold the power button again until the shutdown prompt appears, then confirm.

### 3. Course Loading and Updates

The Swami 7000i comes preloaded with over 38,000 golf courses worldwide. No downloads, updates, or subscription fees are required for course access. The device automatically recognizes the course you are playing when GPS signal is acquired.

### 4. Initial Settings

Upon first power-on or after a factory reset, you may need to configure basic settings such as language, measurement units (yards/meters), and display preferences. Navigate through the settings menu using the touchscreen interface.

# FRONT, CENTER, BACK DISTANCE

**BACK 175**

**CENTER 158**

**FRONT 142**

**i-CADDIE TECHNOLOGY WILL SUGGEST A CLUB BASED ON DISTANCE TO THE GREEN**

HOLE 1 • PAR 4

# 158

142 | 175

7 Iron YARDS

YDG1 L +0

Image: The Izzo Swami 7000i features an ultra-responsive touchscreen for easy navigation and setting adjustments.

**NO APP OR SUBSCRIPTION REQUIRED.**

**PRELOADED WITH 38,000+ COURSES WORLDWIDE**

HOLE 1 • PAR 4

# 409

391 | 422

Driver YARDS

YDG1 L +0

FCB DISTANCE

FRONT	142	BACK	167
FRONT	111	BACK	140
FRONT	195	BACK	211

HAZARD DISTANCE

HOLE 1 • PAR 4

# 214

RESET

SHOT DISTANCE

-H	1H	2H
	PAR4	
FRONT9	Playing	
4	(+0)	>
-	4	+
	Par	

SCORECARD

IZZO GOLF

10:10 AM

HOLE 1 • PAR 4

# 409

391 | 422

Driver YARDS

YDG1 L +0

SWAMI 7000i

IZZO GOLF

10:10 AM

HOLE 1 • PAR 4

# 409

391 | 422

Driver YARDS

YDG1 L +0

SWAMI 7000i

Image: The device offers high visibility color display options including yellow, blue, and white themes for various lighting conditions.

## OPERATING THE SWAMI 7000i

---

### 1. Basic Navigation and Display

The Swami 7000i utilizes a 2.5-inch color touchscreen display. Swipe and touch gestures allow for intuitive navigation through menus and features. The main screen typically displays distances to the front, center, and back of the green.

### 2. Distance Measurements

The device provides accurate distances to the front, center, and back of the green. These are continuously updated as you move around the course.



Image: View precise front, center, and back distances to the green, along with i-Caddie club recommendations.

### 3. Hazard and Dogleg Distances

Access detailed layup and carry distances to various hazards and doglegs on the course. This feature assists in strategic shot planning.

### 4. I-Caddie Technology

The I-Caddie technology suggests appropriate clubs based on your distance to the flag. This feature utilizes pre-programmed data to provide recommendations.

## ***HIGH VISIBILITY COLOR DISPLAY***



Image: iCaddie Technology provides club recommendations to optimize your shot selection.

### **5. Shot Distance Measurement**

Measure the distance of your shots. Activate this feature at your starting point and walk to where your ball landed. The device will display the distance covered.

### **6. Digital Scorecard**

Utilize the built-in digital scorecard to keep track of your score during a round. Input scores for each hole directly on the device.

### **7. Auto-Hole Advance**

The device features auto-hole advance, automatically progressing to the next hole as you move around the course, ensuring continuous and accurate data display.

### **8. Cart Mounting**

The Swami 7000i includes strong internal magnets for secure attachment to a golf cart frame. Ensure the device is firmly attached before moving the cart.

# MAGNETIC CART MOUNTING



Image: The device can be securely mounted to a golf cart using its integrated magnets.

## Product Overview Video

Your browser does not support the video tag.

Video: This video provides a visual overview of the Izzo Swami 7000i Golf GPS Rangefinder's features and functionality.

## MAINTENANCE

---

### 1. Cleaning

Wipe the device with a soft, damp cloth to remove dirt or debris. Avoid using harsh chemicals or abrasive materials that could damage the screen or casing.

### 2. Storage

Store the Swami 7000i in a cool, dry place when not in use. Avoid extreme temperatures and direct sunlight. For long-term storage, ensure the battery is partially charged (around 50%) to maintain battery health.

### 3. Battery Care

To prolong battery life, avoid fully discharging the device frequently. Recharge the battery as needed. The lithium-ion battery is designed for long-lasting performance.

#### **4. Water Resistance**

The device is water-resistant, meaning it can withstand light rain or splashes. It is not designed for submersion in water. Avoid exposing it to heavy rain or prolonged wet conditions.

### **TROUBLESHOOTING**

---

#### **1. No GPS Signal**

- Ensure you are in an open area with a clear view of the sky.
- Wait a few minutes for the device to acquire satellites.
- Restart the device.

#### **2. Inaccurate Distances**

- Verify that the device has a strong GPS signal.
- Ensure the correct course and hole are selected.
- Check for any obstructions that might interfere with the GPS signal.

#### **3. Device Not Responding**

- Perform a soft reset by holding the power button until the device restarts.
- If unresponsive, ensure the battery is charged.

#### **4. Battery Drains Quickly**

- Reduce screen brightness.
- Ensure the device is fully charged before use.
- Avoid leaving the device in extreme temperatures.

### **SPECIFICATIONS**

---

Feature	Detail
Model Name	7000i
Screen Size	2.5 inches (Color Touchscreen)
Dimensions (LxWxH)	4.5 x 3 x 2 inches
Weight	Approximately 0.18 Kilograms
Battery Life	Up to 16 hours (GPS mode)
Charging Port	USB-C
Courses Preloaded	38,000+ worldwide (no subscription)
Special Features	Touchscreen, I-Caddie Technology, Digital Scorecard, Auto-Hole Advance, Magnetic Cart Mount
Water Resistance	Yes
Material	Plastic

## WARRANTY INFORMATION

---

The Izzo Swami 7000i Golf GPS Rangefinder comes with a **1-year limited warranty** from the date of purchase. This warranty covers manufacturing defects under normal use. For warranty claims or detailed terms and conditions, please refer to the official Izzo Golf website or contact customer support.

## CUSTOMER SUPPORT

---

For further assistance, technical support, or inquiries regarding your Izzo Swami 7000i, please visit the official Izzo Golf website or contact their customer service department. Contact information can typically be found on the manufacturer's website or in the packaging materials.

Online resources may include FAQs, additional guides, and software updates.