

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Topature](#) /

› [Topature TP6 Folding Treadmill User Manual - 1%-12% Incline, Adjustable Handrails, 2.5HP, 12KM/H](#)

Topature TP6

Topature TP6 Folding Treadmill User Manual

Model: TP6

INTRODUCTION

Thank you for choosing the Topature TP6 Folding Treadmill. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new fitness equipment. Please read it thoroughly before initial use and keep it for future reference.

IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of serious injury, read all instructions before using the Topature TP6 treadmill. Keep this manual in a safe place for future reference.

- Always place the treadmill on a level surface.
- Ensure adequate clearance around the treadmill (at least 2 meters behind and 0.6 meters on each side).
- Keep children and pets away from the treadmill during operation.
- Do not use the treadmill if you weigh more than 130 KG.
- Always attach the safety key clip to your clothing before starting the treadmill.
- Consult a physician before starting any exercise program.
- Do not operate the treadmill if it has a damaged cord or plug, or if it is not working properly.
- Wear appropriate athletic footwear and clothing.

SETUP AND ASSEMBLY

The Topature TP6 treadmill is designed for easy setup and does not require complex installation. It is ready to use out of the box.

Unfolding the Treadmill

1. Carefully remove the treadmill from its packaging.
2. Place the folded treadmill on a flat, stable surface.
3. Lift the handrail assembly until it locks into the upright position.
4. Secure the handrail assembly using the adjustment knobs.



Figure 1: Unfolding and securing the handrails of the Toputure TP6 treadmill.

Adjusting Handrails and Incline

The telescopic handrails can be adjusted in height from 82 cm to 115 cm and in angle from 95° to 105° to suit various user heights and exercise preferences.

- To adjust height: Loosen the adjustment knobs on the handrails, slide to the desired height, and tighten securely.
- To adjust angle: Use the angle adjustment mechanism at the base of the handrails to select between 95° and 105° positions.

Ajuste del ángulo del Reposabrazos en dos Etapas



Figure 2: Adjustable handrails for personalized comfort and support.

The treadmill also features three incline levels: 1%, 6%, and 12%. These can be manually adjusted to simulate different terrains and increase workout intensity.

1% - 6% - 12% Tres Niveles de Ajuste de Pendiente Quemar Calorías de Manera más Eficiente

200Kcal/H 🔥

300Kcal/H 🔥

650Kcal/H 🔥

1% Inclinación

6% Inclinación

12% Inclinación



Figure 3: Three incline levels for varied workout intensity.

OPERATING INSTRUCTIONS

Getting Started

1. Plug the power cord into a grounded electrical outlet.

2. Attach the safety key to the designated area on the console and clip the other end to your clothing. The treadmill will not operate without the safety key in place.
3. Step onto the treadmill belt, holding onto the handrails for balance.
4. Press the START button on the console or remote control to begin your workout.



Figure 4: LED display and magnetic remote control for easy operation.

Adjusting Speed and Monitoring Progress

The treadmill offers a speed range of 1 to 12 KM/H. You can adjust the speed using the '+' and '-' buttons on the console or the remote control.

The multifunction LED display shows real-time data including time, calories burned, speed, and distance. This allows you to monitor your exercise status at a glance.

Smart APP Integration

Connect your treadmill to the sports APP via Bluetooth. The intelligent APP control allows you to record all your exercise data and share it. The enhanced device holder securely holds your phone or tablet, allowing you to enjoy media during your workout.

Workout Modes

The 6-in-1 folding treadmill supports various scenarios:

- **Walking Mode:** Ideal for light exercise or warm-ups.
- **Fat Burning Mode:** Optimized for calorie expenditure.
- **Office Work Mode:** Use with a standing desk for active work.
- **Pet Training Mode:** Suitable for exercising pets.
- **Running Mode:** For moderate to intense cardio workouts.
- **Rehabilitation Mode:** Gentle exercise for recovery.

Motor Potente y Silencioso de **2.5 HP**



Bajo Nivel de Ruido
45db



Rango de Velocidad
1-12KM/H



Potencia del Motor
2.5HP



Capacidad de Peso
130KG



Figure 5: Versatile 6-in-1 functionality for various exercise needs.

Stopping the Treadmill

To stop the treadmill, press the STOP button on the console or remote control. If the safety key is removed, the treadmill will stop immediately.

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your Toputure TP6 treadmill.

Cleaning

- Wipe down the treadmill after each use with a damp cloth to remove sweat and dust.
- Do not use abrasive cleaners or solvents.

Lubrication

The treadmill features lubrication holes for easy maintenance. Regular lubrication of the running belt is crucial for smooth operation and to prevent wear.

- Refer to the specific lubrication instructions provided with your treadmill for the correct type and amount of lubricant, and frequency of application.
- The unique design of the lubrication holes allows for easy identification of the lubrication position.

Fácil Almacenamiento y Ahorro de Espacio



Figure 6: Lubrication holes for simplified maintenance of the running belt.

Belt Adjustment

If the running belt becomes misaligned or too loose/tight, it may need adjustment. Consult the detailed instructions in the full user manual for proper belt tensioning and centering procedures.

TROUBLESHOOTING

This section addresses common issues you might encounter with your Toputure TP6 treadmill.

Problem	Possible Cause	Solution
Treadmill does not start.	Power cord not plugged in; Safety key not in place; Power switch off.	Ensure power cord is securely plugged in; Insert safety key; Turn on power switch.
Running belt slips or hesitates.	Belt too loose; Insufficient lubrication.	Adjust belt tension (refer to full manual); Lubricate the running belt.
Unusual noise during operation.	Loose components; Belt misalignment; Motor issue.	Check and tighten all visible bolts and screws; Adjust belt alignment; If noise persists, contact customer support.
Inaccurate display readings.	Sensor malfunction; Calibration needed.	Ensure all connections are secure; Refer to the full manual for calibration steps or contact support.

For issues not listed here or if solutions do not resolve the problem, please contact Toputure customer support.

SPECIFICATIONS

Feature	Detail
Brand	Toputure
Model Number	TP6
Motor Horsepower	2.5 HP
Speed Range	1 - 12 KM/H
Incline Levels	1%, 6%, 12% (manual adjustment)
Running Surface	40 x 100 cm
Max User Weight	130 KG
Handrail Height Adjustment	82 cm to 115 cm
Handrail Angle Adjustment	95° to 105°
Display	Multifunction LED (Time, Calories, Speed, Distance)
Connectivity	Bluetooth for APP integration
Cushioning System	7-layer anti-slip belt, 8 silicone shock absorbers, 2 soft rubber pads
Product Dimensions (L x W x H)	127.3 x 64.2 x 13 cm (folded)
Product Weight	25.4 kg
Material	Alloy Steel

Tres Formas de Ajustar la Velocidad



Figure 7: Compact design and transport wheels for easy storage and movement.

PRODUCT VIDEOS

Treadmill Setup and Usage

Your browser does not support the video tag.

This video demonstrates the setup process and general usage of a similar treadmill model, including unfolding, securing the handrails, and starting a workout. Note: This video features the FITFIU Fitness MC-160, which shares similar operational principles with the Toputure TP6.

Treadmill Features Overview

Your browser does not support the video tag.

This video provides an overview of the features and benefits of a similar treadmill model, showcasing its compact design, ease of use, and various exercise capabilities. Note: This video features the FITFIU Fitness MC-160, which shares similar operational principles with the Toputure TP6.

WARRANTY AND SUPPORT

For warranty information, product support, or to purchase replacement parts, please contact Toputure customer service. Keep your purchase receipt and model number (TP6) handy when contacting support.

The product includes a user manual in the box. Additional warranty information may be available upon product registration with the manufacturer.