

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [BNCF](#) /

> [BNCF Bpad 10 SE 10.1-inch Android 16 Tablet User Manual](#)

## BNCF Bpad 10 SE

# BNCF Bpad 10 SE 10.1-inch Android 16 Tablet User Manual

Model: Bpad 10 SE | Brand: BNCF

## 1. INTRODUCTION

---

This manual provides essential information for setting up, operating, and maintaining your BNCF Bpad 10 SE 10.1-inch Android 16 Tablet. Please read this guide thoroughly before using your device to ensure optimal performance and longevity.

## 2. KEY FEATURES

---

- **Android 16 Operating System:** Experience enhanced performance, deeper customization, improved battery efficiency, and robust privacy protection with the latest Android OS. Features include AI-driven operation prediction, Gemini integration for intuitive control, and advanced security like Theft Detection Lock.
- **120Hz High Refresh Rate Display:** Enjoy a large, clear 10.1-inch HD IPS display with 1280x800 resolution. The 120Hz refresh rate ensures smooth scrolling and fluid visuals, reducing eye strain during web browsing, document review, and video playback. IPS panel technology provides wide viewing angles and vivid color reproduction.
- **Unisoc T7200 Octa-Core Processor:** Powered by the Unisoc T7200 8-core chip, this tablet delivers high-speed processing and excellent power efficiency. It ensures smooth app launches, seamless multi-tab browsing, and quick downloads, making it suitable for video editing and demanding games.
- **Ample Memory and Expandable Storage:** The tablet features 16GB of RAM (4GB built-in + 12GB virtual expansion) for smooth multitasking across multiple applications. It comes with 64GB or 128GB of internal storage, expandable up to 1TB via a microSD card, providing ample space for high-quality videos, photos, music, and games.
- **Versatile Connectivity:** Supports dual-band Wi-Fi (2.4GHz & 5GHz) for stable and fast internet access. Bluetooth 5.0 offers low-power, stable connections to wireless headphones and speakers. Integrated high-precision GPS provides accurate location information for navigation and outdoor activities.
- **3.5mm Headphone Jack & FM Radio:** A standard 3.5mm headphone jack allows for wired audio connections without battery concerns or Bluetooth latency. The built-in FM radio tuner provides free access to music, news, and sports without requiring an internet connection, useful for saving data or during emergencies.
- **Widevine L1 Certification:** With Widevine L1 certification, the tablet supports high-definition (HD) playback on major streaming services like Netflix, Amazon Prime Video, and YouTube, ensuring a premium

entertainment experience without quality degradation.

- **6000mAh Large Capacity Battery:** A high-capacity 6000mAh battery supports extended usage throughout the day, from work to entertainment. This reduces the need for frequent charging, allowing for uninterrupted digital experiences.
- **Dual Stereo Speakers:** Equipped with dual stereo speakers positioned on both sides, the tablet creates an immersive, three-dimensional soundstage. This enhances the audio experience for music, movies, and games, providing clear and balanced sound even at high volumes.
- **Slim and Lightweight Design:** Measuring just 8.2mm thin and weighing approximately 445g, the tablet is highly portable. Its sleek, premium design makes it comfortable to hold for extended periods, whether reading on the sofa or watching videos in bed.
- **Dual Cameras:** Features a 2MP front camera and a 5MP rear camera, suitable for video calls, online classes, remote work, and capturing everyday moments.

### 3. DEVICE OVERVIEW



Image: Overview of the BNCf Bpad 10 SE tablet's physical features and ports.

### Package Contents:



Image: Package contents including the tablet, instruction manual, charger, and Type-C cable.

- BNCf Bpad 10 SE Tablet
- Instruction Manual
- Charger
- Type-C USB Cable

### 4. SETUP

#### 4.1 Initial Power On

1. Press and hold the **Power Button** (located on the side, refer to Device Overview) until the BNCf logo appears.
2. Follow the on-screen prompts to select your language, region, and accept the terms and conditions.

## 4.2 Connecting to Wi-Fi

1. From the home screen, swipe down from the top to open the Quick Settings panel.
2. Tap the **Wi-Fi icon** to turn it on.
3. Tap and hold the Wi-Fi icon to open Wi-Fi settings.
4. Select your desired network from the list and enter the password if prompted.
5. The tablet supports both 2.4GHz and 5GHz Wi-Fi bands. Choose the appropriate band for your network for optimal performance.



Image: Visual representation of Wi-Fi and Bluetooth connectivity.

## 4.3 Inserting a microSD Card

1. Locate the SIM/microSD card slot on the side of the tablet (refer to Device Overview).
2. Use the provided SIM ejector tool to open the tray.
3. Carefully place the microSD card into the designated slot on the tray.
4. Insert the tray back into the tablet until it clicks into place.

## 5. OPERATING INSTRUCTIONS

---

### 5.1 Basic Navigation

- **Swipe:** Move your finger across the screen to scroll through content or switch between home screens.
- **Tap:** Touch an icon or option to open it or select it.
- **Tap and Hold:** Press and hold an item to reveal additional options or move it.
- **Pinch-to-Zoom:** Place two fingers on the screen and spread them apart or pinch them together to zoom in or out.

### 5.2 Split Screen Functionality

The tablet supports split-screen mode, allowing you to use two applications simultaneously.

1. Open the first application you wish to use.
2. Swipe up from the bottom of the screen and hold to access the recent apps view.
3. Tap the app icon at the top of the first app's card and select "Split top" or "Split left" (depending on orientation).
4. Choose the second application from the recent apps list or the app drawer to fill the other half of the screen.

Your browser does not support the video tag.

**Video:** Demonstration of the tablet's screen split feature, allowing two apps to run side-by-side.

## 5.3 Camera Usage

The tablet is equipped with a 2MP front camera and a 5MP rear camera.

1. Open the **Camera app** from the home screen or app drawer.
2. Tap the **shutter button** to take a photo.
3. Tap the **camera switch icon** to toggle between the front and rear cameras.
4. Select **Video mode** to record videos.



**Image:** The tablet being used for video calls, demonstrating its camera capabilities.

## 5.4 Using GPS

The integrated GPS allows for accurate location tracking and navigation.

1. Ensure Location Services are enabled in your tablet's settings.
2. Open a mapping or navigation application (e.g., Google Maps).
3. The tablet will use GPS to determine your current location and provide route guidance.



**Image:** Tablet used for navigation outdoors, showcasing GPS functionality.

## 5.5 FM Radio

The tablet includes a built-in FM radio tuner.

1. Connect wired headphones to the 3.5mm headphone jack; they act as the antenna.
2. Open the **FM Radio app**.
3. Scan for available stations and select your desired frequency.



**Image:** Person using the tablet to listen to FM radio with wired headphones.

## 6. MAINTENANCE

---

## 6.1 Battery Care

- Avoid fully discharging the battery frequently.
- Do not expose the tablet to extreme temperatures.
- Use only the provided charger and Type-C cable for charging.

## 6.2 Cleaning

- Use a soft, lint-free cloth to clean the screen and body of the tablet.
- Avoid using harsh chemicals or abrasive materials.

## 6.3 Software Updates

Regularly check for and install software updates to ensure your tablet has the latest features and security patches.

1. Go to **Settings > System > System update**.
2. Follow the on-screen instructions to download and install any available updates.

# 7. TROUBLESHOOTING

---

## 7.1 Common Issues and Solutions

Issue	Possible Solution
Tablet does not power on	Ensure the battery is charged. Connect the charger and wait a few minutes before attempting to power on again.
Wi-Fi connection issues	Check if Wi-Fi is enabled. Restart your router and the tablet. Ensure you are within range of the Wi-Fi signal.
Slow performance	Close unnecessary background applications. Clear cache for frequently used apps. Consider performing a factory reset if the issue persists (back up your data first).
Battery drains quickly	Reduce screen brightness. Disable unused features like GPS, Bluetooth, or Wi-Fi when not needed. Close power-intensive applications.
Screen is unresponsive	Restart the tablet. If the issue continues, perform a factory reset (back up your data).

# 8. SPECIFICATIONS

---

Feature	Specification
Brand	BNCF
Model Name	Bpad 10 SE
Operating System	Android 16
Screen Size	10.1 inches

Feature	Specification
Display Resolution	1280x800 pixels
CPU Brand	Unisoc
CPU Speed	1.6 GHz
Memory Storage Capacity	16 GB (RAM)
Rear Camera Resolution	5 MP
Front Camera Resolution	2 MP
Wireless Type	802.11ac, 802.11b, 802.11g, 802.11n (2.4G+5G Wi-Fi), Bluetooth 5.0
Connectivity	Wi-Fi, Bluetooth, GPS, FM
Battery Capacity	6000 mAh
Product Dimensions	24 x 16 x 0.82 cm
Item Weight	445 g

## 9. WARRANTY AND SUPPORT

---

For warranty information, technical support, or service inquiries, please refer to the warranty card included in your product packaging or contact the seller directly. Keep your purchase receipt as proof of purchase.