



Manuals.plus /

› Festisoul /

› Festisoul Stainless Steel Countertop Ice Maker Machine (Model P866-qURf4C6XCdL-N-ZJAKRFm7d) User Manual

Festisoul P866-qURf4C6XCdL-N-ZJAKRFm7d

Festisoul Stainless Steel Countertop Ice Maker Machine

MODEL: P866-qURf4C6XCdL-N-ZJAKRFm7d USER MANUAL

1. Introduction

Thank you for choosing the Festisoul Stainless Steel Countertop Ice Maker Machine. This appliance is designed to provide a continuous supply of chewable nugget ice, perfect for various beverages and occasions. Its compact design, self-cleaning function, and user-friendly operation make it a convenient addition to any home, office, or party setting. Please read this manual thoroughly before operating the ice maker to ensure safe and efficient use.

2. Important Safety Instructions

To reduce the risk of fire, electric shock, or injury, always follow these basic safety precautions:

- Read all instructions before using the appliance.
- Ensure the power outlet is properly grounded.
- Use only potable (drinkable) water in the ice maker.
- Do not place the appliance near heat sources such as ovens, radiators, or direct sunlight.
- Do not immerse the power cord, plug, or the appliance itself in water or other liquids.
- Unplug the ice maker from the power outlet before cleaning, servicing, or when not in use.
- Supervise children closely when the appliance is in use.
- Ensure adequate ventilation around the appliance (at least 5 inches of space on all sides).
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not attempt to repair or replace any part of your ice maker unless specifically recommended in this manual. All other servicing should be referred to a qualified technician.

Make an Appointment to Have Fresh Ice Anytime

Schedule your ice making when you leave and enjoy fresh ice immediately when you get back



Figure 2.1: Safety certifications for the ice maker, ensuring product quality and user safety.

3. Package Contents

Upon unpacking, please ensure all items are present and in good condition:

- Festisoul Countertop Ice Maker Machine
- Ice Scoop
- Water Drain Cap (pre-installed or separate)

4. Product Features

- **Fast Ice Making & Large Capacity:** Equipped with a 3-quart water reservoir, this ice maker produces up to 44 pounds of chewable nugget ice in 24 hours, with the first batch ready in 10-15 minutes. Ideal for continuous ice supply for various needs.



Figure 4.1: The ice maker's capacity and speed of ice production.

- **Chewable Nugget Ice:** Produces soft, crunchy nugget ice that absorbs flavors easily and is pleasant to chew, enhancing the experience of your favorite drinks.



Figure 4.2: Close-up of the chewable nugget ice in a beverage.

- **Self-Cleaning Function:** Features an automatic self-cleaning cycle activated by a single button

press, simplifying maintenance and ensuring hygienic ice production. A built-in drain hole facilitates water discharge.



Figure 4.3: Diagram showing the internal water flow during the self-cleaning cycle and the drain hole location.

- **User-Friendly Operation:** An intuitive LCD screen displays real-time alerts for low water levels or a full ice basket, preventing energy waste and overflows. The control panel allows for easy ice making and timer settings.



Figure 4.4: The smart control panel with indicators for water and ice status.

- **Portable and Versatile:** Its lightweight and compact design allows for easy relocation, making it suitable for kitchens, living rooms, offices, outdoor parties, RVs, and small apartments.

Making Ice Is So Easy



Figure 4.5: Dimensions and capacity of the portable ice maker.

5. Setup

1. **Unpack and Inspect:** Carefully remove the ice maker from its packaging. Inspect for any shipping damage. Remove all packing materials, tapes, and protective films.
2. **Placement:** Place the ice maker on a stable, level surface away from direct sunlight and heat sources. Ensure there is at least 5 inches of clearance around the unit for proper ventilation.
3. **Initial Cleaning:** Before first use, it is recommended to clean the interior of the ice maker. Refer to the "Maintenance and Cleaning" section for detailed instructions.
4. **Add Water:** Open the lid and fill the water reservoir with potable water up to the "MAX" fill line. Do not overfill.
5. **Connect Power:** Plug the power cord into a grounded electrical outlet.

6. Operating Instructions

Follow these steps to operate your Festisoul Ice Maker:

1. **Add Water:** Ensure the water reservoir is filled with potable water up to the MAX line.
2. **Start Ice Making:** Press the **"ICE/CLEAN"** button once to begin the ice-making cycle. The ice indicator on the LCD screen will illuminate.
3. **Monitor Indicators:** The LCD screen will display alerts for:
 - **Water Shortage:** If the water level is too low, the indicator will light up. Add more water to resume ice production.
 - **Ice Full:** When the ice basket is full, the indicator will light up, and the machine will pause. Remove ice to resume.
4. **Use Timer Function (Optional):** To schedule ice making, press the **"TIMER"** button and use the **"UP"** and **"DOWN"** arrows to set the desired delay time (in hours) before ice making begins.



Figure 6.1: Setting the timer for delayed ice production.

5. **Collect Ice:** Once ice is produced, use the provided ice scoop to remove it from the ice basket.

Auto Self-Cleaning

Go relax, let the machine clean itself



Figure 6.2: Simple three-step process for making ice.

Operating Video Guide

Your browser does not support the video tag.

Video 6.1: This video demonstrates the key features of the Festisoul Ice Maker, including adding water, initiating self-cleaning, draining water, starting ice production, and collecting the finished nugget ice. It also shows the timer function and the final product in various beverages.

7. Maintenance and Cleaning

7.1. Self-Cleaning Function

The ice maker features an automatic self-cleaning cycle:

1. Ensure the water reservoir is filled with clean water.
2. Press and hold the **"ICE/CLEAN"** button for approximately 5 seconds. The self-cleaning cycle will begin.
3. The cycle will run for a set duration, circulating water to clean internal components.
4. Once the cycle is complete, drain the water from the reservoir using the drain cap located at the bottom of the unit.

7.2. Manual Cleaning

For thorough cleaning or if the self-cleaning function is insufficient:

1. **Unplug the Appliance:** Always disconnect the ice maker from the power outlet before cleaning.
2. **Drain Water:** Remove the water drain cap from the bottom of the unit and allow all water to drain out. Replace the cap securely.
3. **Clean Interior:** Use a soft cloth dampened with a mild detergent solution (e.g., diluted vinegar or lemon juice) to wipe the interior surfaces, including the ice basket and water reservoir.
4. **Rinse:** Fill the reservoir with clean water and run a short ice-making cycle (without collecting ice) to rinse. Then, drain the water completely. Repeat this rinsing process 2-3 times to ensure no detergent residue remains.
5. **Clean Exterior:** Wipe the exterior of the ice maker with a soft, damp cloth. Do not use abrasive cleaners or solvents.
6. **Dry:** Ensure all parts are thoroughly dry before plugging the unit back in for use or storage.

8. Troubleshooting

If you encounter issues with your ice maker, refer to the following table for common problems and solutions:

Problem	Possible Cause	Solution
Ice maker not producing ice.	No power; insufficient water; high ambient temperature.	Check power connection; fill water reservoir; ensure proper ventilation and cooler environment.
"Water Shortage" indicator is on.	Water reservoir is empty or below minimum level.	Add potable water to the reservoir up to the MAX line.
"Ice Full" indicator is on.	Ice basket is full.	Remove ice from the basket. The machine will resume automatically.
Ice is too soft or melts quickly.	High ambient temperature; poor water quality.	Ensure the ice maker is in a cool, well-ventilated area. Use filtered or distilled water.
Unusual noise during operation.	Unit not level; internal obstruction.	Place the unit on a stable, level surface. Unplug and check for any foreign objects in the ice-making mechanism.

9. Specifications

Feature	Detail
Brand	Festisoul
Model Name	P866-qURf4C6XCdL-N-ZJAKRFm7d
Product Dimensions (D x W x H)	9.5"D x 13.2"W x 15.4"H
Capacity (Ice Production)	44 Pounds per 24 Hours
Voltage	115V
Item Weight	31.8 Pounds
Included Components	Water Drain Cap with Ice Maker, Ice Scoop
Refrigerant	R600a

10. Warranty and Support

The Festisoul Stainless Steel Countertop Ice Maker Machine comes with a standard manufacturer's warranty. For specific warranty details, including coverage duration and terms, please refer to the warranty card included with your product or contact Festisoul customer support.

If you require technical assistance, have questions about operation, or need to report a defect, please contact our customer support team through the retailer where you purchased the product or visit the official Festisoul website for contact information.