

[manuals.plus](#) /

› [Genérico](#) /

› [Genérico KA 8001 Portable Bluetooth Speaker User Manual](#)

Genérico KA 8001

Genérico KA 8001 Portable Bluetooth Speaker

User Manual

INTRODUCTION

Thank you for choosing the Genérico KA 8001 Portable Bluetooth Speaker. This compact and powerful speaker is designed to deliver enhanced bass and excellent sound quality, allowing you to enjoy your favorite music wirelessly for hours. With its integrated LED lights and instant pairing capabilities, it's perfect for various environments.

This manual provides detailed instructions for setting up, operating, and maintaining your speaker to ensure optimal performance and longevity.

PRODUCT OVERVIEW

Familiarize yourself with the components and features of your KA 8001 speaker.



Suporte Para Apoiar o Celular

Alça de mão



Image: Front and back view of the KA 8001 speaker, highlighting the phone holder and carry handle.

Speaker Components

- **Main Speaker Unit:** Delivers audio output.
- **LED Lights:** Integrated colored LED lights for visual effects.
- **Phone Holder:** Integrated slot on top to securely hold a smartphone.
- **Carry Handle:** For easy portability.

Control Panel and Ports



Image: Close-up of the speaker's back panel, showing the charging port, USB port, TF card slot, and On/Off switch.

- **DC 5V Micro USB Input:** For charging the speaker's internal battery.
- **USB Port:** For playing audio from a USB flash drive (pendrive).
- **TF Card Slot (Micro SD):** For playing audio from a Micro SD card.
- **ON/OFF Switch:** To power the speaker on or off.



Image: Close-up of the speaker's control buttons, including Mode, Play/Pause, Volume Down/Previous, and Volume Up/Next.

- **M (Mode) Button:** Switches between Bluetooth, USB, TF Card, and potentially AUX modes.
- **Play/Pause Button:** Plays or pauses audio playback.
- **- (Volume Down / Previous Track) Button:** Short press for previous track, long press to decrease volume.
- **+ (Volume Up / Next Track) Button:** Short press for next track, long press to increase volume.

SETUP

1. Charging the Speaker

1. Locate the **DC 5V Micro USB Input** port on the back of the speaker.
2. Connect the provided power cable to the Micro USB port on the speaker and the other end to a

standard USB power adapter (not included) or a computer's USB port.

3. The charging indicator light (if present) will illuminate, typically red, during charging.
4. Once fully charged, the indicator light may change color or turn off. A full charge provides hours of wireless playback.

Note: It is recommended to fully charge the speaker before its first use.

2. Powering On/Off

1. To power on the speaker, slide the **ON/OFF Switch** to the "ON" position. You will hear an audible prompt, and the LED lights will activate.
2. To power off the speaker, slide the **ON/OFF Switch** to the "OFF" position.

OPERATION

1. Bluetooth Connection

1. Ensure the speaker is powered on and in Bluetooth mode. If not, press the **M (Mode) Button** until you hear a "Bluetooth mode" prompt. The LED lights may flash to indicate pairing mode.
2. On your mobile device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
3. Select "KA 8001" or a similar name from the list of found devices.
4. Once connected, you will hear a confirmation sound, and the LED lights may change their flashing pattern.
5. You can now play audio from your device through the speaker.

2. USB Flash Drive (Pendrive) Playback

1. Insert a USB flash drive containing MP3 audio files into the **USB Port** on the back of the speaker.
2. The speaker should automatically switch to USB mode and begin playing the first track. If not, press the **M (Mode) Button** to select USB mode.

3. TF Card (Micro SD) Playback

1. Insert a Micro SD card containing MP3 audio files into the **TF Card Slot** on the back of the speaker.
2. The speaker should automatically switch to TF Card mode and begin playing the first track. If not, press the **M (Mode) Button** to select TF Card mode.

4. Using the Control Buttons

- **M (Mode) Button:** Press to cycle through available modes (Bluetooth, USB, TF Card).
- **Play/Pause Button:** Press once to play or pause the current track.
- **- (Volume Down / Previous Track):**
 - Short press: Go to the previous track.
 - Long press: Decrease the volume.
- **+ (Volume Up / Next Track):**
 - Short press: Go to the next track.
 - Long press: Increase the volume.

5. Using the Phone Holder

The integrated phone holder on top of the speaker allows you to securely place your smartphone while enjoying music or watching videos. Simply place your phone into the designated slot.



Image: The KA 8001 speaker with a smartphone in its holder, illustrating its compact size (approx. 14 cm height, 8 cm width).

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the speaker's exterior. Do not use abrasive cleaners, solvents, or harsh chemicals.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures when not in use for extended periods.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Recharge the speaker regularly, even if not used often.
- **Water Exposure:** This speaker is not waterproof. Avoid exposing it to water, rain, or excessive moisture.

TROUBLESHOOTING

Problem	Possible Solution
Speaker does not power on.	<ul style="list-style-type: none">◦ Ensure the ON/OFF switch is in the "ON" position.◦ Charge the speaker's battery using the Micro USB cable.
Cannot connect via Bluetooth.	<ul style="list-style-type: none">◦ Ensure the speaker is in Bluetooth pairing mode (LEDs flashing).◦ Make sure Bluetooth is enabled on your device.◦ Move your device closer to the speaker.◦ Forget the device from your phone's Bluetooth settings and try pairing again.◦ Restart both the speaker and your Bluetooth device.
No sound from USB or TF card.	<ul style="list-style-type: none">◦ Ensure the speaker is in the correct mode (USB or TF Card) by pressing the M (Mode) Button.◦ Verify that the USB drive or TF card contains compatible audio files (e.g., MP3).◦ Check if the volume is turned up on the speaker.◦ Try a different USB drive or TF card.
Sound distortion or low volume.	<ul style="list-style-type: none">◦ Adjust the volume on both the speaker and your connected device.◦ Ensure the speaker is fully charged.◦ Move closer to the speaker if using Bluetooth to avoid interference.

SPECIFICATIONS

Brand	Genérico
Model Name	KA 8001 (BB-CAIXADESOM22)
Max Speaker Output Power	5.5 watts
Frequency Response	5.5 GHz <i>(Note: This value may indicate a specific component frequency rather than audio range.)</i>
Connectivity Technology	Bluetooth
Audio Output Mode	Stereo
Speaker Type	Portable Speaker
Mounting Type	Tabletop Stand
Item Dimensions (Approx.)	14 cm (Height) x 8 cm (Width) <i>(Based on product images. Official specification states 10 cm D x 10 cm W x 12 cm H)</i>
Power Source	USB (DC 5V)

Included Components	Power cable
Manufacturer	DIVERSOS

WARRANTY AND SUPPORT

This product comes with a warranty period of **3** (duration not specified, please refer to your purchase documentation or retailer for exact terms). For any issues not covered in this manual or for warranty claims, please contact your retailer or the manufacturer's customer support.
Please retain your proof of purchase for warranty purposes.