

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [VASAGLE](#) /

› [VASAGLE Fireplace TV Stand and Side End Table Instruction Manual for Models ULET321W01S and ULET321W01S](#)

## VASAGLE ULET321W01S

# VASAGLE Fireplace TV Stand and Side End Table Instruction Manual

Models: ULET321W01S (Side End Table)

## INTRODUCTION

Thank you for choosing the VASAGLE Fireplace TV Stand and Side End Table. This manual provides essential information for the safe assembly, operation, maintenance, and troubleshooting of your new furniture. Please read these instructions carefully before assembly and retain them for future reference.

## IMPORTANT SAFETY INFORMATION

- Always follow the assembly instructions precisely.
- Do not exceed the maximum load capacity of 200 lb (90 kg) for the TV stand.
- Ensure all connections for the charging station and fireplace are secure and meet local electrical codes.
- Keep children and pets away from the electric fireplace when in operation.
- Do not block the air vents of the electric fireplace.
- Unplug the fireplace and charging station from the power outlet before cleaning or maintenance.

## SETUP AND ASSEMBLY

### 1. Unpacking

Carefully remove all components from the packaging. Verify that all parts listed in the included parts list are present and undamaged. Keep packaging materials until assembly is complete to ensure no small parts are discarded.

### 2. Assembly Instructions

Follow the step-by-step diagrams provided in the separate assembly guide for each unit (TV Stand ULET321W01S and Side End Table ULET321W01S). Ensure all screws and fasteners are tightened securely. Do not overtighten.

**Image 1:** Illustrative diagram of the assembly process for the VASAGLE Fireplace TV Stand. This image demonstrates the sequence of connecting various components to form the complete unit. Please refer to your specific assembly guide for detailed steps and part identification.

### 3. Electrical Connection

Once assembled, position the TV stand near a standard 120V AC power outlet. Plug the electric fireplace and the charging station power cord into separate, grounded outlets. Do not use extension cords or power strips for the fireplace.

## OPERATING INSTRUCTIONS

### 1. Electric Fireplace Operation

The 18-inch electric fireplace can be controlled via the touch panel on the unit or the included remote control.

- **Power On/Off:** Press the power button to turn the fireplace on or off.
- **Temperature Settings:** Use the temperature control buttons to select one of 10 available temperature settings.
- **Flame Brightness:** Adjust the flame effect with 4 brightness levels using the flame control button.
- **Timer:** Set the operational timer if available on your model.

**Image 2:** Detailed view of the electric fireplace's touch control panel and the accompanying remote control. This image highlights the buttons for power, temperature adjustment, and flame brightness settings.

### 2. Charging Station Usage (Side End Table)

The side end table features a built-in charging station with 2 AC outlets and 2 USB-A ports, connected by a 6.5 ft cable.

- Plug the charging station's power cord into a standard wall outlet.
- Connect your devices to the AC outlets or USB-A ports for charging.
- Ensure devices are compatible with the charging station's output specifications.

**Image 3:** Close-up of the integrated charging station on the side end table, showing the two AC power outlets and two USB-A charging ports. This unit provides convenient power access for electronic devices.

### 3. Storage and Organization

- **TV Stand:** Utilize the 4 compartments with 2 adjustable shelves for media devices and other items. Slide the barn doors to conceal or display contents as desired.
- **Side End Table:** Use the 2 drawers, 2 open shelves, and the magazine holder for additional storage.

## MAINTENANCE AND CARE

### 1. Cleaning

- Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners.

- For the electric fireplace, ensure it is unplugged and cool before wiping the exterior. Do not spray water directly onto the unit.

## 2. General Care

- Periodically check all screws and fasteners to ensure they remain tight.
- Avoid placing hot items directly on the furniture surface without protection.
- Keep the furniture away from direct sunlight and excessive moisture to prevent warping or discoloration.

## TROUBLESHOOTING

| Problem                               | Possible Cause   | Solution   |
|---------------------------------------|--|--|
| Electric fireplace does not turn on.  | Not plugged in; power outage; circuit breaker tripped; unit switch off.                                    | Ensure power cord is securely plugged into a working outlet. Check household circuit breaker. Press the main power switch on the unit. |
| No heat from fireplace.               | Heat function not activated; temperature setting too low.  | Activate the heat function using the control panel or remote. Increase the temperature setting.  |
| Charging station not providing power. | Charging station not plugged in; device not properly connected; device requires more power than available. | Ensure the charging station's power cord is plugged into a live outlet. Reconnect devices. Check device power requirements.            |
| Furniture feels unstable.             | Loose fasteners; uneven floor.   | Tighten all assembly screws. Adjust furniture levelers if present, or place shims under legs on uneven surfaces.                       |

## SPECIFICATIONS

### VASAGLE Fireplace TV Stand (ULTV540W01)

- **Tabletop Dimensions:** 58" L x 16" W (147.3 cm x 40.6 cm)
- **Recommended TV Size:** Up to 65 inches
- **Electric Fireplace:** 18 inches, 10 temperature settings, 4 flame brightness levels
- **Storage:** 4 compartments with 2 adjustable shelves, barn doors
- **Max. Static Load Capacity:** 200 lb (90 kg)
- **Materials:** Particleboard, Steel

### VASAGLE Side End Table (ULET321W01S)

- **Charging Station:** 2 AC outlets, 2 USB-A ports, 6.5 ft power cable
- **Storage:** 2 drawers, 2 open shelves, magazine holder
- **Materials:** Particleboard, Steel

## WARRANTY AND SUPPORT

VASAGLE products are designed for quality and durability. For specific warranty details, please refer to the warranty card included with your product or visit the official VASAGLE website. If you encounter any issues or require assistance, please contact our customer support team:

- **Website:** [www.vasagle.com/support](http://www.vasagle.com/support)
- **Email:** [support@vasagle.com](mailto:support@vasagle.com)
- **Phone:** 1-800-XXX-XXXX (*Please check the official website for the most current contact number*)

When contacting support, please have your model numbers (ULTV540W01, ULET321W01S) and purchase information readily available.

## OFFICIAL PRODUCT VIDEOS

---

No official seller videos are available for embedding at this time. Please refer to the written instructions and diagrams for guidance.