

Fujifilm X-T30 III

FUJIFILM X-T30 III Mirrorless Camera Body User Manual

Model: X-T30 III

1. INTRODUCTION

This manual provides essential instructions for the safe and effective use of your FUJIFILM X-T30 III Mirrorless Camera Body. The X-T30 III combines vintage design with advanced features, including 20 Film Simulations, AI-based autofocus, and 6.2K video recording capabilities. Please read this manual thoroughly before using the camera and keep it in a safe place for future reference.



Figure 1.1: Front view of the FUJIFILM X-T30 III Mirrorless Camera Body, showcasing the lens mount and classic design.

2. SETUP

2.1. Battery Installation

1. Locate the battery compartment cover on the bottom of the camera.
2. Slide the latch to open the cover.
3. Insert the supplied battery with the contacts facing the correct direction, as indicated inside the compartment.
4. Close the battery compartment cover and slide the latch to secure it.



Figure 2.1: Bottom view of the camera, illustrating the battery and memory card compartment.

2.2. Memory Card Insertion

1. Open the battery/memory card compartment cover.

2. Insert a compatible SD card into the memory card slot until it clicks into place. Ensure the card is oriented correctly.
3. Close the compartment cover.

2.3. Lens Attachment (Sold Separately)

Align the white dot on the lens with the white dot on the camera body. Rotate the lens clockwise until it clicks into place. To detach, press the lens release button and rotate the lens counter-clockwise.

2.4. Initial Power-On

Flip the ON/OFF switch located on the top plate of the camera. Follow the on-screen prompts to set the date, time, and language.



Figure 2.2: Top view of the camera, highlighting the ON/OFF switch and various control dials.

3. OPERATING THE CAMERA

3.1. Basic Photography Modes

The X-T30 III offers various shooting modes accessible via the mode dial on the top plate:

- **P (Program AE):** Camera sets aperture and shutter speed for optimal exposure.
- **A (Aperture Priority AE):** You set the aperture, camera sets shutter speed.
- **S (Shutter Priority AE):** You set the shutter speed, camera sets aperture.
- **M (Manual):** You control both aperture and shutter speed.
- **AUTO:** Camera automatically selects optimal settings for ease of use.



Figure 3.1: Rear view of the camera, displaying the LCD screen and navigation controls.

3.2. Film Simulations

The camera features 20 built-in Film Simulations. These can be accessed and selected through the dedicated Film Simulation dial or the camera's menu system to apply different color and tonal characteristics to your images.

3.3. Autofocus System

The X-T30 III utilizes an AI-based subject detection autofocus system. To activate, half-press the shutter button. You can select different AF modes (Single AF, Continuous AF, Manual Focus) and AF area modes (Single Point, Zone, Wide/Tracking) via the focus mode selector.

3.4. Video Recording

The camera supports 6.2K video recording. To start recording, ensure the camera is in a video-compatible mode and press the dedicated video record button. Adjust video settings such as resolution, frame rate, and film simulation through the menu.

3.5. Connectivity

The camera supports Bluetooth for wireless connection to compatible devices. Use the USB Type-C port for charging and data transfer. Refer to the camera's menu for pairing instructions and connection options.





Figure 3.2: Side view of the camera, illustrating the USB Type-C port, microphone input, and other connectivity options.

4. MAINTENANCE

4.1. Cleaning the Camera

- Use a blower brush to remove dust from the lens and camera body.
- For stubborn smudges, use a soft, lint-free cloth lightly dampened with lens cleaning solution.
- Never use organic solvents or strong chemicals.
- Avoid touching the sensor directly. If sensor cleaning is required, consult a professional service center.

4.2. Battery Care

- Charge the battery fully before first use.
- Store batteries in a cool, dry place when not in use.
- Do not expose batteries to extreme temperatures.

4.3. Storage

When storing the camera for extended periods, remove the battery and memory card. Store the camera in a dry, well-ventilated area, preferably in a camera bag with desiccant to prevent mold and mildew.

5. TROUBLESHOOTING

This section addresses common issues you might encounter with your FUJIFILM X-T30 III.

Problem	Possible Cause / Solution
Camera does not power on.	Ensure the battery is fully charged and correctly inserted. Check if the ON/OFF switch is in the 'ON' position.
Images are blurry.	Check focus mode (ensure it's not manual focus if auto is desired). Verify shutter speed is fast enough for current lighting conditions or subject movement. Ensure image stabilization is active if using a compatible lens.
Memory card error.	Reinsert the memory card. Try a different, compatible memory card. Format the card (note: this will erase all data).
No video recording.	Ensure sufficient space on the memory card. Check video settings for resolution and frame rate compatibility.
Bluetooth connection issues.	Ensure Bluetooth is enabled on both the camera and the connecting device. Try re-pairing the devices.

6. SPECIFICATIONS

Key technical specifications for the FUJIFILM X-T30 III Mirrorless Camera Body:

Feature	Specification
Model Name	X-T30 III

Feature	Specification
Brand	Fujifilm
Sensor Type	CMOS
Photo Sensor Resolution	26.1 MP
Video Resolution	3840p (6.2K capable)
ISO Range	100-12800
Image Stabilization	Optical (lens dependent)
Autofocus Technology	Hybrid, AI-based autofocus
Connectivity	Bluetooth, USB Type C
Screen Size	3 inches
Item Weight	1.4 Pounds
Model Number	16957841
UPC	074101212686

7. WARRANTY AND SUPPORT

7.1. Warranty Information

The FUJIFILM X-T30 III Mirrorless Camera Body comes with a **1 Year Limited Warranty** from the date of purchase. This warranty covers manufacturing defects under normal use. Please retain your proof of purchase for warranty claims. For full terms and conditions, refer to the warranty card included with your product or visit the official Fujifilm website.

7.2. Customer Support

For technical assistance, service, or further inquiries, please visit the official Fujifilm support website or contact their customer service department. Contact information can typically be found on the Fujifilm website or in the documentation provided with your camera.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question