

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [homeasy](#) /

> [homeasy Handheld Steam Cleaner DMT003 User Manual](#)

homeasy DMT003

homeasy Handheld Steam Cleaner DMT003 User Manual

Model: DMT003

INTRODUCTION

Thank you for choosing the homeasy Handheld Steam Cleaner, Model DMT003. This powerful and versatile steam cleaner is designed to provide effective and chemical-free cleaning for various surfaces in your home and vehicle. Please read this manual thoroughly before initial use to ensure safe operation and optimal performance.

Important Notice: For initial use, the machine will typically begin spraying steam approximately 30–50 seconds after the operating indicator light illuminates. Always ensure the main power switch is set to "1" when powering on.

SAFETY INSTRUCTIONS

- Always unplug the appliance from the electrical outlet before filling with water, cleaning, or performing maintenance.
- Do not leave the appliance unattended when plugged in.
- Do not operate the steam cleaner if the power cord or plug is damaged.
- Keep children and pets away from the steam cleaner during operation. Steam is hot and can cause burns.
- Use only clean tap water. Do not add detergents, perfumes, or other chemicals to the water tank, as this can damage the unit and void the warranty.
- Wear protective gloves when handling hot accessories or surfaces.
- Ensure the safety water inlet cap is securely tightened before operating.

PRODUCT COMPONENTS AND ACCESSORIES

The homeasy Handheld Steam Cleaner DMT003 comes with a comprehensive 16-piece accessory kit to tackle various cleaning tasks.



Figure 1: Steam Cleaner Unit and Included Accessories

Included Accessories:

- **Steam Cleaner Unit:** Main device with 1.47 Qt (1400ml) transparent water tank.
- **Steam Handle:** Ergonomic handle with steam control button.
- **8 Steam Head Attachments:** Designed for targeted cleaning.
- **Heat-resistant Glove:** For safe handling during operation.
- **Tool Storage Bag:** For organizing all accessories.
- **User Manual:** This document.
- **Extension Rod:** Extends reach for floor or high-up cleaning.
- **Window Scraper:** For streak-free glass and mirrors.
- **Steam Ironing Brush:** Transforms the unit into a garment steamer.
- **Brass Brush:** For tough, stubborn grime on durable surfaces.
- **Small Nylon Brush:** For general scrubbing on various surfaces.
- **Large Nylon Brush:** For larger areas and general cleaning.
- **Plastic Brush:** For delicate surfaces.
- **Surface Scraper:** For removing baked-on residue.
- **Accessory Connector:** To attach various tools.
- **Cleaning Cover Sleeve:** For use with the steam ironing brush or other attachments.
- **Unclogging Needle:** For maintaining steam nozzle.
- **2pc O-Rings:** Replacement seals.
- **Power Cord:** For connecting to electrical outlet.

SETUP INSTRUCTIONS

Follow these steps to prepare your steam cleaner for use:

1. Fill Water Tank:

Unscrew the safety water inlet cap. Fill the transparent water tank with clean tap water. Do not exceed the MAX line. For first use, fill 1/2 to 2/3 full. The tank capacity is 1.47 Quarts (1400ml).

Multi-Surface Versatility With 16 Accessories



Figure 2: Filling the Water Tank

2. Assemble Accessories:

Select the appropriate cleaning accessory for your task. Attach it securely to the steam handle or extension rod as needed. Ensure all connections are firm to prevent steam leakage.



Figure 3: Assembling Accessories

WARNING: The Extension Rod becomes extremely HOT during operation. AVOID CONTACT.

3. Connect & Plug In:

Plug the power cord into a standard 110V electrical outlet. Ensure the outlet is grounded.



OPERATING INSTRUCTIONS

1. Power On & Heat Up:

Hold the handle and turn on the main power switch, setting the level to "1". Long press the power button on the control panel. The unit will begin heating. It heats up in approximately 15 seconds to 221°F (105°C) with 50 PSI of high pressure. The operating indicator light will illuminate when ready.



Figure 5: Powering On and Heating Up

2. Adjust Steam Level:

The unit features 6 adjustable steam levels, controlled directly from the handle. Rotate the dial on the handle to select the desired steam intensity:

- **Levels 1-2:** Suitable for delicate fabrics and curtains.
- **Levels 3-4:** Ideal for kitchen counters and bathroom surfaces.
- **Levels 5-6:** For heavy kitchen grease, stubborn grout, car interiors, and tiles.



Figure 6: Adjusting Steam Level

3. Begin Cleaning:

Direct the steam nozzle or attached accessory towards the surface to be cleaned. Move the steam cleaner slowly over the area. For tough stains, hold the steam over the area for a few seconds to allow the heat to loosen the grime.

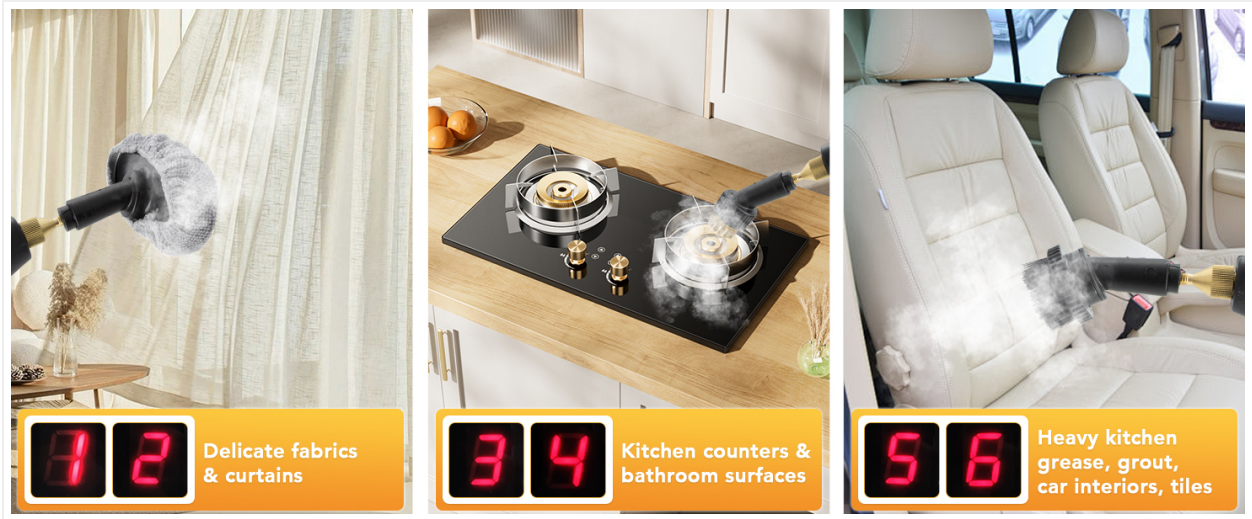 


Figure 7: Deep Cleaning Results

The steam cleaner offers an extended reach of 185 inches (86.6-inch steam hose and 98.4-inch power cord) for comprehensive cleaning without frequent repositioning.

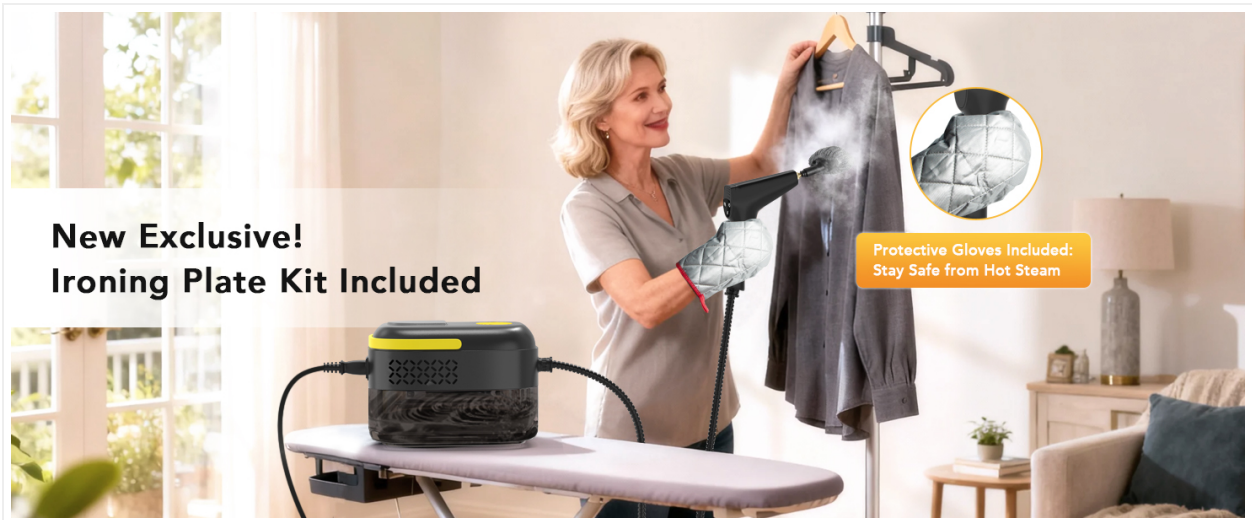 


Figure 8: Extended Cleaning Reach

MAINTENANCE AND STORAGE

1. Unplug & Drain:

After use, turn off the main power switch and unplug the unit from the electrical outlet. Allow the unit to cool down completely. Carefully unscrew the safety water inlet cap and drain any remaining water from the tank. This helps prevent mineral buildup.



Figure 9: Draining the Water Tank

2. Clean Accessories:

Clean any used accessories with water and mild soap. Ensure they are dry before storing.

3. Storage:

Store the steam cleaner and all accessories in the provided storage bag in a cool, dry place, away from direct sunlight and extreme temperatures.

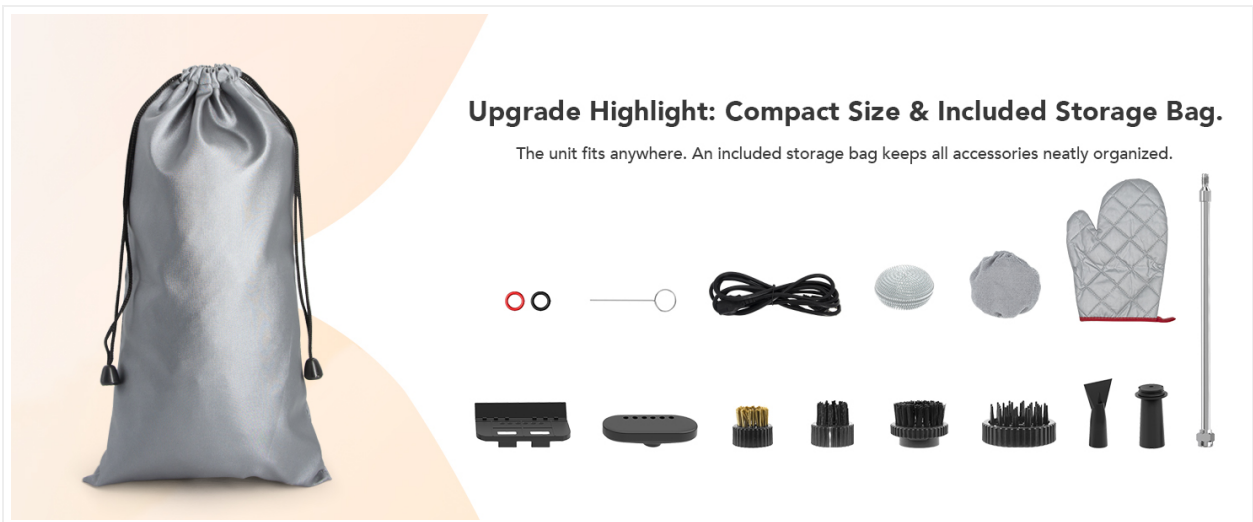 


Figure 10: Storing Accessories

TROUBLESHOOTING

Problem	Possible Cause	Solution
Unit does not power on.	Not plugged in; power switch off; faulty outlet.	Ensure power cord is securely plugged into a working outlet. Check the main power switch is set to "1". Try a different outlet.
No steam or very little steam.	Water tank empty; unit not heated sufficiently; nozzle clogged.	Check water level and refill if necessary. Allow 15-30 seconds for heating. Use the unclogging needle to clear the nozzle.

Problem	Possible Cause	Solution
Water leaking from connections.	Accessories not securely attached; O-rings damaged.	Ensure all accessories are firmly connected. Check O-rings for damage and replace if needed.
Steam is not hot enough.	Insufficient heating time; steam level set too low.	Allow more time for the unit to heat up. Increase the steam level using the handle control.

PRODUCT SPECIFICATIONS

- **Brand:** homeasy
- **Model Name:** DMT003
- **Special Feature:** Steam Cleaning
- **Form Factor:** Handheld
- **Color:** Black
- **Wattage:** 1500W
- **Voltage:** 110V
- **Tank Volume:** 1.47 Quarts (1400ml / 1.5 Liters)
- **Heat Time:** 15 Seconds
- **Steam Temperature:** Up to 221°F (105°C)
- **Steam Pressure:** 50 PSI
- **Extended Reach:** 185 inches (86.6-inch steam hose + 98.4-inch power cord)
- **Item Weight:** 4.55 pounds
- **Product Dimensions:** 9.84 x 9.84 x 11.81 inches
- **Manufacturer:** Yongkang City Di Man Electrical Appliance Co., Ltd.

WARRANTY AND SUPPORT

For warranty information, product support, or to inquire about replacement parts, please contact the manufacturer directly or refer to the retailer where the product was purchased. Keep your purchase receipt as proof of purchase.