



WR32X10398QH359

Refrigerator Crisper Drawer Cover Replacement Manual

For Hotpoint Refrigerators

1. INTRODUCTION

This manual provides instructions for the installation, usage, and maintenance of your new refrigerator crisper drawer cover replacement. This part is designed to replace a damaged or missing crisper drawer cover in compatible Hotpoint refrigerator models. Please read these instructions carefully before proceeding with installation or use.

2. COMPATIBILITY

This crisper drawer cover replacement is compatible with the following Hotpoint refrigerator models:

- CTH16CYSGLAD, CTH16CYSGLWH, CTH16CYSGRAD, CTH16CYSGRWH
- CTH16CYSKLWH, CTH16CYSKRWH
- CTH16CYTFLAD, CTH16CYTFLWH, CTH16CYTFRAD, CTH16CYTFRWH
- CTH16CYXLLAD, CTH16CYXLLWH, CTH16CYXLRAD, CTH16CYXLRWH
- CTH16CYXPLAD, CTH16CYXPLWH, CTH16CYXPRAD, CTH16CYXPRWH
- CTH16CYZBLAD, CTH16CYZBLWH, CTH16CYZBRAD, CTH16CYZBRWH

Please verify your refrigerator's model number before installation to ensure proper fit.

3. PRODUCT FEATURES

- **Material:** Constructed from ABS plastic for durability and resistance to impact.
- **Dimensions:** Approximately 24-3/8 inches (620mm) wide x 18-3/4 inches (475mm) deep.
- **Installation:** Designed for direct snap-on installation without tools.
- **Function:** Supports crisper drawers and helps maintain humidity levels for stored produce.



Figure 1: Crisper drawer cover showing approximate dimensions: 24-3/8 inches wide and 18-3/4 inches deep.

4. SAFETY INFORMATION

- Always unplug the refrigerator from the power outlet before attempting any installation or maintenance.
- Handle the replacement part carefully to avoid damage or injury.
- Ensure the refrigerator is stable and not prone to tipping during the installation process.
- Keep small children and pets away from the work area.

5. INSTALLATION INSTRUCTIONS

Follow these steps to install the crisper drawer cover replacement:

1. **Prepare the Refrigerator:** Unplug the refrigerator from the electrical outlet. Open the refrigerator door to access the crisper drawer area.
2. **Remove Existing Components:** Carefully remove any crisper drawers, shelves, or the old crisper drawer cover if it is still present. If the old cover is broken, remove all fragments.

3. **Clean the Area:** Wipe down the interior of the refrigerator where the new cover will be placed to ensure it is clean and free of debris.
4. **Position the New Cover:** Align the new crisper drawer cover with the designated slots or supports inside the refrigerator.
5. **Install the Cover:** Gently press the cover into place until it snaps securely onto the support rails. Ensure it is level and stable.
6. **Reinstall Drawers:** Place the crisper drawers back into their positions beneath the new cover.
7. **Restore Power:** Plug the refrigerator back into the electrical outlet.



Figure 2: Illustration of the crisper drawer cover being placed into the refrigerator compartment.

6. USAGE

The crisper drawer cover serves as a shelf for items above the crisper drawers and helps to regulate humidity within the crisper compartments. Place items on the cover as you would on any other refrigerator shelf. Ensure that the crisper drawers below are properly seated for optimal performance.

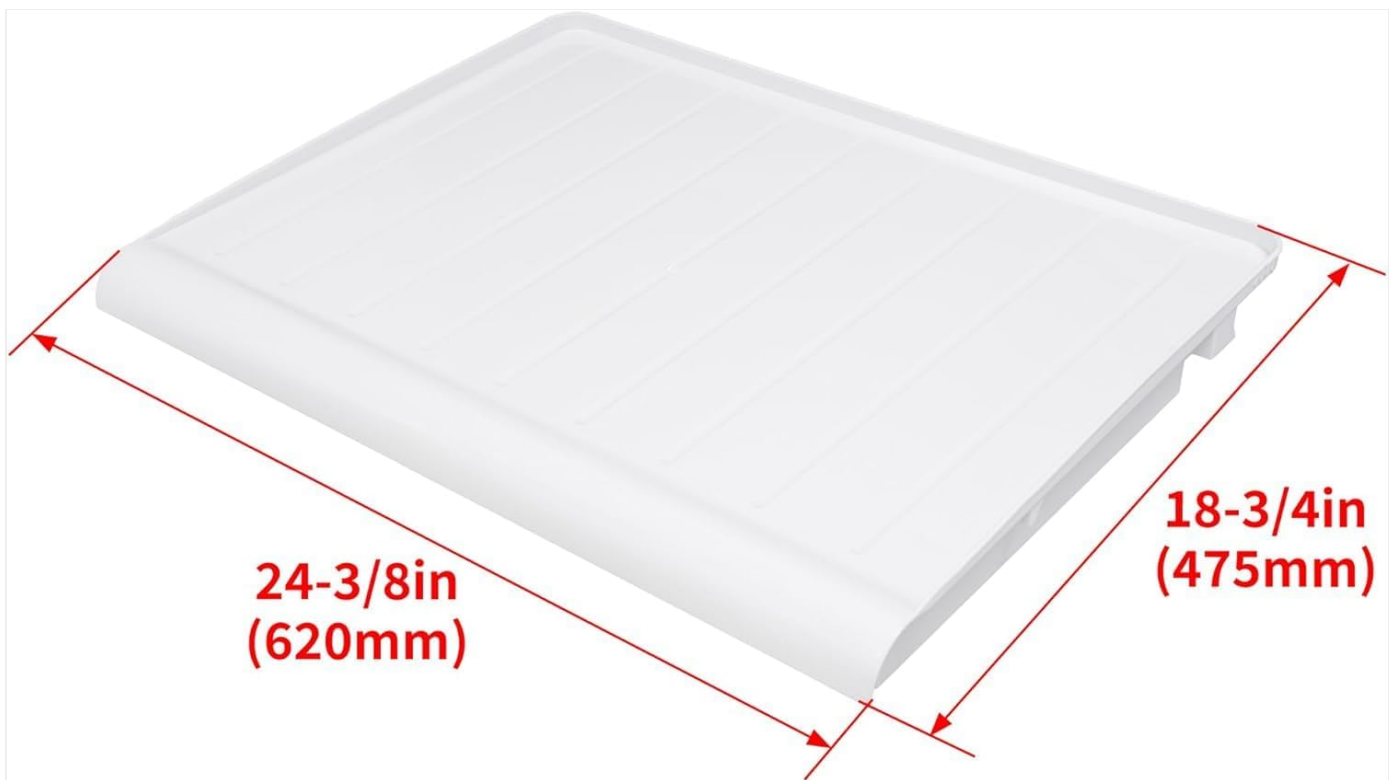


Figure 3: Top view of the crisper drawer cover, showing its flat surface for supporting items.

7. CARE AND MAINTENANCE

To clean the crisper drawer cover:

- Remove the cover from the refrigerator by gently lifting it from its supports.
- Wash with mild soap and warm water.
- Rinse thoroughly and dry completely with a soft cloth before reinstalling.
- Avoid using abrasive cleaners or harsh chemicals, as these can damage the plastic.

8. TROUBLESHOOTING

Problem: The cover does not fit into the refrigerator.

Solution: Verify that your refrigerator model is listed in the compatibility section (Section 2). Ensure the cover is oriented correctly and that no obstructions are preventing it from seating properly.

Problem: The cover appears unstable after installation.

Solution: Remove the cover and re-install, ensuring it snaps firmly into all designated support points. Check for any foreign objects or debris in the support channels.

9. SPECIFICATIONS

Part Number:	WR32X10398QH359
Material:	ABS Plastic
Dimensions (W x D):	24-3/8 inches (620mm) x 18-3/4 inches (475mm)
Number of Pieces:	1

10. WARRANTY AND SUPPORT

For questions regarding this product, installation assistance, or to report a defect, please contact the seller or manufacturer directly. Please refer to your purchase documentation for specific warranty terms and contact information.

