

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Juskys](#) /

› [Juskys 12L Black Air Fryer Instruction Manual Model 301911](#)

Juskys 301911

Juskys 12L Black Air Fryer Instruction Manual

Model: 301911

1. INTRODUCTION

Thank you for choosing the Juskys 12L Black Air Fryer. This appliance is designed to provide a versatile and healthy cooking experience, allowing you to fry, bake, grill, toast, and defrost with minimal to no oil. Please read this manual thoroughly before first use to ensure safe and optimal operation.

1.1 Safety Information

- Always read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use outdoors.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Do not use the appliance for other than intended use.
- Ensure adequate ventilation around the appliance during use.

2. PACKAGE CONTENTS

Your Juskys 12L Air Fryer package includes the following items:

- 1x Juskys 12L Air Fryer Unit
- 1x Rotating Drum
- 1x Rotating Spit
- 2x Crisp Plates
- 1x Water Tank for Steam Function
- 1x Instruction Manual

INKLUSIVE ZUBEHÖR

Rotierender Spieß, Trommel, Crisp-Platten, etc.



Figure 1: Included Accessories - This image displays the various accessories that come with the Juskys 12L Air Fryer, such as the rotating drum, rotating spit, and crisp plates, designed to enhance cooking versatility.

3. PRODUCT FEATURES

The Juskys 12L Air Fryer offers a range of features designed for convenience and healthy cooking:

- **Healthy Cooking:** Utilizes rapid air circulation for crispy results with significantly less oil.
- **Multi-functional:** Capable of frying, baking, grilling, toasting, and defrosting, all in one appliance.
- **User-Friendly Interface:** Features an intuitive LCD touch display for easy operation.
- **10 Pre-set Programs:** Simplifies cooking with optimized settings for various dishes.
- **Adjustable Temperature:** Temperature range from 25°C to 200°C for precise cooking control.
- **Integrated Timer:** Set cooking times from 1 to 90 minutes.
- **Large Capacity:** 12-liter capacity, ideal for families and entertaining guests.
- **Viewing Window with Light:** Allows monitoring of food without opening the door.
- **Insulated Handles:** Ensures safe handling during and after cooking.

SCHNELL & GESUND GENIEßEN

dank Highspeed-Luftzirkulation



Figure 2: Healthy Cooking with Rapid Air Circulation - This image shows the Juskys Air Fryer in operation, highlighting its ability to cook food to a crispy texture using high-speed air circulation, reducing the need for excessive oil.

VIELSEITIG ZUBEREITEN

Frittieren, backen, grillen, toasten oder auftauen



10
Programme



Knusprig
& lecker



Temperaturen
25 - 200°C



Figure 3: Versatile Cooking Options - This image illustrates the wide range of dishes that can be prepared with the Jusksys Air Fryer, from crispy fries and pizza to roasted chicken, showcasing its multi-functional capabilities.

LEICHTE BEDIENUNG



Mit LCD-Touchdisplay, Timer & Temperaturwahl



Figure 4: Intuitive LCD Touch Display - This image highlights the air fryer's control panel, featuring an LCD touch screen for easy adjustment of temperature and time, along with various pre-set program icons.

4. SETUP

4.1 Unpacking

1. Carefully remove the air fryer and all accessories from the packaging.
2. Remove any stickers or labels from the appliance.
3. Retain the packaging for future storage or transport.

4.2 Before First Use

1. Wash all removable parts (drum, spit, crisp plates, water tank) with warm soapy water. Rinse thoroughly and dry completely.
2. Wipe the interior and exterior of the main unit with a damp cloth.
3. Place the air fryer on a stable, level, and heat-resistant surface, ensuring adequate space (at least 10 cm) around the appliance for proper ventilation.
4. Plug the power cord into a grounded electrical outlet.
5. It is recommended to run the air fryer empty for about 10-15 minutes at 180°C during the first use to burn off any manufacturing residues. A slight odor may be present, which is normal.

5. OPERATING INSTRUCTIONS

5.1 Control Panel Overview

The Juskys Air Fryer features an intuitive LCD touch screen. The display shows temperature, time, and various cooking icons for pre-set programs. Buttons allow for power on/off, temperature adjustment, time adjustment, and program selection.

5.2 Basic Operation

- Power On:** Plug in the appliance. The power icon will illuminate. Touch the power icon to turn on the display.
- Select Program:** Choose one of the 10 pre-set programs by touching the corresponding icon. Each program has a default temperature and time.
- Adjust Temperature/Time:** Use the temperature (°C) and time (min) adjustment buttons to manually set or modify the cooking parameters. The temperature can be set between 25°C and 200°C, and the time between 1 and 90 minutes.
- Start Cooking:** Press the Play/Pause button to start the cooking cycle.
- Pause/Resume:** During cooking, press the Play/Pause button to pause. Press again to resume.
- Power Off:** Press and hold the power icon to turn off the appliance.

5.3 Using Accessories

- Crisp Plates:** Insert one or both crisp plates into the designated slots inside the air fryer. Place food directly on the plates.
- Rotating Drum:** Place smaller items like fries or nuts into the rotating drum. Secure the drum onto the rotating mechanism inside the air fryer. Select the rotation function on the control panel if available.
- Rotating Spit:** For whole chickens or larger roasts, secure the food onto the rotating spit. Insert the spit into the rotating mechanism. Select the rotation function on the control panel.
- Water Tank for Steam:** Fill the water tank with water and insert it into its slot for dishes requiring a steam function.

5.4 Cooking Tips

- For best results, preheat the air fryer for 3-5 minutes before adding food.
- Do not overcrowd the basket or plates to ensure even cooking and crispiness. Cook in batches if necessary.
- Shake or flip food halfway through the cooking time for uniform browning.
- Lightly brush or spray food with oil for extra crispiness, especially for fresh ingredients.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your air fryer.

- Unplug and Cool:** Always unplug the air fryer from the power outlet and allow it to cool completely before cleaning.
- Clean Accessories:** The rotating drum, rotating spit, crisp plates, and water tank are dishwasher safe. Alternatively, wash them with warm water and a non-abrasive sponge with dish soap. Rinse thoroughly and dry completely.
- Clean Interior:** Wipe the interior of the air fryer with a damp cloth and mild detergent. For stubborn food residues, soak a cloth in warm soapy water and gently scrub. Avoid using abrasive sponges or metal utensils.
- Clean Exterior:** Wipe the exterior of the air fryer with a damp cloth. Do not use harsh chemicals or abrasive cleaners.

5. **Storage:** Ensure all parts are clean and dry before storing the appliance in a cool, dry place.

7. TROUBLESHOOTING

If you encounter any issues with your Juskys Air Fryer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction.	Ensure the power cord is securely plugged into a working outlet.
Food is not cooked evenly.	Basket/plates overcrowded; food not shaken/flipped.	Cook in smaller batches; shake or flip food halfway through cooking.
White smoke coming from the appliance.	Grease residue from previous use; fatty food being cooked.	Clean the basket/plates thoroughly; remove excess oil from food.
Unusual smell during first use.	Manufacturing residues.	This is normal. Run the air fryer empty for 10-15 minutes at 180°C.

8. SPECIFICATIONS

Detailed technical specifications for the Juskys 12L Air Fryer:

- **Brand:** Juskys
- **Model:** 301911
- **Color:** Black
- **Shell Material:** Plastic
- **Door & Handle Material:** Stainless Steel
- **Drum Material:** Steel
- **Capacity:** 12 Liters
- **Power:** 1700 W
- **Voltage:** 220–240 V~, 50/60 Hz
- **Protection Class:** I
- **Dimensions (LxHxD):** 29 x 38 x 38 cm
- **Cable Length:** 85 cm

FÜR DIE GANZE FAMILIE

12 Liter Fassungsvermögen



Figure 5: Product Dimensions - This image provides a visual representation of the Juskys Air Fryer with its key dimensions (length, height, depth) labeled for reference.

9. WARRANTY AND SUPPORT

The Juskys 12L Air Fryer comes with a standard manufacturer's warranty. For detailed warranty information, product support, or to inquire about replacement parts, please refer to the warranty card included in your package or visit the official Juskys website. You may also contact customer service through your retailer for assistance.