

Gemmy 110233

Gemmy The Grinch Lightshow 3-Marker White Christmas Pathway Markers

INSTRUCTION MANUAL

Model: 110233 | Brand: Gemmy

Introduction

Thank you for choosing the Gemmy The Grinch Lightshow Pathway Markers. This product is designed to add a festive touch to your outdoor holiday decorations. This manual provides essential information for the safe and proper setup, operation, and maintenance of your pathway markers.

The set includes three 3D Grinch figures, each styled in a Santa suit and holding a wreath, which light up with bright white LED lights. These markers are weather-resistant and suitable for both indoor and outdoor use.


Safety Information

- **Electrical Safety:** Always ensure the product is unplugged before assembly, disassembly, or maintenance. Do not overload electrical outlets. Use only with a 125V fuse, 3A maximum.
- **Outdoor Use:** This product is weather-resistant, but for prolonged life, avoid submerging in water or exposing to extreme weather conditions. Ensure all electrical connections are secure and protected from moisture.
- **Placement:** Place markers in a stable location where they will not be a tripping hazard or easily knocked over.
- **Children and Pets:** Keep electrical cords and components out of reach of small children and pets.

Package Contents

Please verify that all components are present before beginning assembly:

- 3 x Grinch 3D Figures with LED Lights
- 3 x Red Ground Stakes
- 1 x Green Electrical Cord (5.5 ft) with Plug

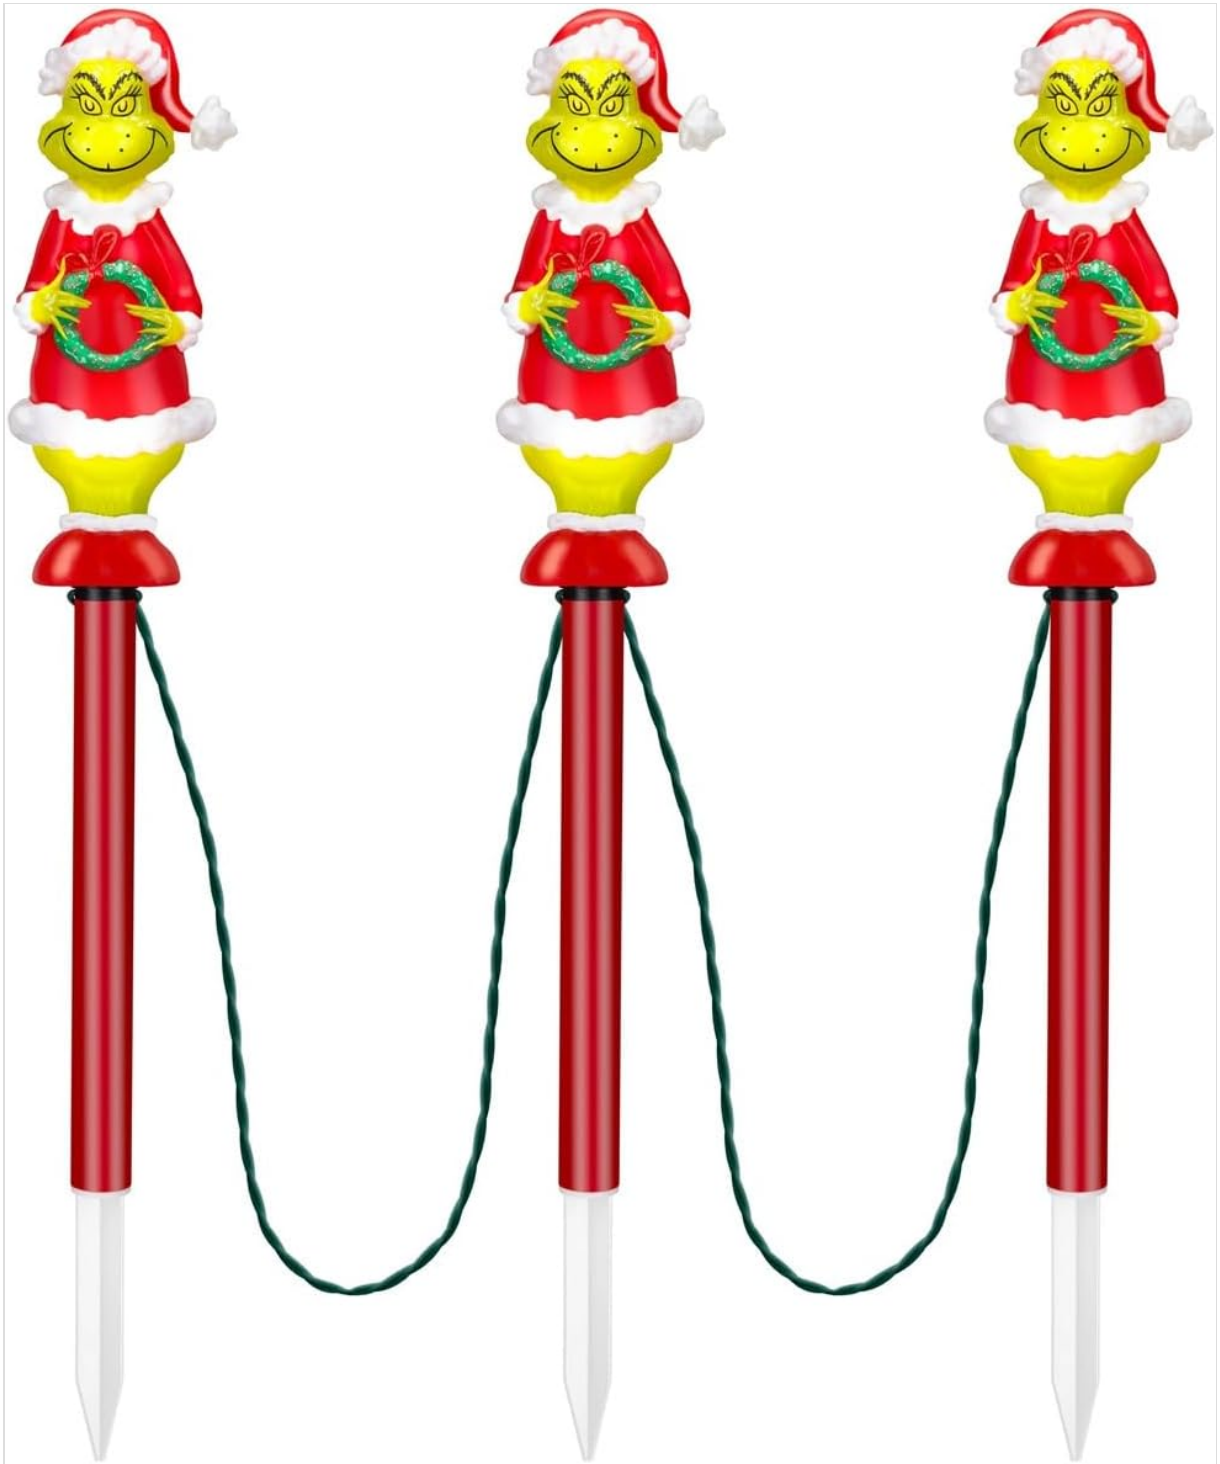

This image displays the complete set of three Grinch pathway markers. Each marker features a Grinch figure in a Santa suit holding a wreath, mounted on a red stake with a white ground spike. Green electrical cords connect the markers.

Setup Instructions

1. **Unpack Components:** Carefully remove all items from the packaging.
2. **Assemble Stakes:** Attach each Grinch figure to the top of a red ground stake. Ensure a secure fit.



A detailed close-up of one Grinch pathway marker. The Grinch is depicted wearing a red Santa hat and suit, holding a green wreath. The figure is mounted on a red base, ready to be attached to a stake.



This image displays the three individual red ground stakes with white pointed tips. These stakes are designed to be inserted into the ground, providing a stable base for the Grinch figures.

3. **Position Markers:** Select your desired outdoor location. Gently push the pointed end of each ground stake into the soil along your pathway or landscape border. Ensure they are firmly planted and upright.
4. **Connect Markers:** The markers are pre-wired to connect in a series. Ensure the green electrical cord is routed safely and discreetly.
5. **Power Connection:** Plug the 5.5-ft electrical cord into a standard 120V AC outdoor-rated electrical outlet. For safety, use a Ground Fault Circuit Interrupter (GFCI) protected outlet.



This image shows the green electrical plug for the pathway markers. The plug is a two-prong type and includes important safety information regarding fuse specifications: 'USE ONLY 125V FUSE 3A MAX'.

6. **Connecting Multiple Sets:** Up to 18 sets of these pathway markers can be connected end-to-end. Ensure the total wattage does not exceed the capacity of your electrical circuit.



The Grinch pathway markers are shown installed outdoors, illuminating a snowy path. They are positioned in a row, demonstrating their intended use as decorative pathway lighting for a home's exterior during the holiday season.

Operating Instructions

Once properly set up and plugged into a live electrical outlet, the Grinch pathway markers will illuminate automatically. There are no additional switches or controls for operation.

- **To Turn On:** Plug the electrical cord into a functioning 120V AC outlet.
- **To Turn Off:** Unplug the electrical cord from the outlet.

Maintenance

- **Cleaning:** To clean the Grinch figures and stakes, gently wipe with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners. Ensure the product is unplugged before cleaning.
- **Storage:** When not in use, unplug the markers and carefully remove them from the ground. Store in a cool, dry place, away from direct sunlight and extreme temperatures. It is recommended to store them in their original packaging to prevent damage.
- **Fuse Replacement:** The electrical plug contains a replaceable fuse. If the lights do not illuminate, check the fuse in the plug. To replace, slide open the fuse compartment, remove the old fuse, and insert a new

125V, 3A MAX fuse. Close the compartment securely.

Troubleshooting

- **Lights Not Working:**
 - Ensure the electrical cord is securely plugged into a live outlet.
 - Check if the outlet is functioning by plugging in another device.
 - Inspect the fuse in the electrical plug and replace if blown (refer to Maintenance section).
 - Examine the entire length of the cord for any cuts, frays, or damage. Discontinue use if damaged.
- **Markers Not Stable:**
 - Ensure the ground stakes are fully inserted into firm soil.
 - If the ground is too soft, consider reinforcing the base or relocating to a more stable area.

Specifications

Model Number	110233
Brand	Gemmy
Product Dimensions (L x W x H)	66 x 2.91 x 23.62 inches
Item Weight	2 pounds
Number of Items	3
Power Source	Corded Electric
Recommended Use	Outdoor
Light Type	LED (White)
Max Connectable Sets	Up to 18 sets end-to-end
Electrical Cord Length	5.5 ft
Fuse Specification	125V, 3A MAX

Warranty Information

Specific warranty details for this product are not provided in the available information. Please refer to the product packaging or contact Gemmy customer support for warranty inquiries.

Customer Support

For further assistance, troubleshooting, or product inquiries, please contact Gemmy customer support. Contact information is typically available on the product packaging or the official Gemmy website.

