

## Electactic H36902

# Electactic H36902 Portable Ceramic Space Heater User Manual

Model: H36902

## 1. SAFETY INFORMATION

---

**Please read all instructions before using this appliance.**

- **Overheat Protection:** The heater is equipped with an automatic overheat shutoff. If the internal components reach a certain temperature, the heater will automatically turn off to prevent overheating. It will resume operation once it has cooled down.
- **Tip-Over Protection:** A safety switch is integrated into the base of the heater. If the unit is accidentally knocked over, the power will immediately cut off. Operation will resume once the heater is placed upright on a stable surface.
- **Flame-Retardant Materials:** The ceramic space heater is constructed from flame-retardant materials to minimize fire hazards.
- Always plug the heater directly into a wall outlet. Do not use with extension cords or power strips.
- Do not cover the heater or block its air inlets/outlets. Maintain a minimum distance of 3 feet (0.9 meters) from walls, furniture, and curtains.
- Keep the heater away from water and do not use it in wet or damp locations like bathrooms (unless specifically designed and rated for such use).
- Supervise children and pets when the heater is in operation.
- Unplug the heater when not in use or before cleaning.

# Energy-saving and Efficient



Image: Visual representation of the heater's tip-over and overheat safety mechanisms.

## 2. PRODUCT OVERVIEW

The Electactic H36902 Portable Ceramic Space Heater is designed to provide efficient and targeted heating for small to medium-sized indoor spaces. Its compact design and integrated handle make it easy to move between rooms, offering versatile comfort.



Image: Front view of the Electactic H36902 Portable Ceramic Space Heater.

### Key Features:

- **2-in-1 Functionality:** Offers two heat settings (750W Low Heat, 1500W High Heat) for cold weather and a cool air fan mode for warmer days.
- **Adjustable Thermostat:** Allows you to set your desired room temperature between 41°F and 95°F. The heater will automatically cycle on and off to maintain the set temperature.
- **Rapid Heating:** Utilizes PTC ceramic heating technology to deliver warmth within 2 seconds.
- **Quiet Operation:** Operates at a noise level below 45 decibels, suitable for bedrooms and offices.
- **Compact & Portable:** Lightweight (under 3 lbs) with an easy-to-carry handle, making it ideal for personal use in various indoor settings.

- **Heating Coverage:** Effectively heats areas up to 200 square feet.

# Multiple Safety Protection

## Tip-Over Protection

shut off when accidentally tip-over occurs



## Over-Heat Protection

shut off when the parts of the heater overheat



Image: Illustration showing the heater's rapid 2-second heating feature.

# Bring Warmth all around



Image: Diagram comparing the heater's low noise level to common sounds.

## 3. SETUP

1. **Unpack:** Carefully remove the heater from its packaging. Retain packaging for future storage or transport.
2. **Placement:** Place the heater on a firm, level surface. Ensure there are no obstructions within 3 feet (0.9 meters) of the front, back, or sides of the heater. Do not place it on soft surfaces like beds or rugs where openings may be blocked.
3. **Power Connection:** Plug the power cord directly into a 120V AC, 60Hz wall outlet. Ensure the outlet

is in good condition and not overloaded.

## 4. OPERATING INSTRUCTIONS

The Electactic H36902 features two control knobs on the top for easy operation.



Image: Heater operating in a room, highlighting its coverage and control knobs.

### Control Knobs:

- **Right Knob (Mode Selector):** This knob controls the power and operating mode.

- **OFF (0):** Turns the heater off.
- **FAN (Fan Icon):** Activates the fan-only mode, circulating cool air.
- **LOW HEAT (I):** Activates the 750W low heat setting.
- **HIGH HEAT (II):** Activates the 1500W high heat setting.
  
- **Left Knob (Thermostat Control):** This knob adjusts the desired temperature.
  - Rotate clockwise for higher temperatures (up to 95°F).
  - Rotate counter-clockwise for lower temperatures (down to 41°F).
  - The heater will cycle on and off to maintain the set temperature.

### **Step-by-Step Operation:**

1. Plug the heater into a suitable electrical outlet. The power indicator light will illuminate.
2. Turn the **Mode Selector (Right Knob)** to your desired setting: FAN, LOW HEAT (I), or HIGH HEAT (II).
3. If a heat setting is selected, adjust the **Thermostat Control (Left Knob)** to your preferred temperature.
4. To turn off the heater, rotate the **Mode Selector (Right Knob)** to the OFF (0) position.

# 1500W Heats Up in 2s

PTC ceramic technology rapidly heats

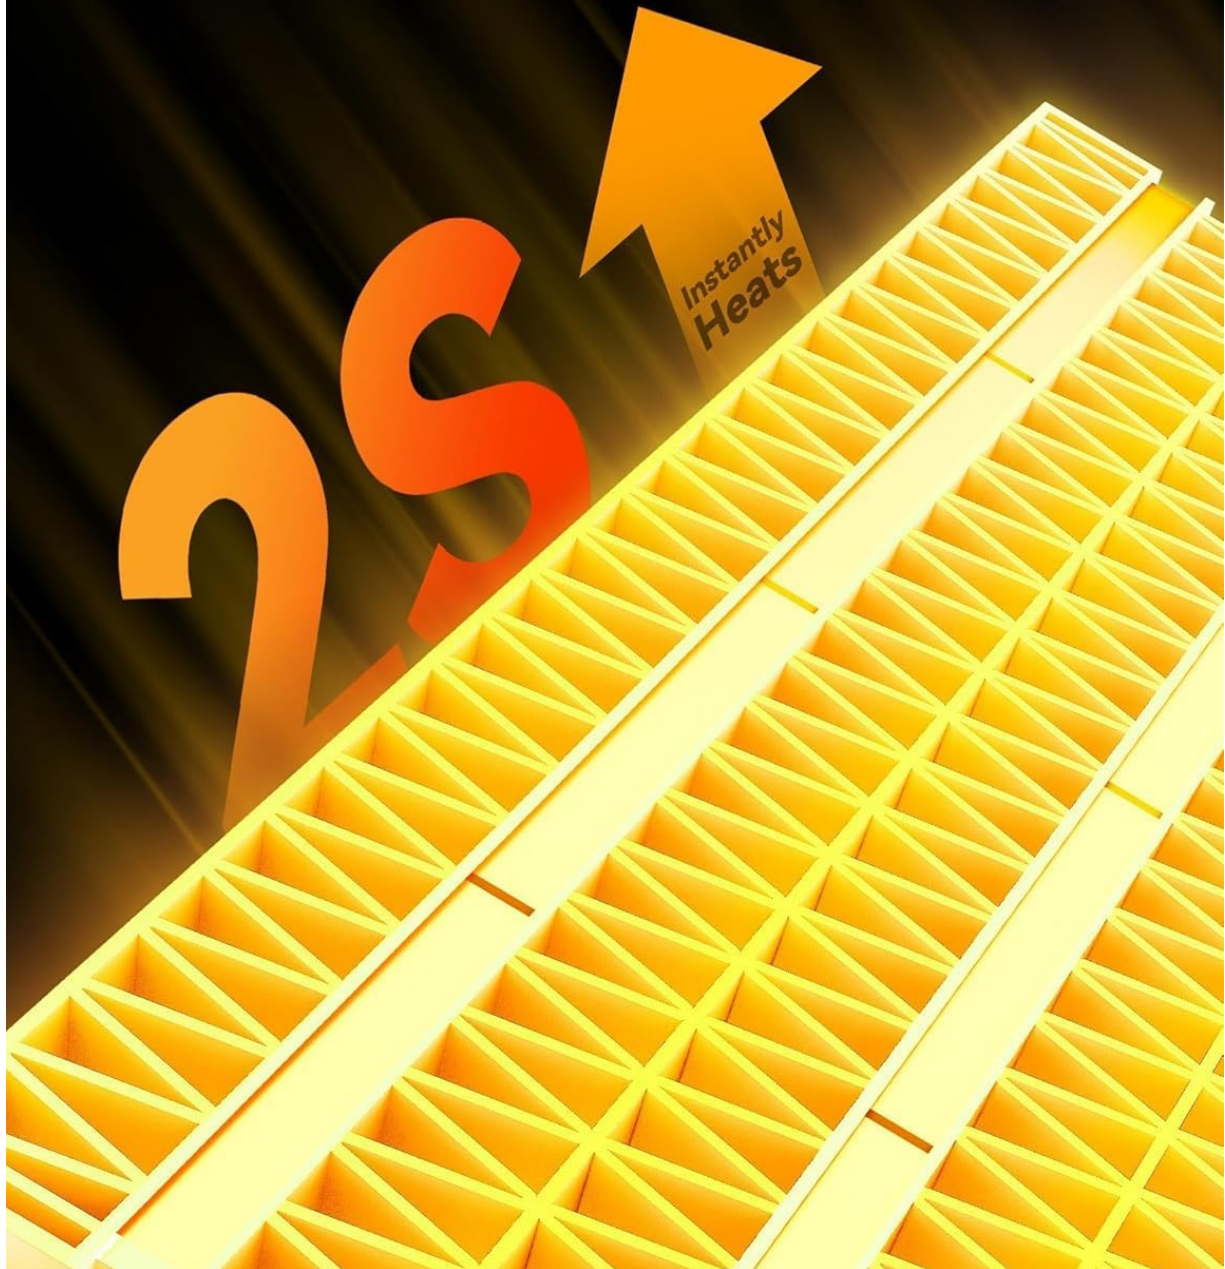


Image: Heater demonstrating its dual functionality as a fan and a heater.

## Product Demonstration Video:

Your browser does not support the video tag.

Video: A seller-provided demonstration of the heater's features and operation, including heat settings and safety features.

## 5. MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your heater.

- **Cleaning:**

- Always unplug the heater and allow it to cool completely before cleaning.
- Use a soft, damp cloth to wipe the exterior surfaces. Do not use abrasive cleaners or solvents.
- Use a vacuum cleaner with a brush attachment to gently remove dust from the air intake and exhaust grilles.

- **Storage:** When not in use, store the heater in a cool, dry place. It is recommended to store it in its original packaging to protect it from dust and damage.

## 6. TROUBLESHOOTING

If your heater is not operating correctly, please consult the following common issues before contacting support.

Problem	Possible Cause	Solution
Heater does not turn on.	Not plugged in; power switch off; tip-over switch activated; overheat protection activated.	Ensure plug is secure; turn power switch on; place heater upright on a flat surface; allow unit to cool down.
No heat output.	Fan mode selected; thermostat set too low; overheat protection activated.	Select a heat mode (I or II); increase thermostat setting; allow unit to cool down.
Heater turns off unexpectedly.	Tip-over switch activated; overheat protection activated.	Place heater upright on a flat surface; allow unit to cool down. Ensure air inlets/outlets are not blocked.

## 7. SPECIFICATIONS

Feature	Detail
Brand	Electactic
Model Number	H36902
Power Output	1500W (High), 750W (Low)
Voltage	120 Volts
Product Dimensions	5.47"D x 6.85"W x 9.65"H
Item Weight	2.58 pounds
Heating Coverage	Up to 200 sq.ft
Temperature Range	41°F - 95°F
Special Features	Adjustable Temperature, Electronic Thermostat, Fast Heating, Overheat Protection, Tip-Over Protection

# Cut out the Noise

Enjoy all-day serenity



Image: Heater on a desk, illustrating its compact size and dimensions.

## 8. WARRANTY & SUPPORT

For warranty information or product support, please refer to the documentation included with your purchase or contact Electactic customer service. Keep your purchase receipt as proof of purchase.

For further assistance, please visit the official Electactic website or contact their customer support channels.

