

Inateck AceTouch N0064

Inateck AceTouch N0064 Keyboard Case User Manual

Model: AceTouch N0064

INTRODUCTION

Thank you for choosing the Inateck AceTouch N0064 Keyboard Case. This product is designed to enhance your tablet experience by providing a comfortable typing solution and versatile protection. This manual will guide you through the setup, operation, and maintenance of your new keyboard case.

COMPATIBILITY

The Inateck AceTouch N0064 Keyboard Case is exclusively compatible with the following Samsung Galaxy Tab models:

- **Samsung Galaxy Tab S10 FE 10.9" 2025** (Models: SM-X520, SM-X526, SM-X526B)
- **Samsung Galaxy Tab S9 FE 10.9" 2023** (Models: SM-X510, SM-X516B, SM-X518U)
- **Samsung Galaxy Tab S9 11" 2023** (Models: SM-X710, SM-X716B, SM-X718U)

Kompatibel mit

11 Zoll

Galaxy Tab S9 11 Zoll 2023

(Modell: SM-X710, SM-X716B, SM-X718U)



10.9 Zoll

Galaxy Tab S10 Lite 10.9 Zoll 2025

(Modell: SM-X400, SM-X406)

Galaxy Tab S10 FE 10.9 Zoll 2025

(Modell: SM-X520, SM-X526, SM-X526B)

Galaxy Tab S9 FE 10.9 Zoll 2023

(Modell: SM-X510, SM-X516B, SM-X518U)



Image: Compatibility chart detailing supported Samsung Galaxy Tab models and their respective model numbers.

SETUP GUIDE

1. Attaching Your Tablet

The keyboard case features a strong magnetic adsorption design for easy attachment and detachment. Simply align your Samsung Galaxy Tab with the case, and the magnets will secure it in place. This allows for quick setup and removal.

Starke Magnetische Befestigung

An- und Ausklipsen in **1 Sekunde**



Image: A tablet magnetically attaching to the keyboard case, highlighting the strong magnetic connection.

2. Bluetooth Pairing

1. Ensure your tablet's Bluetooth is turned on.
2. Open the keyboard case. The keyboard will automatically power on.
3. On your tablet, go to Bluetooth settings and search for available devices.
4. Select "Inateck Keyboard" or a similar name from the list to pair.
5. Once paired, the keyboard is ready for use.

The keyboard features an integrated Bluetooth 5.3 chip for stable and efficient connection. Closing the cover will put the keyboard into hibernation mode to conserve power.

Adjustable Stand and Viewing Angles

The case offers a dual-stand mode, supporting both horizontal and vertical orientations. The adjustable angle ranges from 0 to 160 degrees, allowing you to find the most comfortable position for various activities such as reading, watching videos, working, or handwriting.

Design mit einstellbarem Winkel

Erhöhter Komfort und Produktivität



Image: A tablet in its keyboard case demonstrating multiple adjustable viewing angles for drawing, working, reading, typing, and watching movies.

Wählen Sie Bequemen Tippwinkel



Image: A tablet in its keyboard case, illustrating how to select comfortable typing angles.

Touchpad Functionality

The integrated touchpad supports precise touch functions and multiple gestures, providing a seamless and accurate navigation experience. You can easily navigate, click, and switch between applications without delay.



Präzise Touchpad- Unterstützung für Samsung-Geräte

Reibungslos ohne Verzögerung

Hohe Reaktionsfähigkeit



Unterstützt Multi-Finger-Gesten



Image: Hands demonstrating precise touchpad support and multi-finger gestures on the keyboard case.

Comfortable Typing and Shortcuts

The keyboard features 15x15mm keys designed for comfortable typing, reducing hand fatigue during extended use. Independent keyboard shortcuts allow for quick multitasking and efficient input.

Design dei tasti grandi



Tasti di scelta rapida dedicati

Più efficiente



Struttura a forbice

Più confortevole



Corsa dei tasti di 1 mm

Più precisa



Image: Close-up view of the keyboard keys, illustrating the scissor-switch mechanism and key travel for comfortable and precise typing.

S-Pen Storage

The case provides two S-Pen storage options: an integrated storage slot on the front of the keyboard and a cutout on the back for charging and storage. These ensure your S-Pen is securely stored and readily available, supporting Samsung S-Pen placement and charging.



Nahtlose Aufbewahrung

Kein wiederholtes Anbringen und Abnehmen erforderlich bleiben Sie im kreativen Fluss



Image: A close-up of the keyboard case showing the integrated S-Pen storage slot, designed for seamless storage and access.

MAINTENANCE

- **Cleaning:** Use a soft, damp cloth to wipe the exterior of the case and keyboard. Avoid harsh chemicals or abrasive materials.
- **Battery Care:** To prolong battery life, avoid fully discharging the keyboard frequently. Charge it regularly, especially if not used for extended periods.

- **Storage:** Store the keyboard case in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Solution
Keyboard not pairing via Bluetooth.	1. Ensure the keyboard is charged. 2. Make sure Bluetooth is enabled on your tablet. 3. Forget the device from your tablet's Bluetooth settings and try pairing again. 4. Restart both your tablet and the keyboard.
Keys or touchpad are unresponsive.	1. Check the keyboard's battery level. 2. Ensure the Bluetooth connection is stable. 3. Clean the touchpad surface and keys. 4. Restart the keyboard and tablet.
Tablet does not sit securely in the case.	1. Verify that your tablet model is listed in the compatibility section. 2. Ensure no debris is obstructing the magnetic connection points.

SPECIFICATIONS

Feature	Detail
Brand	Inateck
Model	AceTouch N0064
Connectivity Technology	Bluetooth 5.3
Keyboard Layout	QWERTZ (German)
Number of Keys	78
Special Features	Removable, Portrait/Landscape Stand, Integrated Touchpad
Material	Plastic
Power Source	Battery Powered (1 x 9V battery included)
Item Weight	603 Grams
Compatible Operating System	Android

WARRANTY AND SUPPORT

Inateck products come with a standard manufacturer's warranty. For detailed warranty information, technical support, or customer service inquiries, please visit the official Inateck website or contact their customer support team directly. Please retain your proof of purchase for warranty claims.

