

[manuals.plus](#) /› [KPAW](#) /› **KPAW Automatic Card Dealer T1 Lite User Manual**

KPAW T1 Lite

KPAW Automatic Card Dealer T1 Lite User Manual

Model: T1 Lite

Brand: KPAW

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your KPAW Automatic Card Dealer T1 Lite. Please read it thoroughly before using the device and retain it for future reference.

Key Features:

- Customizable settings for player count, card dealing quantity, and shared card quantity.
- Supports 1 to 12 players for various card games.
- Compatible with popular games including UNO, Poker, Texas Hold'em, Blackjack, and Trading Card Games.
- Accommodates up to 3 decks (162 cards) of standard, long, wide, and plastic cards.
- Equipped with a 4000 mAh rechargeable battery, providing 3-7 days of use on a single charge.
- Features a low-noise dual motor for stable and quiet card dealing.
- Compact and portable design (L4.65" x W5.35" x H4.21", 1.25lbs) with an intuitive LED screen.
- Note: This device is a card dealer and does not include a shuffling function.

2. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- KPAW Automatic Card Dealer T1 Lite Unit
- USB Type-C Charging Cable
- Wireless Remote Control Buttons (quantity may vary, typically up to 8)
- User Manual (this document)

3. SETUP

3.1 Charging the Device

Before first use, fully charge the T1 Lite using the provided USB Type-C cable. The charging port is located at the back of the device. The battery indicator on the LED screen will show charging status.

3.2 Loading Cards

1. Open the card warehouse/chamber.
2. Place up to 3 decks of cards (max 162 cards) into the card chamber, ensuring they are neatly stacked and facing the correct direction.
3. Gently push the cards down towards the card dispenser.

**3 decks of cards
can be dealt at once**

Various card sizes are accommodated



Standard
2.5" x 3.5"



Bridge
2.25" x 3.5"



Mini
1.75" x 2.5"



Mahjong
1.57" x 3.43"



UNO
2.25" x 3.5"



Chip
2.2" x 3.4"

Image: The KPAW T1 Lite can hold up to 3 decks of cards, accommodating various card sizes.

3.3 Powering On

Press the Power button (usually marked with a power symbol) on the device's control panel to turn it on. The LED screen will illuminate.

3.4 Pairing Remote Controllers

To pair the wireless remote control buttons:

1. On the device, navigate to the 'Remote Pairing' option in the settings menu (use the SETTING/NEXT button to cycle through options).
2. Select 'Controller Match'.
3. When prompted, press the button on each remote controller you wish to pair. The device's screen will confirm successful pairing for each remote.

4. OPERATING INSTRUCTIONS

4.1 Function Buttons Overview

Supports setting various custom gameplay



Function Button Introduction



Image: Detailed view of the KPAW T1 Lite's control panel and ports.

- **PLUS/UP (+):** Increases quantity, selects setting options upwards.
- **MINUS/DOWN (-):** Decreases quantity, selects setting options downwards.
- **SETTING/NEXT (►):** Short press to enter settings, long press to confirm and proceed to the next setting.
- **DEAL (►):** Starts the card dealing process.
- **RANDOM/SPECIFIED DEAL (► with circle):** Short press to randomly select a dealing position. Long press to specify a dealing position.
- **DIRECTIONAL DEAL (Arrow buttons):** In 180° Deal (3 players) or 360° Rotate Deal (3 or 4 players) modes, press to start dealing from that position.
- **TOUCH PAUSE AREA:** Touch this area on the top of the device to pause dealing. The screen

characters will flash. Press the DEAL button to resume.

4.2 Setting Up a Game

The T1 Lite offers various pre-programmed game modes and a custom mode for flexible gameplay.

Various Gameplay Settings

Enjoy Card Games Even Faster



Image: The device supports various pre-set and custom gameplay settings.

- 1. Select Game Mode:** From the initial interface, use the PLUS/UP or MINUS/DOWN buttons to scroll through the available game modes (e.g., Custom, UNO, Texas Hold'em, Blackjack, Poker, etc.).
- 2. Enter Settings:** Press the SETTING/NEXT button to enter the basic parameter settings for the selected game mode. The numbers on the screen will flash, indicating they are in a pending setting state.
- 3. Adjust Parameters:** Use the PLUS/UP and MINUS/DOWN buttons to customize the following:

- **Number of Players:** Set from 1 to 12.
- **Cards per Player (CARD/P):** Set from 1 to 99.
- **Extra Cards (EXTRA):** Set from 0 to 99. This represents community cards or additional cards dealt.
- **Dealing Direction:** Choose between Clockwise or Anti-clockwise.
- **Dealing Distance:** Select 'Close', 'Mid', or 'Far' based on your table size and player positions.

4. **Confirm Settings:** After adjusting each parameter, press the SETTING/NEXT button to confirm and move to the next setting. Once all parameters are set, press the DEAL button to begin.

4.3 Dealing Cards

Once settings are confirmed, press the DEAL button (▶) to start dealing. The device will rotate and dispense cards according to your selected mode and parameters.

Supports 1-12 players



Note: Some Gameplay has player limits and can not support 12 players.
Switching the machine to custom mode can support up to 12 players.

Image: The device supports both 360° and 180° dealing modes for various player counts.

Texas Hold'em Dealing Stages:

For Texas Hold'em mode, the dealing process consists of 4 stages:

1. **Hole Cards:** The device deals 2 hole cards to each player. The screen will display '01'.
2. **Flop:** Press the DEAL button again. The machine will deal a burn card, then turn to deal 3 flop cards. The screen will display '02'.
3. **Turn:** Press the DEAL button for the third time. The machine will deal another burn card, then turn to deal the 4th community card. The screen will display '03'.
4. **River:** Press the DEAL button for the fourth time. The machine will deal a final burn card, then turn to deal the last community card. The screen will display '00', indicating the end of the round.

4.4 Using Wireless Remote Controls

After pairing, players can use their individual remote control buttons to initiate dealing to their position. Simply press the button on your remote when it's your turn to receive cards.

Video: A comprehensive guide on how to use the automatic card shuffler, including button functions and dealing modes.

5. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to wipe the exterior of the device. Do not use abrasive cleaners or immerse the device in water.
- **Card Care:** Ensure cards are clean and free from debris to prevent jamming and ensure smooth operation. Replace worn or bent cards.
- **Storage:** Store the device in its protective case (if provided) or a dry, cool place away from direct sunlight and moisture when not in use.
- **Battery Care:** For optimal battery life, charge the device regularly, even if not in frequent use. Avoid fully discharging the battery for extended periods.

6. TROUBLESHOOTING

- **Device Not Powering On:** Ensure the battery is charged. Connect the USB-C charging cable and try again.
- **Cards Not Dealing Smoothly/Jams:**
 - Check that cards are loaded correctly and not bent or damaged.
 - Ensure the card chamber is not overloaded.
 - Clean any debris from the card path.
- **Remote Control Not Responding:**
 - Ensure the remote is paired with the device (refer to Section 3.4).
 - Check the remote's battery (if applicable).
- **Incorrect Dealing Pattern:** Verify that the game mode and parameters (players, cards per player, extra cards, dealing direction, distance) are correctly set in the device's menu.
- **Device Unresponsive:** Use the Program Reset Port (small pinhole, refer to Function Buttons Overview image) to perform a factory reset if necessary.

7. SPECIFICATIONS

Feature	Specification
Model Name	T1 Lite
Part Number	T1-N1
Brand	KPAW
Color	black
Material	Plastic

Item Dimensions (LxWxH)	4.65 x 5.35 x 4.21 inches
Item Weight	0.7 Pounds
Battery Capacity	4000 mAh

8. WARRANTY & SUPPORT

8.1 Warranty Information

The KPAW Automatic Card Dealer T1 Lite comes with a 1-year limited warranty from the date of purchase. This warranty covers manufacturing defects and malfunctions under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or improper maintenance.

8.2 Customer Support

For technical assistance, troubleshooting, or warranty claims, please contact KPAW customer support through the retailer where the product was purchased or visit the official KPAW website for contact details.