

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [TABU](#) /
- › [TABU 7 Cubic Feet Chest Deep Freezer Model 44001 Instruction Manual](#)

## TABU 44001

# TABU 7 Cubic Feet Chest Deep Freezer Model 44001 Instruction Manual

Model: 44001

## 1. INTRODUCTION

Thank you for purchasing the TABU 7 Cubic Feet Chest Deep Freezer, Model 44001. This manual provides essential information for the safe and efficient operation, installation, and maintenance of your new appliance. Please read this manual thoroughly before use and retain it for future reference.

This chest freezer is designed to provide reliable frozen food storage with adjustable temperature control and a convenient removable storage basket.



Image 1.1: The TABU 7 Cubic Feet Chest Deep Freezer in a kitchen environment.

## 2. IMPORTANT SAFETY INFORMATION

To reduce the risk of fire, electric shock, or injury when using your freezer, follow these basic precautions:

- Read all instructions before using the appliance.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.

- This appliance is intended for household use only.
- Ensure the freezer is properly grounded.
- Unplug the freezer before cleaning or performing any maintenance.
- Do not damage the refrigerant circuit.
- Keep ventilation openings clear of obstruction.
- Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.

### 3. PACKAGE CONTENTS

---

Upon unpacking, please verify that all items are present and undamaged:

- TABU Chest Deep Freezer Unit
- Removable Storage Basket
- Side Handle (for installation)
- User Manual (this document)

### 4. SETUP AND INSTALLATION

---

#### 4.1 Unpacking

Carefully remove all packaging materials. Keep packaging for future transport if needed. Inspect the freezer for any shipping damage. If damage is found, do not plug in the unit and contact customer support.

#### 4.2 Placement

- Place the freezer on a firm, level surface. The adjustable leveling legs can be used to balance the device on uneven surfaces.
- Ensure adequate ventilation around the freezer. Allow at least 4 inches (10 cm) of space on the sides and back, and 12 inches (30 cm) at the top for proper air circulation.
- Avoid placing the freezer in direct sunlight or near heat sources (e.g., stoves, heaters).
- Do not install in areas where the temperature is likely to fall below 50°F (10°C) or rise above 90°F (32°C).

#### 4.3 Initial Use

After placing the freezer, it is best to keep the unit upright for at least 24 hours before plugging it in. This allows the refrigerant to settle, ensuring optimal performance.

#### 4.4 Power Connection

Plug the freezer into a dedicated, grounded electrical outlet. Do not use extension cords or adapter plugs.

### 5. KEY FEATURES

---

- **7 Cubic Feet Capacity:** Provides ample storage for frozen goods.
- **7-Level Adjustable Temperature Control:** Allows precise temperature management from -7.6°F to 6.8°F (-

14°C to -22°C).

- **Removable Storage Basket:** Convenient for organizing smaller items and easy access.
- **Hinged Door Design:** The freezer door can remain open between 45° and 90° for easy loading and unloading.
- **Low Noise Operation:** Operates at less than or equal to 40dB.
- **Energy Efficient:** Utilizes an R600a high-efficiency compressor for rapid cooling and energy saving.

## Advanced Cooling Technology

Equipped with cutting-edge rapid cooling technology, this freezer swiftly lowers temperatures, effectively locking in nutrients and flavors.



Image 5.1: Advanced Cooling Technology ensures efficient freezing.

## Small Chest Freezer Large Capacity

Despite its small size, this chest freezer boasts a large capacity, allowing you to store plenty of frozen foods, including meats, vegetables, fruits, and more.



Image 5.2: The spacious interior and removable basket for organized storage.



Image 5.3: The freezer operates quietly, with noise levels below 40dB.

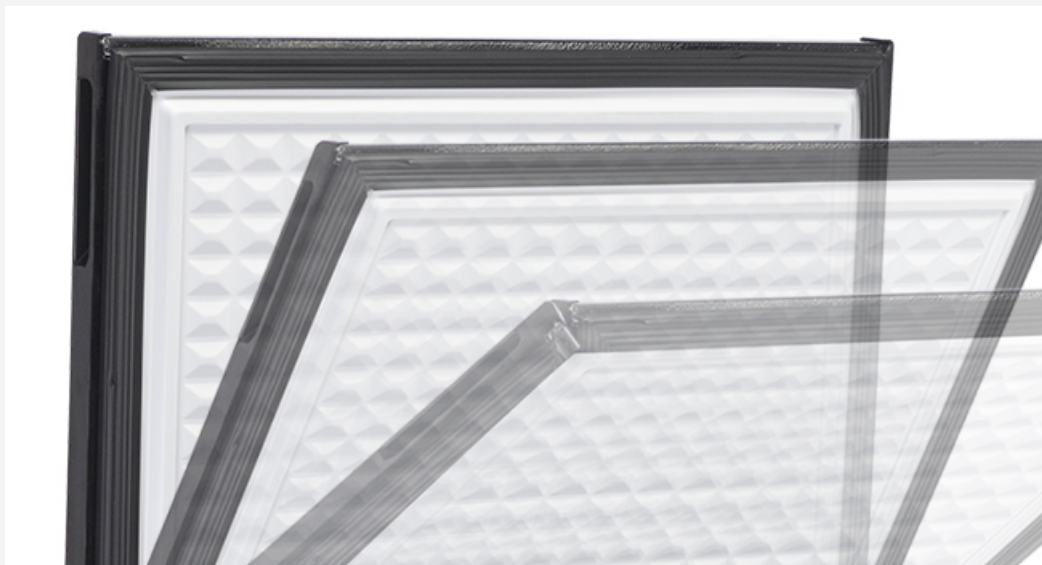


Image 5.4: The hinged door design allows for convenient access.

## 6. OPERATING INSTRUCTIONS

### 6.1 Temperature Control

The freezer features a 7-level adjustable temperature control dial located on the front of the unit. The temperature can be set from -7.6°F to 6.8°F (-14°C to -22°C).

- Turn the dial to select the desired temperature setting.
- Setting '0' indicates the freezer is off.
- Higher numbers on the dial correspond to colder temperatures.
- For initial startup, set the dial to a colder setting (e.g., 5 or 6) for a few hours to allow the freezer to reach optimal freezing temperature before loading food.

## 7-Level Temp Control

Whether you need to freeze delicate items like fruits and vegetables or store meats and seafood at lower temperatures, this freezer has got you covered.

7.6°F ~ 6.8°F



Image 6.1: The 7-level temperature control dial for precise freezing.

## 6.2 Loading Food

- Do not overload the freezer. Allow space for air circulation around items.
- Use the removable storage basket for frequently accessed or smaller items.
- Ensure food is properly packaged to prevent freezer burn and maintain quality.

## 7. MAINTENANCE

### 7.1 Defrosting

Over time, frost will accumulate on the interior surfaces. Defrost the freezer when the frost layer is approximately 0.2 inches (5 mm) thick.

1. Unplug the freezer from the power outlet.
2. Remove all food items and place them in another freezer or cooler.
3. Leave the lid open to allow the frost to melt naturally. You can place towels at the bottom to absorb water.
4. Do not use sharp objects or heating devices to remove frost, as this can damage the freezer.
5. Once defrosted, wipe the interior dry with a soft cloth.
6. Plug the freezer back in and allow it to cool down before returning food.

### 7.2 Cleaning

Clean the interior and exterior of the freezer regularly.

- Always unplug the freezer before cleaning.
- Use a mild detergent and warm water to clean interior surfaces. Avoid abrasive cleaners or solvents.
- Wipe the exterior with a damp cloth and dry thoroughly.
- Clean the door gasket regularly to ensure a proper seal.

## 8. TROUBLESHOOTING

Before contacting customer support, please check the following common issues:

Problem	Possible Cause	Solution
Freezer does not operate	No power to the unit.	Check if the power cord is securely plugged in. Verify the outlet has power.
Freezer is not cold enough	Temperature setting is too high. Door is not closed properly. Excessive frost buildup.	Adjust temperature control to a colder setting. Ensure the door is fully closed. Defrost the freezer.
Excessive noise	Freezer is not level. Objects touching the back or sides.	Adjust leveling legs to ensure the freezer is stable. Move objects away from the freezer.
Door does not seal properly	Door gasket is dirty or damaged. Freezer is not level.	Clean the door gasket. Adjust leveling legs.

## 9. SPECIFICATIONS

Feature	Detail
Brand	TABU
Model Number	44001
Capacity	7 Cubic Feet
Product Dimensions (D x W x H)	22 x 22 x 32 inches (55.88 x 55.88 x 81.28 cm)
Item Weight	59 pounds (26.76 kg)
Color	Black
Installation Type	Freestanding
Door Hinges	Top
Door Material Type	Stainless Steel
Temperature Range	-7.6°F to 6.8°F (-14°C to -22°C)
Noise Level	≤ 40dB
Refrigerant	R600a

## 10. WARRANTY AND CUSTOMER SUPPORT

Your TABU Chest Deep Freezer comes with a manufacturer's warranty. For specific warranty details, please refer to the warranty card included with your product or contact customer support.

If you require any assistance, have questions, or encounter issues not covered in this manual, please do not hesitate to contact us. Our customer support team is available to help and will respond to your inquiries within 24 hours.

**Contact Information:** Please refer to the product packaging or the official TABU website for the most current customer support contact details.

© 2025 TABU. All rights reserved.