



[Manuals.plus](#) /

> [TeqHome](#) /

> TeqHome 1500W Handheld Steam Cleaner (Model: GPCT5492) User Manual

TeqHome GPCT5492

TeqHome 1500W Handheld Steam Cleaner User Manual

Model: GPCT5492

1. INTRODUCTION

This manual provides essential information for the safe and effective operation of your TeqHome 1500W Handheld Steam Cleaner. Please read all instructions carefully before first use and retain this manual for future reference.

The TeqHome Handheld Steam Cleaner is designed for various household cleaning tasks, utilizing high-temperature, pressurized steam to clean and sanitize surfaces without harsh chemicals.

2. IMPORTANT SAFETY INSTRUCTIONS

WARNING: To reduce the risk of fire, electric shock, or injury, always follow basic safety precautions when using an electrical appliance.

- Read all instructions before using the appliance.
- Do not direct steam at people, animals, or electrical appliances.
- Do not immerse the appliance in water or other liquids.
- Always unplug the appliance from the electrical outlet when not in use and before performing any maintenance.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with a damaged cord or plug. If the appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Keep cord away from heated surfaces.
- Do not handle plug or appliance with wet hands.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not use without water in the tank.
- Use caution when refilling the water tank to avoid hot water or steam burns.
- Store the appliance indoors in a cool, dry place.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

3. PACKAGE CONTENTS

Verify that all items are present and in good condition. If any items are missing or damaged, contact customer support.

- TeqHome 1500W Handheld Steam Cleaner Main Unit
- Steam Outlet Hose
- Power Cord
- Copper Nozzle (High Pressure Nozzle)
- Extension Tube
- Steel Brush
- Nylon Brush (Small)
- Big Nylon Brush
- Big Scraper with Cover
- Small Scraper
- Glass Scraper with Squeegee Bar
- Cloth Cover
- Rubber Rings (3x)
- Protective Gloves
- User Manual

9 ACCESSORIES INCLUDED



Figure 3.1: All included accessories for the TeqHome 1500W Handheld Steam Cleaner.

4. PRODUCT OVERVIEW

The TeqHome 1500W Handheld Steam Cleaner features a robust design for efficient cleaning.

- **High Temperature & Pressure:** 1500W heating element generates 3.5 Bar pressurized steam, reaching 212°F (100°C) in approximately 15 seconds.
- **Adjustable Steam Levels:** Six adjustable steam levels allow for precise control, from a gentle mist for delicate surfaces to a powerful jet for stubborn grime.
- **Large Water Tank:** A 1200ML capacity water tank provides up to 1 hour of continuous steam, reducing the need for frequent refills.
- **Portable Design:** Features an extended 5.91ft (180cm) hose and a 4.97ft (151.5cm) power cord for maximum mobility.
- **Dual Control & Multiple Protections:** Control steam from both the handle and the main unit via an intelligent digital display. Includes overheating protection, dry burn prevention, and an explosion-proof steam hose.



Figure 4.1: Key features of the TeqHome Handheld Steam Cleaner.



Figure 4.2: Dual control design and adjustable handle for ergonomic use.



Figure 4.3: Large capacity water tank with safety features.

5. SETUP AND ASSEMBLY

1. Fill Water Tank:

- Ensure the unit is unplugged.
- Remove the top cover of the water tank.
- Carefully pour clean water into the tank, ensuring not to exceed the 1200ML maximum fill line. Do not use distilled water or water with additives.
- Securely replace the top cover.

2. Attach Desired Accessory:

- Select the appropriate cleaning attachment for your task (e.g., copper nozzle, extension tube, brush).
- Ensure a rubber ring is properly seated on the accessory.
- Screw the accessory firmly onto the steam gun nozzle.

3. Connect Power:

- Plug the power cord into a standard 110V electrical outlet.



Figure 5.1: Visual guide for initial setup and use.

Your browser does not support the video tag.

Video 5.1: Official TeqHome product video demonstrating setup and accessory attachment.

6. OPERATING INSTRUCTIONS

1. **Power On:** Press the power button on the main unit or the handle. The digital display will illuminate.
2. **Wait for Heating:** The unit will begin heating. This typically takes about 15 seconds. Wait until steam is consistently produced.
3. **Adjust Steam Level:** Use the '+' and '-' buttons on the main unit or the handle to select one of the 6 adjustable steam levels. Start with a lower setting for delicate surfaces and increase as needed.
4. **Apply Steam:** Direct the steam nozzle towards the surface to be cleaned. Hold the nozzle a few inches away from the surface for general cleaning, or closer for stubborn stains.
5. **Clean Surfaces:** Move the steam cleaner slowly over the surface. For best results, use appropriate attachments (brushes, scrapers) to agitate dirt while steaming.
6. **Cleaning Examples:**
 - **Kitchen Surfaces:** Use the copper nozzle or a brush for grease on countertops, stovetops, and range hoods.
 - **Floors:** Use the extension tube and floor attachment (if applicable) for sealed hard floors.

- **Upholstery/Fabrics:** Use a cloth cover over a brush attachment for delicate fabrics. Test on an inconspicuous area first.
- **Glass/Windows:** Use the squeegee attachment for streak-free cleaning.

7. **Power Off:** When finished, press the power button to turn off the unit and unplug it from the outlet.

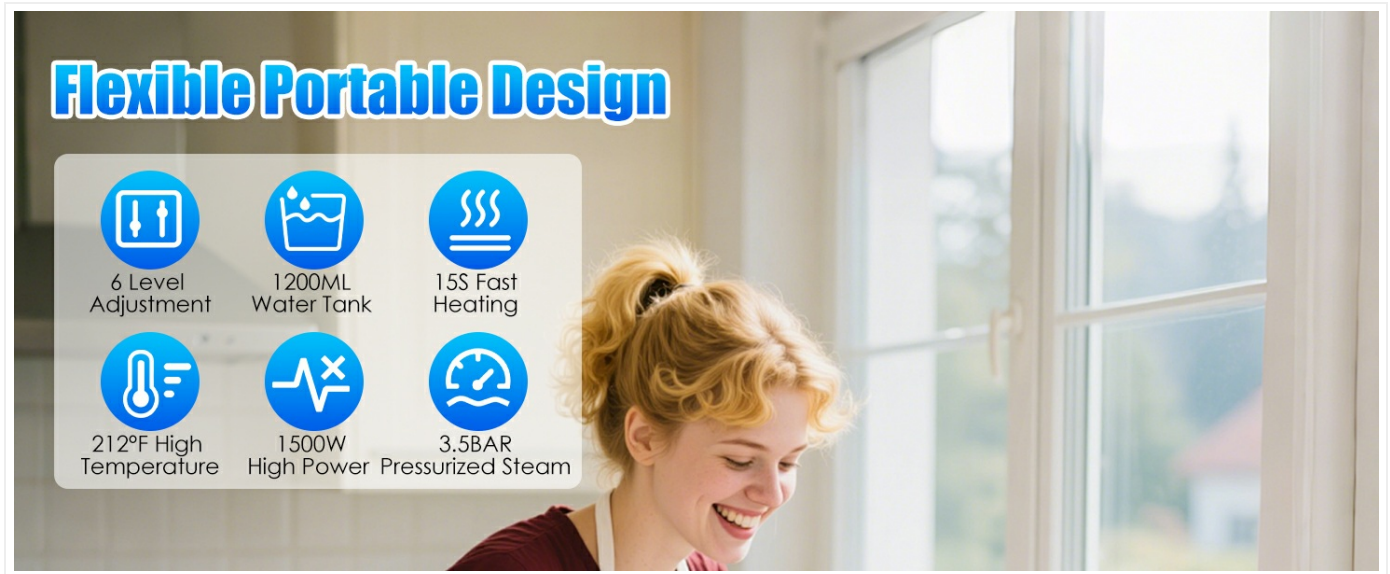


Figure 6.1: Using the steam cleaner for general kitchen cleaning.



Figure 6.2: Examples of effective cleaning results on various surfaces.

How To Use



1 Remove the top cover and add no more than 1200ML water.



2 Install the attachment you need.



3 Connect the power cord and plug into 110V socket.



4 Turn on via buttons on the handle or the machine.



5 Wait for 15S for steam to come out.



6 After use, unplug and drain the remaining water.

Figure 6.3: Detailed view of various cleaning attachments.

7. MAINTENANCE AND STORAGE

1. **Drain Water:** After each use, ensure the unit is unplugged and cooled. Carefully drain any remaining water from the tank.
2. **Clean Accessories:** Wash all attachments with warm, soapy water and rinse thoroughly. Allow them to air dry completely before storing.
3. **Wipe Down Unit:** Wipe the exterior of the steam cleaner with a damp cloth. Do not use abrasive cleaners or solvents.
4. **Descaling (Periodically):** Depending on water hardness, mineral deposits may build up. Consult the manufacturer's website or customer support for descaling recommendations.
5. **Storage:** Store the steam cleaner and its accessories in a cool, dry place, away from direct sunlight and out of reach of children.



Figure 7.1: Draining residual water from the steam cleaner after use.

8. TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|---------|----------------|----------|
|---------|----------------|----------|

| Problem | Possible Cause | Solution |
|-------------------------------|--|--|
| No steam or low steam output. | <ul style="list-style-type: none"> • Water tank is empty. • Unit not fully heated. • Nozzle/attachment clogged. | <ul style="list-style-type: none"> • Refill water tank. • Wait for 15-30 seconds for the unit to heat up. • Clean or replace the nozzle/attachment. |
| Water leaking from nozzle. | <ul style="list-style-type: none"> • Accessory not properly attached. • Rubber ring missing or damaged. • Unit not fully heated (water spitting). | <ul style="list-style-type: none"> • Ensure accessory is screwed on tightly. • Check and replace rubber ring if necessary. • Allow unit to fully heat before use. |
| Unit not turning on. | <ul style="list-style-type: none"> • Not plugged in. • Power outlet issue. • Overheating protection activated. | <ul style="list-style-type: none"> • Check power connection. • Test outlet with another appliance. • Unplug and allow unit to cool down for 30 minutes. |

If you encounter issues not listed here, please contact TeqHome customer support.

9. SPECIFICATIONS

- **Model:** GPCT5492
- **Power:** 1500W
- **Voltage:** 110V
- **Water Tank Capacity:** 1200ML
- **Steam Pressure:** 3.5 Bar
- **Max Steam Temperature:** 212°F (100°C)
- **Heat-up Time:** Approximately 15 seconds
- **Hose Length:** 5.91 ft (180 cm)
- **Power Cord Length:** 4.97 ft (151.5 cm)
- **Product Dimensions:** 7.28 x 5.91 x 5.12 inches
- **Item Weight:** 4.31 pounds

6 Level Adjustable Handle

Dual Control Design, Engineered for Effortless Operation



Figure 9.1: Product dimensions and accessory measurements.

10. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official TeqHome website. You may also contact the seller directly for assistance.

Seller: YuFeng XiangTai

Amazon Store: [TeqHome Store on Amazon](#)

