

[Manuals.plus](#) /

› [ELYKEN](#) /

› ELYKEN 4-Tier Expandable Shoe Rack Instruction Manual (Model HSR014B1)

## ELYKEN HSR014B1

# ELYKEN 4-Tier Expandable Shoe Rack Instruction Manual

Model: HSR014B1

## INTRODUCTION

---

Thank you for choosing the ELYKEN 4-Tier Expandable Shoe Rack. This manual provides detailed instructions for assembly, operation, and maintenance to ensure optimal use of your new shoe organizer. This product is designed to offer a versatile and durable solution for shoe storage in various settings, including entryways, closets, and living rooms.

## SAFETY INFORMATION

---

- Ensure all components are securely fastened before placing items on the rack.
- Do not overload the shelves beyond their intended capacity.
- Keep small parts away from children during assembly to prevent choking hazards.
- Place the shoe rack on a level surface to maintain stability.
- Avoid climbing or standing on the shoe rack.

## PACKAGE CONTENTS

---

Please verify that all parts are present before beginning assembly:

- Side Frames (2)
- Mesh Shelf Panels (4)
- Adjustable Feet (4)
- Side Hooks (4)
- Telescopic Adjustment Screws (2)
- Assembly Screws and Allen Wrench

## ASSEMBLY INSTRUCTIONS

---

For a visual guide, please refer to the assembly video below. Follow these steps carefully for proper setup.

Official ELYKEN Shoe Rack Assembly Guide Video. This video demonstrates the step-by-step process for assembling your expandable shoe rack, including attaching shelves, installing adjustable feet, and stacking multiple units.

1. **Prepare Components:** Lay out all components on a soft, clean surface to prevent scratches. Identify the side frames, mesh shelf panels, screws, adjustable feet, and hooks.
2. **Assemble First Tier:** Attach the first mesh shelf panel to one side frame using the provided screws. Ensure the panel is oriented correctly. Repeat for the second side frame, creating a basic two-tier unit.
3. **Install Adjustable Feet:** Screw the four adjustable feet into the designated holes at the bottom of the side frames. These feet help stabilize the rack on uneven surfaces.
4. **Install Telescopic Adjustment Screws:** Insert the telescopic adjustment screws into the designated holes on the inner side of the shelf frames. These screws allow you to lock the shelves at your desired width.
5. **Secure Mesh Panels:** For each mesh shelf, locate the small metal tabs. Bend these tabs slightly to secure the mesh panel to the frame, preventing stretching or falling off.
6. **Attach Side Hooks:** Hook the four side hooks onto the outer frame of the shoe rack. These hooks are useful for hanging small items like keys or umbrellas.
7. **Stacking (Optional):** If you have multiple units, align the top of one unit with the bottom of another. Secure them together using the provided connectors or screws to create a taller, multi-tier storage solution.
8. **Adjust Width:** Once assembled, adjust the width of the shoe rack by sliding the inner mesh panels. Tighten the telescopic adjustment screws to secure the desired width.

## OPERATING INSTRUCTIONS

---

### Expandable Width

The ELYKEN shoe rack features an expandable design, allowing its width to adjust from 18.6 to 30.5 inches. To adjust the width, loosen the telescopic adjustment screws, slide the inner mesh panels to your desired length, and then re-tighten the screws to secure the position.

# Expandable Design

Width adjusts from **18.5"** to **31.7"** with precision



This image illustrates the expandable design, showing how the shoe rack can be adjusted in width to fit different spaces and storage needs.

## Adjustable Shelf Height

Each shelf can be customized in height to accommodate various shoe types, including high heels and boots. Simply reposition the shelf panels into the desired slots on the side frames. Ensure both sides are adjusted to the same height for stability.

# Adjustable Shelves to Fit High Boots

The shelf offers four adjustable height settings



The adjustable shelf feature allows for flexible storage, easily accommodating taller footwear like boots by changing the shelf's position.

## Stackable Design

The shoe rack is designed to be stackable, allowing you to combine multiple units (e.g., 2-tier, 4-tier) to maximize vertical storage space. Secure stacked units using the provided hardware to ensure stability.

# Stackable Design

Maximize vertical storage space with exceptional flexibility



This image illustrates the stackable design, showing how multiple units can be combined to create a taller storage solution.

## Side Hooks

Utilize the four integrated side hooks for hanging small accessories such as keys, umbrellas, or small bags, keeping your entryway tidy.



A close-up view of the practical side hooks, perfect for organizing small items.

## Adjustable Feet

The adjustable feet at the bottom of the rack can be rotated to compensate for uneven flooring, ensuring the rack remains stable and level.



This image highlights the adjustable feet, which can be rotated to ensure stability on uneven surfaces.

## MAINTENANCE

---

To keep your ELYKEN shoe rack in excellent condition:

- Wipe down the metal surfaces with a soft, damp cloth.
- Avoid using abrasive cleaners or harsh chemicals, as these may damage the powder-coated finish.
- Periodically check all screws and connections to ensure they remain tight.
- For indoor use, avoid prolonged exposure to direct sunlight or high humidity.

## TROUBLESHOOTING

---

- **Wobbly Rack:** Ensure all screws are tightened. Adjust the leveling feet at the bottom to stabilize the rack on uneven floors.
- **Shelves Not Holding:** Verify that the mesh panels are correctly seated in the frame and the small metal tabs are bent to secure them.
- **Difficulty Expanding/Contracting:** Check that the telescopic adjustment screws are sufficiently loosened before attempting to adjust the width. Ensure no debris is obstructing the sliding mechanism.
- **Missing Parts:** If any parts are missing, please contact ELYKEN customer support with your purchase details.

## SPECIFICATIONS

---

Feature	Detail
Model Number	HSR014B1
Material	Iron
Color	Black
Dimensions (D x W x H)	11.8"D x 31.7"W x 33.5"H (Expanded)
Expandable Width Range	18.6" to 30.5"
Number of Tiers	4
Mounting Type	Floor Mount (Freestanding)
Special Features	Expandable, Stackable, Adjustable Height, Side Hooks, Adjustable Feet
Item Weight	15.43 Pounds

## WARRANTY AND SUPPORT

---

ELYKEN products are designed for quality and durability. For any questions, concerns, or warranty claims, please contact ELYKEN customer support through your retailer or the official ELYKEN website. Please have your purchase information and model number (HSR014B1) ready when contacting support.