

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Lubluelu](#) /

› [Lubluelu Upholstery Cleaner Machine A6Cleaner User Manual](#)

## Lubluelu A6Cleaner

# Lubluelu Upholstery Cleaner Machine A6Cleaner User Manual

Model: A6Cleaner

## INTRODUCTION

---

This manual provides instructions for the safe and efficient operation and maintenance of your Lubluelu A6Cleaner Upholstery Cleaner Machine. Please read all instructions carefully before use and retain this manual for future reference.

## IMPORTANT SAFETY INSTRUCTIONS

---

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury.

- Do not immerse the machine in water or other liquids.
- Do not use with damaged cord or plug.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Use only as described in this manual.
- Unplug from outlet when not in use and before cleaning.

## PRODUCT COMPONENTS

---

Familiarize yourself with the parts of your Lubluelu A6Cleaner.



**Image:** A detailed diagram illustrating the various components of the Lubluelu A6Cleaner, such as the clean water tank, dirty water tank, hose, power cord, suction nozzle, and included brushes.

- **Cleaner Machine:** Main unit with motor, tanks, hose, and power cord.
- **Clean Water Tank:** For fresh water and cleaning solution. Capacity: 1.75L (59.2 oz).
- **Dirty Water Tank:** Collects extracted dirty water. Capacity: 1L (33.8 oz).
- **Suction Nozzle:** The primary cleaning tool.
- **Ninon Brush:** For deep cleaning stubborn stains on carpets and pet mats.
- **Silicone Brush:** For gentle cleaning of delicate fabrics prone to pilling.
- **Hose Rinse Tool:** For self-cleaning the hose.
- **Cord Organizer:** For neat storage of the power cord.

## SETUP AND ASSEMBLY

---

1. **Unpack the Machine:** Carefully remove all components from the packaging.
2. **Attach Hose and Nozzle:** Ensure the flexible hose is securely connected to the main unit and the desired cleaning nozzle (Ninon or Silicone brush) is attached to the end of the hose.
3. **Fill the Clean Water Tank:** Remove the clean water tank. Fill it with warm water (not exceeding 140°F/60°C) and an appropriate amount of upholstery cleaning solution as per the solution manufacturer's instructions. Do not overfill. Reattach the tank securely.
4. **Prepare the Dirty Water Tank:** Ensure the dirty water tank is empty and properly seated in the machine.
5. **Connect Power:** Unwind the power cord and plug the machine into a grounded electrical outlet.

## OPERATING INSTRUCTIONS

---

The Lubluelu A6Cleaner uses a 3-step cleaning process for effective stain removal.

### 3-Step Cleaning Process

## 3-Step Quick Cleaning

Tip: Spraying detergent onto the fabric surface and scraping it can remove stubborn stains more effectively.



**Image:** Visual guide to the three cleaning steps: spraying cleaning solution, scrubbing the stained area, and then suctioning the liquid and dirt.

1. **Spray:** Turn on the machine. Hold the nozzle over the stained area and press the trigger to spray cleaning solution onto the fabric. Allow the solution to penetrate for a few minutes, especially for stubborn stains.
2. **Scrub:** Gently scrub the stained area with the brush attachment. For tougher stains, you may need to apply more pressure or repeat the spraying and scrubbing.
3. **Suction:** Release the spray trigger and firmly press the nozzle onto the surface. Pull the nozzle slowly across the wet area to extract the dirty water. Repeat until no more dirty water is being extracted and the area is as dry as possible.

The 600W motor provides up to 20 kPa of strong suction for deep stain removal. The 16.4 ft (5 m) power cord and 5.6 ft (1.7 m) flexible hose allow for extended reach, making it suitable for large rooms, sofas, stairs, and car interiors.

### Video Demonstration: Cleaning a Mat

Your browser does not support the video tag.

**Video:** A demonstration of the Lubluelu Upholstery Cleaner in action, showing how to effectively clean a mat using the suction and spray functions. This video illustrates the cleaning process and the machine's performance.

## MAINTENANCE AND STORAGE

### Emptying and Cleaning Tanks

**Image:** Instructions for removing and emptying the dirty water tank, highlighting the ease of maintenance.

- After each use, or when the dirty water tank reaches its maximum level, turn off and unplug the machine.
- Remove the dirty water tank and empty its contents into a drain. Rinse the tank thoroughly with clean water.
- Empty any remaining solution from the clean water tank and rinse it.
- Allow both tanks to air dry before reassembling them onto the machine.

### Self-Cleaning Function (Hose)



**Using the Hose Cleaning Tool,  
You Can Easily Clean the Dirty Water Hose.**

**Image:** A visual representation of the self-cleaning tool in use, flushing the hose to prevent dirt buildup and odors.

- To prevent dirt buildup and odors in the hose, use the dedicated self-cleaning attachment.
- Attach the hose rinse tool to the end of the hose.
- Ensure the clean water tank has some clean water.
- Turn on the machine and press the self-cleaning button (if applicable, or run clean water through the hose by pressing the spray trigger).
- Allow water to flush through the hose until it runs clear.

## Storage



### Easy to Store & Move

**Image:** The upholstery cleaner stored neatly in a cabinet, demonstrating its compact size and integrated storage features for the hose and power cord.

- Wrap the power cord neatly using the integrated cord organizer.
- Store the hose on its built-in holder.
- Store the machine in a dry, cool place, away from direct sunlight and extreme temperatures.

## TROUBLESHOOTING

If you encounter issues with your upholstery cleaner, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Machine does not turn on.	Not plugged in; power outlet not working; circuit breaker tripped.	Ensure power cord is securely plugged into a working outlet. Check circuit breaker.
No spray from nozzle.	Clean water tank empty; nozzle clogged; pump malfunction.	Refill clean water tank. Clean nozzle. If problem persists, contact customer service.
Low suction.	Dirty water tank full; hose or nozzle clogged; tank not seated correctly.	Empty dirty water tank. Clear any blockages in hose/nozzle. Ensure tanks are securely in place.
Water leaking.	Tanks not properly sealed; hose connection loose.	Check that both clean and dirty water tanks are correctly installed and sealed. Ensure hose connections are tight.

## PRODUCT SPECIFICATIONS

Feature	Detail
Brand	Lubluelu
Model Number	A6Cleaner
Motor Power	600W
Suction Power	20 kPa
Clean Water Tank Capacity	1.75 Liters (59.2 oz)
Dirty Water Tank Capacity	1 Liter (33.8 oz)
Power Cord Length	16.4 ft (5 m)
Hose Length	5.6 ft (1.7 m)
Item Weight	6.61 Pounds
Product Dimensions (D x W x H)	11.8"D x 14.2"W x 7.1"H
Included Components	Cleaner Machine (with Hose and Power Cord), Cord Organizer, Ninon brush & silicone brush, self cleaning tool
Power Source	AC

## WARRANTY AND SUPPORT

Your Lubluelu A6Cleaner Upholstery Cleaner Machine comes with a **1-Year Manufacturer's Warranty**.

For any questions or assistance regarding your product, please contact Lubluelu customer service via the service email provided with your purchase or on the official Lubluelu website. Our professional team is available to ensure your complete satisfaction.



© 2025 Lubluelu. All rights reserved.