

[Manuals.plus](#) /

› [Edillas](#) /

› Edillas Kids Digital Watch Model 8206B Instruction Manual

Edillas 8206B

Edillas Kids Digital Watch Model 8206B Instruction Manual

Model: 8206B | Brand: Edillas

INTRODUCTION

This manual provides detailed instructions for setting up and operating your Edillas Kids Digital Watch Model 8206B. This watch is designed for children aged 4-12 and features a digital display, multiple functions, and a durable, water-resistant design. Please read these instructions carefully to ensure proper use and to maximize the watch's functionality.



Image: Edillas Kids Digital Watch Model 8206B, showcasing its design and digital display.

PRODUCT OVERVIEW AND BUTTON FUNCTIONS

The Edillas Kids Digital Watch features four primary buttons for navigation and function control. Understanding these buttons is essential for operating the watch.



Image: A diagram illustrating the location and labels of the four control buttons on the Edillas Kids Digital Watch.

- **LIGHT Button:** Activates the colorful backlight.
- **MODE Button:** Cycles through different modes (Time, Alarm, Stopwatch). Used to enter and confirm settings.
- **START Button:** Used to adjust values upwards during setting, or to start/stop the stopwatch.
- **RESET Button:** Used to adjust values downwards during setting, or to reset the stopwatch. Also used in combination with MODE for hourly chime control.

SETUP AND BASIC OPERATION

1. Time Setting (12H/24H Format)

1. From the normal time display, press the **MODE** button three times to enter time setting mode. The seconds will flash.
2. Press the **RESET** button to set the seconds to zero.
3. Press the **START** button to move to the hour setting. The hours will flash.
4. Press the **RESET** button to adjust the hour. Pressing **RESET** repeatedly will cycle through hours and switch between 12-hour (with AM/PM indicator) and 24-hour formats.
5. Press the **START** button to move to the minute setting. The minutes will flash.
6. Press the **RESET** button to adjust the minutes.
7. Press the **MODE** button once to exit time setting mode and return to the normal time display.

2. Date Setting

1. After setting the time, while still in time setting mode (hours flashing), press the **START** button again to move to the month setting. The month will flash.
2. Press the **RESET** button to adjust the month.
3. Press the **START** button to move to the day setting. The day will flash.
4. Press the **RESET** button to adjust the day.
5. Press the **START** button to move to the day of the week setting. The day of the week will flash.

6. Press the **RESET** button to adjust the day of the week.
7. Press the **MODE** button once to exit date setting mode and return to the normal time display.



Image: A child wearing the watch, with an overlay indicating the calendar function, demonstrating its utility for daily planning.

3. Alarm Setting

1. From the normal time display, press the **MODE** button twice to enter alarm setting mode. The hours will flash.
2. Press the **RESET** button to adjust the alarm hour.
3. Press the **START** button to move to the minute setting. The minutes will flash.
4. Press the **RESET** button to adjust the alarm minutes.
5. Press the **MODE** button once to exit alarm setting mode.

Turning Alarm On/Off

- From the normal time display, press the **MODE** button twice to enter alarm mode.
- Press the **START** button to toggle the alarm on or off. An alarm icon will appear/disappear on the display.
- Press the **MODE** button to return to the normal time display.



Image: A child waking up, with an illustration of the watch's alarm sound, highlighting the alarm function.

4. Hourly Chime On/Off

- From the normal time display, press and hold the **RESET** button and then press the **MODE** button simultaneously.
- Repeat the action to toggle the hourly chime on or off.

5. Stopwatch Function

1. From the normal time display, press the **MODE** button once to enter stopwatch mode. The display will show 00:00:00.
2. Press the **START** button to begin timing.
3. Press the **START** button again to pause timing.
4. Press the **RESET** button to reset the stopwatch to 00:00:00.
5. Press the **MODE** button to exit stopwatch mode and return to the normal time display.



Image: A boy riding a bicycle, with an overlay of the watch display showing the stopwatch function, illustrating its use for sports timing.

6. Colorful Backlight

- Press the **LIGHT** button to activate the backlight. The watch features 7 different colors.
- Each press of the **LIGHT** button will cycle through the available colors or activate a flashing color mode.



Image: The Edillas Kids Digital Watch displaying its luminous feature with various LED backlight colors, showing both normal and illuminated views.

WATER RESISTANCE GUIDELINES

The Edillas Kids Digital Watch is designed with 30M/3ATM water resistance. This means it is suitable for:

- Hand washing
- Raining
- Splashes
- Cold water baths
- Surface swimming

Important Note: To maintain water resistance, avoid pressing any buttons while the watch is submerged in water.



Image: A child enjoying water activities, with an overlay of the Edillas watch, emphasizing its 30M water resistance for daily use.

MAINTENANCE

- **Cleaning:** If the watch becomes dirty, it can be rinsed directly with cold water. Use a soft cloth to dry it. Avoid using harsh chemicals or abrasive materials.
- **Battery:** The watch uses Japan imported batteries for long life. If the battery or movement experiences issues, please contact customer support for assistance with replacement.
- **Storage:** Store the watch in a cool, dry place away from direct sunlight and extreme temperatures when not in use.

TROUBLESHOOTING

- **Hourly Chime Not Working/Turning Off:** If the hourly chime is not functioning as expected or you wish to turn it off, refer to the "Hourly Chime On/Off" section under Setup and Basic Operation.
- **Time Not Displaying Correctly:** Ensure the watch is not in a setting mode. If the time is incorrect, follow the "Time Setting" instructions to reset it.
- **Watch Not Responding:** If the watch is unresponsive, the battery may be low. Contact customer support for battery replacement assistance.
- **Water Damage:** While the watch is water-resistant, pressing buttons underwater can compromise the seal. If water enters the watch, discontinue use and contact customer support.

For any issues not covered here, please refer to the Customer Support section.

SPECIFICATIONS



Image: Detailed view of the Edillas Kids Digital Watch, illustrating its dimensions, materials, and components.

Feature	Detail
Model Number	8206B
Product Dimensions	8.27 x 0.55 x 0.39 inches
Item Weight	1.41 ounces (40 grams)
Dial Case Thickness	1.3 cm / 0.51 inches
Minimum Wrist Fit	14 cm / 5.5 inches
Maximum Wrist Fit	19 cm / 7.48 inches
Water Resistance	30M / 3ATM
Movement	Japan Imported Digital Movement
Battery	1 C battery (included), Japan Imported
Case Material	Fine Metal Steel
Case Back Material	304 Stainless Steel
Strap Material	Soft TPU
Glass Material	High-Transparency Resin
Applicable Age Range	4-12 years

CUSTOMER SUPPORT

Edillas is committed to providing reliable products and satisfactory service. If you encounter any problems with your watch, or have questions not addressed in this manual, please do not hesitate to contact our customer support team. We are available to assist with product inquiries, troubleshooting, and warranty-related concerns. Please refer to your purchase documentation or the Edillas brand store on Amazon for specific contact information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question