

[Manuals.plus](#) /

> [Jocca](#) /

> JOCCA Dual Digital Air Fryer 11L (Model 2483ON) Instruction Manual

## Jocca 2483ON

# JOCCA Dual Digital Air Fryer 11L (Model 2483ON) Instruction Manual

Brand: Jocca

## 1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your JOCCA Dual Digital Air Fryer 11L. Please read it thoroughly before first use and keep it for future reference. This air fryer is designed to offer healthy meals with minimal oil, enhancing your cooking experience.

## 2. PRODUCT OVERVIEW

The JOCCA Dual Digital Air Fryer features two independent 5.5-liter compartments, allowing you to cook different foods simultaneously without flavor transfer. Its vertical design includes transparent windows for monitoring cooking progress.

### Key Features

- Large 11-liter capacity (5.5L + 5.5L) for cooking multiple dishes.
- Transparent windows on both drawers for monitoring without opening.
- Digital touch control with color LED display and 10 pre-programmed functions (fry, bake, grill, roast, dehydrate, etc.).
- Adjustable temperature from 60°C to 200°C and a timer up to 60 minutes.
- Non-stick, removable, and dishwasher-safe trays for easy cleaning.
- Space-saving vertical design.

### Components

The air fryer includes the main unit, two independent cooking baskets, and removable non-stick trays.



Figure 2.1: Front view of the JOCCA Dual Digital Air Fryer 11L.



Figure 2.2: The air fryer with both cooking drawers open, showing the interior compartments.



Figure 2.3: A close-up view of the non-stick tray positioned inside one of the air fryer's cooking baskets.



Figure 2.4: One of the air fryer's cooking baskets removed from the main unit.



Figure 2.5: The removable non-stick tray, designed for easy cleaning and food preparation.



Figure 2.6: Side view of the air fryer, highlighting the digital touch control panel.



Figure 2.7: The JOCCA Dual Digital Air Fryer placed on a kitchen countertop, ready for use.

### 3. SETUP

1. Unpack all components and remove any packaging materials.
2. Clean the cooking baskets and non-stick trays with warm soapy water before first use. Rinse thoroughly and dry completely.
3. Place the air fryer on a stable, heat-resistant surface, ensuring adequate ventilation around the unit.
4. Insert the non-stick trays into the cooking baskets, then slide the baskets into the air fryer.
5. Plug the appliance into a suitable power outlet (European VDE plug).

### 4. OPERATION

#### Basic Use

1. Place food into the cooking baskets. Do not overfill.
2. Close the baskets securely.

3. Press the power button to turn on the appliance.
4. Select a pre-programmed function or manually set the temperature (60°C to 200°C) and time (up to 60 minutes) using the touch controls.
5. Press the start button to begin cooking.
6. The transparent windows allow you to monitor cooking progress without opening the drawers.
7. When cooking is complete, carefully remove the baskets using the handles.

## Dual Cooking Function

The dual cooking feature allows for simultaneous preparation of two different dishes. Use the independent controls for each compartment to set different temperatures and times as needed.

Your browser does not support the video tag.

Video 4.1: This video demonstrates the basic operation of the air fryer, including loading food, setting temperature and time, and checking the cooked results.

## 5. MAINTENANCE AND CLEANING

1. Always unplug the air fryer and allow it to cool completely before cleaning.
2. The cooking baskets and non-stick trays are removable and dishwasher safe. Alternatively, wash them with warm soapy water and a non-abrasive sponge.
3. Wipe the exterior of the appliance with a damp cloth. Do not immerse the main unit in water.
4. Ensure all parts are dry before storing or next use.

## 6. TROUBLESHOOTING

### Common Issues and Solutions

- **Appliance does not turn on:** Ensure the power cord is securely plugged into a working outlet. Check if the power button has been pressed.
- **Food is not cooking evenly:** Ensure baskets are not overloaded. Shake or flip food halfway through cooking for best results.
- **Smoke coming from the air fryer:** This may be due to fatty foods. Ensure the baskets and trays are clean and free of grease buildup.
- **Food is not crispy:** Increase cooking time or temperature slightly. Ensure food is not overcrowded in the basket.

## 7. SPECIFICATIONS

Feature	Value
Model Name	2483ON
Brand	Jocca
Capacity	11 Liters (2 x 5.5L)
Product Dimensions	30P x 26l x 35H cm
Color	Crema
Material	Polypropylene (PP) with non-stick coating

Feature	Value
Special Features	Pre-programmed functions, Digital touch control
Power Output	1400 Watt
Temperature Range	60°C to 200°C
Timer	Up to 60 minutes
Dishwasher Safe Parts	Yes (trays and baskets)
Recommended Uses	Roasting, Baking, Dehydrating, Healthy Frying, Grilling

## 8. WARRANTY AND SUPPORT

---

For warranty information, please refer to the documentation included with your purchase or contact JOCCA customer support. Keep your proof of purchase for any warranty claims.