

[Manuals.plus](#) /

› [Nictemaw](#) /

› Nictemaw 2.8 Cu.ft Portable Washer Instruction Manual

Nictemaw QASB005584_3_GR

Nictemaw 2.8 Cu.ft Portable Washer Instruction Manual

Model: QASB005584_3_GR

1. INTRODUCTION

Thank you for choosing the Nictemaw 2.8 Cu.ft Portable Washer. This automatic washing machine is designed for convenience and efficiency in compact living spaces. Please read this manual thoroughly before operation to ensure proper use, maintenance, and safety.



Image 1: Front view of the Nictemaw 2.8 Cu.ft Portable Washer.

2. SAFETY INFORMATION

To reduce the risk of fire, electric shock, or injury, follow these basic precautions:

- Read all instructions before using the appliance.
- Do not wash articles that have been previously cleaned in, washed in, soaked in, or spotted with gasoline, dry-cleaning solvents, or other flammable or explosive substances, as they emit vapors that could ignite or explode.
- Do not add gasoline, dry-cleaning solvents, or other flammable or explosive substances to the wash water. These substances emit vapors that could ignite or explode.
- Do not allow children to play on or in the appliance. Close supervision of children is necessary when the appliance is used near children.
- Before the appliance is removed from service or discarded, remove the door to the washing compartment.
- Do not reach into the appliance if the tub or agitator is moving.

- Do not install or store this appliance where it will be exposed to the weather.
- Do not tamper with controls.
- Do not repair or replace any part of the appliance or attempt any servicing unless specifically recommended in the user-maintenance instructions or in published user-repair instructions that you understand and have the skills to carry out.
- Always disconnect the appliance from the power supply before cleaning or performing any maintenance.

3. PRODUCT OVERVIEW AND FEATURES

The Nictemaw Portable Washer offers a range of features designed for efficient and convenient laundry care.

High Capacity

This washer features a 2.8 cu. ft. stainless steel honeycomb drum, capable of holding up to 20 lbs of laundry. The unique 3D butterfly water flow generated by the impeller minimizes tangling and ensures effective cleaning.

20LBS Large Capacity

Wash all clothes at once, meet the family's needs



Put in clothes



One-button Start



Full-Auto Laundry



Image 2: Visual representation of the washer's 20 lbs capacity for various clothing items.

Versatile Wash Modes

Equipped with 10 wash programs and 8 water level options, this machine can handle various fabric types and soil levels, from delicate items to heavily soiled clothes. The clear LED display shows the selected cycle and remaining time.

Quiet Operation

An Automatic Unbalance Detection (AUD) system corrects drum imbalance, reducing vibration and noise. Adjustable leveling feet further enhance stability on uneven surfaces.

Family-Friendly Design

A child safety lock prevents accidental changes to settings. The 24-hour delay start feature allows scheduling laundry at your convenience.

Compact and Portable

With dimensions of 20.1" x 20.1" x 33.9" and integrated handles, the washer is easy to transport. It includes a built-in drain pump and extended hose for flexible drainage options.

Suitable for Various Occasions



RV Camping



Apartments



Dorms



Home

Internal Components and Washing Action



Image 4: Illustration of the high-efficiency motor, stainless steel tub, air drying function, and bionic washing action.

4. SETUP


Unpacking and Placement

- Carefully remove all packaging materials.
- Place the washer on a firm, level surface to minimize vibration during operation. Adjust the leveling feet as needed to ensure stability.
- Ensure there is adequate space around the washer for ventilation and access.

Water Connection

Connect the water inlet hose to a cold water faucet. The washer comes with two adapters to fit most standard faucets.

Machine Details

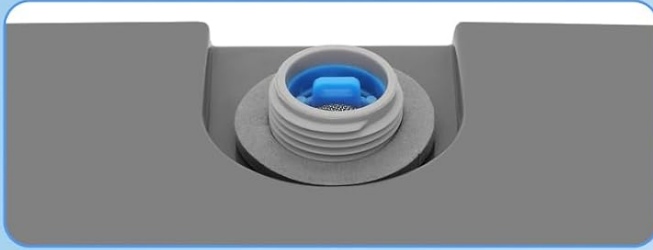

◀◀ Water Inlet

Removable Filter ▶▶



◀◀ Side Handles

Adjustable Feet ▶▶



◀◀ Accessories List

Image 5: Machine details showing water inlet, filter, handles, and adjustable feet.

Built-in Drain Pump



Image 6: Illustration of the drain pump and hose connection to a sink.

Drainage

The built-in drain pump and extended drain hose allow for flexible drainage into a sink or utility tub. Ensure the drain hose is securely positioned to prevent dislodging during the drain cycle.

Power Connection

Plug the power cord into a grounded electrical outlet. Ensure the voltage matches the appliance requirements.

5. OPERATING INSTRUCTIONS

Control Panel Overview



Image 7: Control panel with program and water level options.

Starting a Wash Cycle

1. **Load Laundry:** Open the top lid and place clothes loosely into the stainless steel drum. Do not overload.
2. **Add Detergent:** Add the appropriate amount of detergent to the dispenser.
3. **Select Water Level:** Use the 'Water Level' button to choose one of the 8 available water levels based on your load size.
4. **Select Wash Program:** Press the 'Program' button to cycle through the 10 wash programs (e.g., Normal, Standard, Quick, Large, Air Dry, Soak, Wash, Rinse, Spin, Wash+Rinse). The LED display will show the selected program.
5. **Start:** Press the 'Start/Pause' button to begin the wash cycle.

Child Safety Lock

To activate the child safety lock, press and hold the 'Child Lock' button for 3 seconds. This will disable the control panel to prevent accidental changes. Repeat the action to deactivate.



Safety Child Lock

Avoid accidental use to protect your kids

Image 8: Child safety lock feature.

Delay Start Function

The 24-hour delay start feature allows you to set a delayed start time for your wash cycle. Press the 'Preset' button to adjust the delay time. This is useful for scheduling laundry around your daily activities.

24 Hours Wash Appointment

No need to wait to sleep or go out



Wash clothes before going to bed,
Hang clothes after waking up



Hang clothes after going back home



Wash clothes during work hours

Image 9: 24-hour delay start feature.

6. MAINTENANCE

Cleaning the Removable Filter

Regularly clean the removable filter to prevent lint and debris buildup, which can affect washing performance. Refer to Image 5 for the location of the removable filter.

1. Turn off and unplug the washer.
2. Locate the filter inside the drum (as shown in Image 5).
3. Remove the filter and clean any accumulated lint or debris under running water.
4. Reinsert the clean filter securely.

Exterior Cleaning

Wipe the exterior of the washer with a soft, damp cloth. Avoid abrasive cleaners or solvents that could damage the finish.

Winterizing (for cold climates)

If the washer is stored in an area subject to freezing temperatures, drain all water from the hoses and pump to prevent damage. Consult a qualified technician if unsure.

7. TROUBLESHOOTING

Refer to the following table for common issues and their solutions.

Problem	Possible Cause	Solution
Washer does not start	Power cord unplugged; Lid not closed properly; Child lock activated.	Check power connection; Ensure lid is fully closed; Deactivate child lock.
Excessive vibration/noise	Washer not level; Load unbalanced; Shipping bolts not removed (if applicable).	Adjust leveling feet; Redistribute laundry evenly; Ensure all shipping bolts are removed.
Water leakage	Hose connections loose; Drain hose improperly positioned.	Tighten all hose connections; Secure drain hose in sink or tub.
Water not draining	Drain hose kinked or blocked; Filter clogged.	Check drain hose for obstructions; Clean the removable filter.
Clothes not clean	Overloading; Insufficient detergent; Incorrect wash program.	Reduce load size; Use recommended detergent amount; Select appropriate wash program.

8. SPECIFICATIONS

Feature	Detail
Model Name	QASB005584_3_GR
Product Dimensions (D x W x H)	20.07" x 20.07" x 33.86"
Capacity	2.8 cubic feet (approx. 20 lbs)
Brand	Nictemaw
Special Feature	High Efficiency
Access Location	Top Load
Color	Gray
Cycle Options	Quick Wash (and 9 other programs)
Material	Metal, Plastic, Stainless Steel
Controls Type	Touch
Operation Mode	Fully Automatic
Noise Level	55 Decibels
Installation Type	Freestanding

Feature	Detail
Drum Material	Stainless Steel
Included Components	Drain Hose

9. WARRANTY AND SUPPORT

This Nictemaw Portable Washer comes with a **Two-year warranty**. Additionally, one year of product assistance is provided. If you have any questions or require assistance with your washing machine, please send a message via Amazon. The manufacturer will respond as soon as possible to address your concerns.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question