

AGXOV D50

AGXOV D50 128GB MP3 Player User Manual

Model: D50

1. INTRODUCTION

Thank you for choosing the AGXOV D50 MP3 Player. This device is designed to provide a versatile portable entertainment experience, featuring music playback, Bluetooth 5.3 connectivity, FM radio, voice recording, and e-book reading. This manual will guide you through the setup, operation, and maintenance of your new device.

2. PRODUCT OVERVIEW

2.1 Package Contents

Please check the package for the following items:

- AGXOV D50 MP3 Player x1
- USB-C Charging Cable x1
- Wired Headphones x1
- User Manual x1



Figure 2.1: Package Contents. The image displays the MP3 player, a USB-C charging cable, wired headphones, and the user manual.

2.2 Device Layout and Controls

Familiarize yourself with the buttons and ports on your AGXOV D50 MP3 Player.



Figure 2.2: Device Layout and Controls. This image illustrates the front and side views of the MP3 player, highlighting the function of each button and port, including the TF card slot and charging port.

- **Return Key:** Navigates back to the previous screen.
- **Menu Key:** Accesses the main menu or context-sensitive options.
- **Power Button:** Press and hold to power on/off; short press to lock/unlock screen.
- **Upward/Downward Buttons:** Navigate through menus or adjust settings.
- **Left/Right Song Buttons:** Skip tracks or fast-forward/rewind.
- **Confirm/Play Button:** Selects an option or plays/pauses media.
- **Volume +/- Buttons:** Adjusts the audio volume.
- **TF Card Slot:** For expandable memory (Micro SD card).
- **Charging Port:** USB-C port for charging and data transfer.

- **Reset Button:** Small pinhole for factory reset (use a thin pin).

3. SETUP

3.1 Charging the Device

Before first use, fully charge the MP3 player. A full charge provides approximately 40 hours of playback time.

1. Connect the provided USB-C cable to the charging port on the player.
2. Connect the other end of the USB-C cable to a USB power adapter (not included) or a computer's USB port.
3. The battery icon on the screen will indicate charging status. The device is fully charged when the icon shows a full battery.



Figure 3.1: Charging the MP3 Player. The image depicts the device connected to a charger, emphasizing its long battery life.



Figure 3.2: Battery Specifications. This image highlights the 300mAh battery capacity and 40-hour battery life.

3.2 Inserting a Micro SD Card

The device has 128GB of built-in memory and supports expandable storage via a Micro SD (TF) card.

1. Locate the TF card slot on the side of the player.
2. Gently insert the Micro SD card into the slot with the gold contacts facing down until it clicks into place.
3. To remove, push the card in slightly until it springs out.

128GB Large capacity



Figure 3.3: 128GB Large Capacity. The image demonstrates the device's internal storage and the option to expand it with a 128GB Micro SD card.

3.3 Transferring Files

You can transfer music, e-books, and other files from your computer to the MP3 player.

1. Connect the MP3 player to your computer using the provided USB-C cable.
2. The player will appear as a removable disk drive on your computer.
3. Drag and drop your desired files into the appropriate folders on the player (e.g., 'Music' for audio files, 'E-Book' for text files).
4. Once files are transferred, safely eject the device from your computer before disconnecting the cable.

4. OPERATING INSTRUCTIONS

4.1 Power On/Off and Screen Lock

- **Power On:** Press and hold the Power button until the screen lights up.

- **Power Off:** Press and hold the Power button until a power-off option appears, then confirm.
- **Screen Lock/Unlock:** Short press the Power button to lock or unlock the screen.

4.2 Basic Navigation

Use the physical buttons to navigate through the menus and control playback.

- Use the **Upward** and **Downward** buttons to scroll through menu options.
- Press the **Confirm/Play** button to select an option or play/pause media.
- Press the **Return** key to go back to the previous screen.
- Press the **Menu** key to access the main menu or context options.



Figure 4.1: Main Menu Interface. The image shows the player's home screen with icons representing its diverse functionalities.

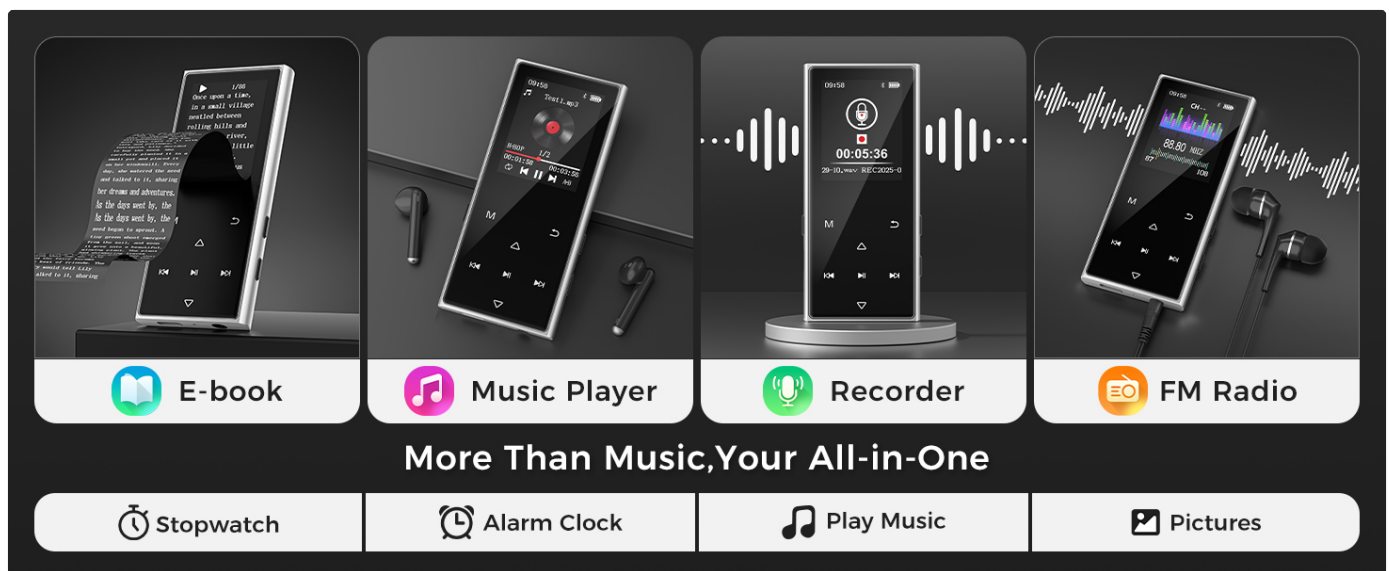


Figure 4.2: Multi-Functionality. This graphic highlights the player's various features beyond music, such as e-book reading, recording, and FM radio.

4.3 Music Playback

The D50 supports various audio formats for high-fidelity sound.

- **Supported Formats:** MP3, AAC, FLAC, WAV, WMA, OGG, APE, AIFF, LPCM, PCM, RAW, M4A, AMR.
- From the main menu, select 'Music'.
- Browse your music by artist, album, genre, or folder.
- Select a song and press the **Confirm/Play** button to start playback.
- Use the **Left/Right Song** buttons to skip tracks.
- Use the **Volume +/-** buttons to adjust volume.

Hi-Fi Clarity, Studio Quality



Figure 4.3: Hi-Fi Audio Quality and Supported Formats. The image shows the player during music playback and lists the various high-quality audio formats it supports.

4.4 Bluetooth Connectivity

Connect your MP3 player to Bluetooth headphones or speakers using Bluetooth 5.3 for stable wireless audio.


1. Ensure your Bluetooth headphones/speaker are in pairing mode.
2. On the MP3 player, navigate to 'Settings' > 'Bluetooth'.
3. Turn Bluetooth 'On'. The player will search for available devices.
4. Select your device from the list to pair. Once paired, the player will connect automatically in the future.

Bluetooth5.3



Figure 4.4: Bluetooth 5.3 Connectivity. The image displays the MP3 player connected to various audio devices via Bluetooth, highlighting its wireless capabilities.

MP3 Player with Bluetooth and WiFi

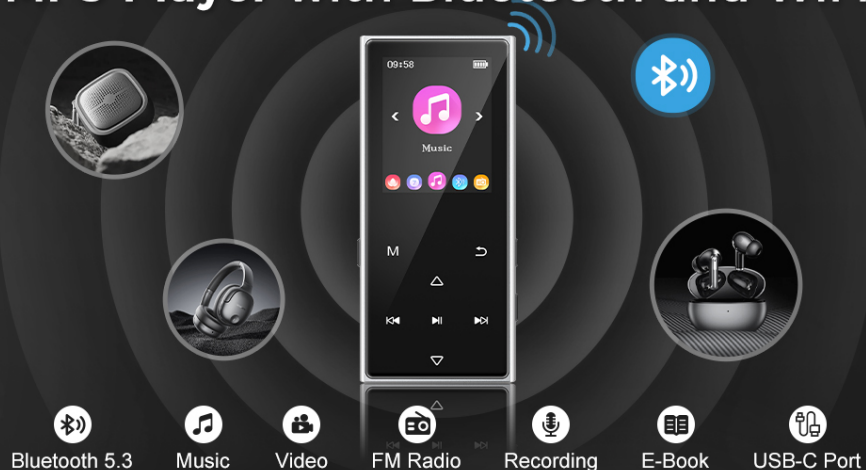

4.5 FM Radio

Listen to your favorite FM radio stations.

1. Connect wired headphones to the player; they act as the antenna for the FM radio.
2. From the main menu, select 'FM Radio'.
3. Use the navigation buttons to scan for stations or select a preset.

4.6 Voice Recorder

Record audio using the built-in microphone.

1. From the main menu, select 'Recorder'.
2. Press the **Confirm/Play** button to start recording.
3. Press it again to pause/resume.
4. Press the **Return** key to stop and save the recording.

4.7 E-Book Reader

Read text files on the device's screen.

1. From the main menu, select 'E-Book'.
2. Browse and select your desired text file.
3. Use the navigation buttons to scroll through pages.

5. MAINTENANCE

5.1 Cleaning

- Wipe the device with a soft, dry cloth.
- Do not use liquid cleaners or abrasive materials.

5.2 Battery Care

- Avoid exposing the device to extreme temperatures.
- Charge the device regularly, even if not in use, to maintain battery health.

6. TROUBLESHOOTING

- **Device will not power on:** Ensure the battery is charged. Connect to a charger for at least 10 minutes. If unresponsive, try pressing the reset button with a thin pin.
- **Cannot connect to Bluetooth:** Ensure Bluetooth is enabled on both the MP3 player and the target device. Make sure the target device is in pairing mode and within range.
- **No sound:** Check the volume level. Ensure headphones are properly connected or Bluetooth is paired correctly. Try different headphones.
- **Files not appearing:** Ensure files are transferred to the correct folders. Check if the file format is supported by the player.
- **Device freezes:** Press and hold the Power button to force a restart. If the issue persists, use the reset button.

7. SPECIFICATIONS

Feature	Specification
Brand	AGXOV
Model Name	D50
Memory Storage Capacity	128 GB (expandable via Micro SD)
Connectivity Technology	Bluetooth 5.3, USB
Special Features	FM Radio, Voice Recorder, E-Book, Built-in HD Speaker
Screen Size	1.77 Inches
Compatible Devices	Headphones, Earphones
Media Type	Micro SD
Supported Audio Formats	MP3, AAC, FLAC, WAV, WMA, OGG, APE, AIFF, LPCM, PCM, RAW, M4A, AMR
Battery Capacity	300mAh
Battery Life	Up to 40 hours
Dimensions (approx.)	8.9cm (3.5in) x 3.9cm (1.54in) x 0.7cm (0.28in)

8. WARRANTY AND SUPPORT

8.1 Warranty Information

The AGXOV D50 MP3 Player comes with a standard manufacturer's warranty. Please refer to the warranty card included in your package or contact customer support for specific details regarding warranty coverage and duration.

8.2 Customer Support

For any questions, technical assistance, or support needs, please contact AGXOV customer service through the retailer's platform or the official AGXOV website. Please have your model number (D50) and purchase information ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0FX55N12D>

More documents and user manuals: <https://manuals.plus/>