



Manuals.plus /

› GAIGAICHONG /

› GAIGAICHONG Replacement Remote Control for Allen+Roth Electric Fireplace Heater Models 00RC006B, LWFP62-8, LWFP58-7  
Instruction Manual

## GAIGAICHONG D125102101E24

# GAIGAICHONG Replacement Remote Control for Allen+Roth Electric Fireplace Heater

Models: 00RC006B, LWFP62-8, LWFP58-7 | Brand: GAIGAICHONG | Model Number:  
D125102101E24

## INTRODUCTION

---

This manual provides instructions for the GAIGAICHONG replacement remote control designed for specific Allen+Roth electric fireplace heater models. Please read this manual thoroughly before use to ensure proper operation and to maximize the lifespan of your remote control.

## PACKAGE CONTENTS

---

Verify that all items listed below are included in your package:

- 1x Replacement Remote Control
- 1x Wall Mounting Bracket



Image: The GAIGAICHONG replacement remote control shown alongside its accompanying wall mounting bracket. The remote is dark gray with white function icons, and the bracket is white.

## SETUP

---

### 1. Installing Batteries

The remote control requires two (2) AAA 1.5V batteries (not included).

1. Locate the battery compartment on the back of the remote control.
2. Press down on the tab and slide the battery cover off.
3. Insert two AAA batteries, ensuring the correct polarity (+ and -) as indicated inside the compartment.
4. Slide the battery cover back into place until it clicks securely.







Image: The rear view of the remote control, highlighting the battery compartment cover with an arrow indicating the slide direction for opening.

## 2. Wall Mounting Bracket Installation

The included bracket allows for convenient storage of your remote control.

1. Choose a suitable location near your electric fireplace heater.
2. Use appropriate screws (not included) to secure the bracket to the wall. Ensure the bracket is level and firmly attached.
3. Slide the remote control into the bracket for storage.

## OPERATING INSTRUCTIONS

---

This remote control is pre-programmed and requires no additional setup for compatible Allen+Roth electric fireplace heaters. Ensure the remote is pointed towards the fireplace receiver during operation.



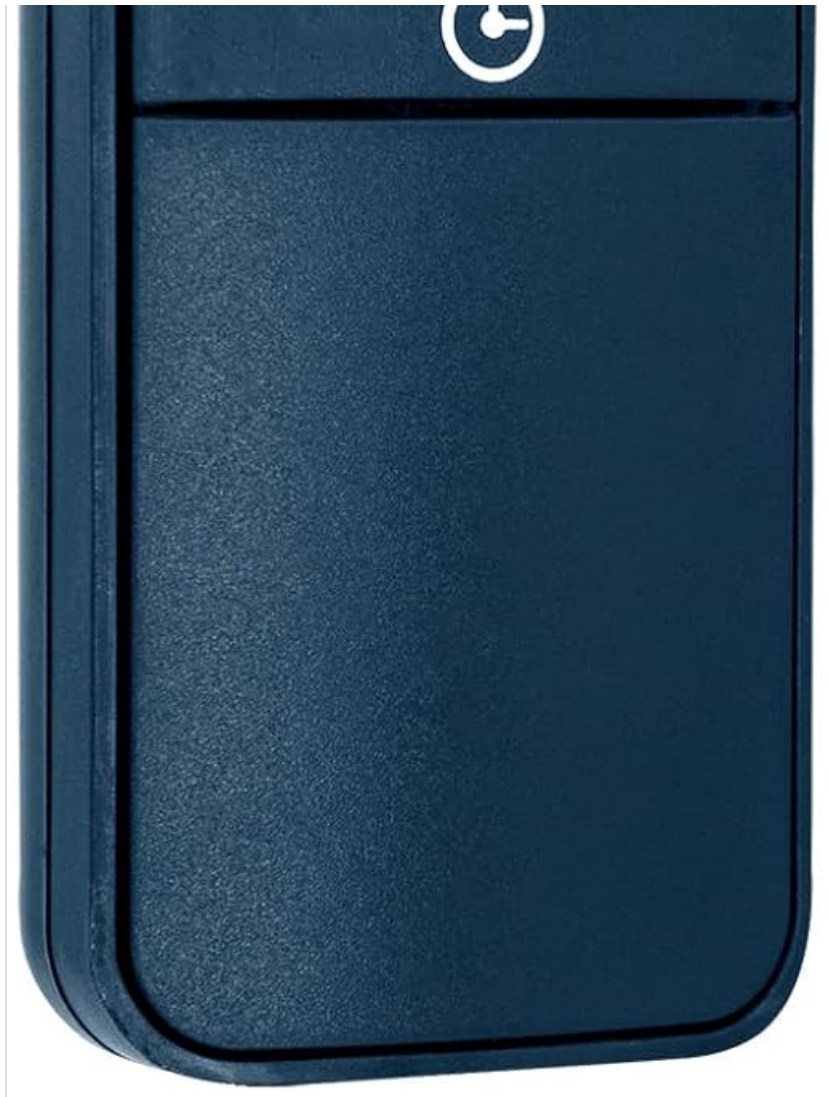


Image: A clear front view of the remote control, displaying its buttons and their corresponding icons.

## Remote Control Functions

- **Power Button ( ):** Turns the fireplace heater ON or OFF.
- **Temperature Increase (+):** Increases the desired temperature setting.
- **Temperature Decrease (-):** Decreases the desired temperature setting.
- **Thermostat/Heat Setting ( ):** Adjusts heat output or thermostat mode.
- **Flame Effect ( ):** Controls the flame brightness or effect settings.
- **Timer ( ):** Sets or adjusts the operational timer for the fireplace.

## COMPATIBILITY

---

This replacement remote control is compatible with the following Allen+Roth electric fireplace heater models:

- 00RC006B
- LWFP62-8
- LWFP58-7
- WSF36SY23C
- WSF36SY23M
- WSF60MS26GAO

- WSF60WV23-DB

Please ensure your original remote control matches the appearance of the remote shown in this manual for guaranteed compatibility.

## SPECIFICATIONS

Feature	Detail
Brand	GAIGAICHONG
Model Number	D125102101E24
Compatible Devices	Allen+Roth Electric Fireplace Heaters (00RC006B, LWFP62-8, LWFP58-7, WSF36SY23C, WSF36SY23M, WSF60MS26GAO, WSF60WV23-DB)
Power Source	2 x AAA 1.5V Batteries (not included)
Item Weight	1.06 ounces (approximately 30 grams)
Package Dimensions	3.94 x 1.18 x 0.39 inches (approximately 10 x 3 x 1 cm)
Special Feature	Includes Wall Mounting Bracket

## TROUBLESHOOTING

- **Remote not responding:**
  - Ensure batteries are inserted correctly with the proper polarity.
  - Replace old batteries with new AAA batteries.
  - Check for any obstructions between the remote control and the fireplace heater's receiver.
  - Ensure you are within the effective operating range of the fireplace heater.
- **Intermittent operation:**
  - This may indicate low battery power. Replace batteries.
  - Ensure a clear line of sight to the fireplace receiver.

## MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Storage:** When not in use for extended periods, remove the batteries to prevent leakage and store the remote in a cool, dry place.
- **Battery Replacement:** Replace batteries promptly when the remote's performance diminishes.

## WARRANTY AND SUPPORT

For any questions, concerns, or support regarding your GAIGAICHONG replacement remote control,

please contact the seller directly through your purchase platform. Please refer to your purchase documentation for specific warranty details, if applicable.