

[Manuals.plus](#) /

› [Skechers](#) /

› Skechers Brynwood Burgundy Watch SR2155 User Manual

## Skechers SR2155

# Skechers Brynwood Burgundy Watch SR2155 User Manual

**Model:** SR2155

**Brand:** Skechers

### INTRODUCTION

This manual provides comprehensive instructions for the Skechers Brynwood Burgundy Watch SR2155. This timepiece features a burgundy-tone case and strap, complemented by a glitter ombre dial with rose gold accents. It combines a modern analog-digital display for clear readability and practical functionality.



Image: The Skechers Brynwood Burgundy Watch SR2155 displayed on a wrist, showcasing its design and fit.

## SETUP

---

**Initial Inspection:** Upon unboxing, inspect the watch for any visible damage. Remove any protective films from the crystal and case back.

**Battery Activation:** Your watch comes with a pre-installed 12V battery. If the digital display is not active, gently press any button to activate it. Some watches may have a plastic stopper under the crown (time-setting knob) that needs to be removed before first use.

**Setting the Analog Time:**

1. Pull the crown (the knob on the side of the watch) out to the first or second position (depending on the model).
2. Turn the crown to adjust the hour and minute hands to the correct time.
3. Push the crown back in to its original position to start the watch movement.

**Setting the Digital Time and Date:** Refer to the "Operating Instructions" section for detailed instructions on setting the digital display, including time, date, and other functions using the side buttons.

## OPERATING INSTRUCTIONS

The Skechers Brynwood SR2155 features an analog-digital movement with multiple functions controlled by the side buttons.



Image: Side view of the watch, highlighting the 'ST/STP' and 'LIGHT' buttons on the left, and the crown and other buttons on the right.

### Button Functions:

- **LIGHT Button:** Activates the backlight for the digital display.
- **MODE Button:** Cycles through different digital display modes (e.g., Time, Date, Alarm, Stopwatch).
- **ST/STP Button:** Used for starting/stopping functions like the stopwatch or adjusting settings in setting mode.

- **RESET Button:** Used for resetting functions or confirming settings.

#### Setting Digital Time and Date:

1. Press the **MODE** button repeatedly until the digital time display flashes or enters setting mode.
2. Use the **ST/STP** button to adjust the flashing digit (hours, minutes, year, month, day).
3. Use the **RESET** button to move to the next digit or setting.
4. Once all settings are correct, press the **MODE** button to exit the setting mode.

**Water Resistance:** This watch has a water resistance depth of 100 meters. It is suitable for swimming and snorkeling, but not for diving. Do not operate buttons while the watch is submerged.

## MAINTENANCE

---

Proper care ensures the longevity and performance of your Skechers Brynwood watch.

#### Cleaning:

- Wipe the watch case and strap regularly with a soft, dry cloth to remove dust and dirt.
- For water-resistant models, a slightly damp cloth can be used, followed by drying. Avoid using harsh chemicals or abrasive materials.

**Battery Replacement:** The watch uses a 12V battery. When the digital display dims or the watch stops functioning, it indicates a low battery. Battery replacement should be performed by a qualified watch technician to ensure proper sealing and water resistance.

**Storage:** Store your watch in a cool, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, consider removing the battery to prevent leakage, though this is generally not necessary for modern watch batteries.

**Avoid Impacts:** While durable, avoid dropping the watch or subjecting it to strong impacts, which can damage the internal movement or external components.



Image: Rear view of the watch, showing the case back and the buckle of the burgundy strap with 'SKECHERS' branding.

## TROUBLESHOOTING

If you encounter issues with your Skechers Brynwood watch, refer to the following common solutions:

### Watch Not Keeping Time (Analog):

- Check if the crown is fully pushed in.
- If the watch has stopped completely, the battery may need replacement.

### Digital Display Not Working:

- Press the LIGHT button to check if the backlight activates.
- The battery may be low or depleted.
- Ensure no buttons are stuck.

### Water Inside the Watch:

- Immediately take the watch to a professional watch repair service. Do not attempt to open it yourself.
- Ensure the crown was fully pushed in before exposure to water.

For issues not covered here, please contact customer support.

## SPECIFICATIONS

| Feature                | Detail                     |
|------------------------|----------------------------|
| Model Number           | SR2155                     |
| Brand                  | Skechers                   |
| Display Type           | Analog-Digital             |
| Movement Type          | Quartz                     |
| Case Diameter          | 42 Millimetres             |
| Band Width             | 18 Millimetres             |
| Case Thickness         | 16 Millimetres             |
| Band Material          | Polyurethane               |
| Crystal Material       | Glass                      |
| Water Resistance Depth | 100 Metres                 |
| Item Weight            | 120 Grams                  |
| Battery                | 1 x 12V battery (included) |

## WARRANTY INFORMATION

This Skechers Brynwood SR2155 watch comes with a **2-Year Limited Warranty** from the date of purchase. The warranty covers manufacturing defects in materials and workmanship under normal use.

**What is Covered:** Watch movement, hands, and dial.

**What is Not Covered:**

- Battery life.
- Normal wear and tear (e.g., scratches on case, crystal, strap alteration).
- Damage resulting from improper handling, lack of care, accidents, or unauthorized repairs.
- Water damage if the watch was not used according to its water resistance rating or if the crown was not properly secured.

For warranty claims, please retain your proof of purchase and contact customer support.

## CUSTOMER SUPPORT

For further assistance, technical support, or warranty inquiries, please contact Skechers customer service.

**Manufacturer:** Fossil India Pvt Ltd

**Importer:** Fossil India Pvt. Ltd., Khasra No: 2058/1754/18 & 2059/1754/18, Waka Mouza Bhatoli kalan, Baddi 173205 India

You may also visit the official Skechers website for support resources.

