

[Manuals.plus](#) /

› [Skechers](#) /

› Skechers SR5255 Rosencrans Men's Silicone Watch Instruction Manual

Skechers SR5255

Skechers SR5255 Rosencrans Men's Silicone Watch Instruction Manual

INTRODUCTION

This manual provides essential instructions for the proper use, care, and maintenance of your Skechers SR5255 Rosencrans Men's Silicone Watch. Please read this manual thoroughly to ensure optimal performance and longevity of your timepiece.



The Skechers SR5255 Rosencrans watch features a black case and silicone strap, designed for comfortable wear.

SETUP

Setting the Time

1. **Pull out the crown:** Gently pull the crown (the small knob on the side of the watch case) to its outermost position.
2. **Adjust the time:** Rotate the crown clockwise or counter-clockwise to move the hour and minute hands to the desired time.
3. **Push in the crown:** Once the time is set, push the crown back into its original position against the watch case. Ensure it is fully seated to maintain water resistance.





The watch crown, located on the side of the case, is used for setting the time.

Strap Adjustment

The silicone strap is designed for a comfortable, self-adjusting fit. Use the buckle closure to secure the watch to your wrist, selecting the appropriate hole for a snug yet comfortable fit.



The durable silicone strap includes a buckle closure for a secure and adjustable fit.

OPERATING YOUR WATCH

Timekeeping

Your Skechers SR5255 watch features a three-hand analog quartz movement, providing accurate time display with an hour, minute, and second hand.

Water Resistance

This watch is water-resistant up to 50 meters (5 ATM). This means it is suitable for short periods of

recreational swimming and showering. It is **not** suitable for diving, snorkeling, or high-impact water sports. Avoid operating the crown while the watch is wet or submerged to prevent water intrusion.

CARE AND MAINTENANCE

Cleaning

- Wipe the watch case and strap regularly with a soft, dry cloth to remove dust and dirt.
- For stubborn dirt on the silicone strap, a slightly damp cloth with mild soap can be used. Ensure the watch is completely dry before wearing.
- Avoid using harsh chemicals, solvents, or abrasive cleaners, as these can damage the watch's finish and materials.

Battery Replacement

The watch is powered by a quartz movement, which requires a battery. When the watch stops running, it indicates the battery needs replacement. It is recommended to have the battery replaced by a qualified watch technician to ensure proper sealing and maintain water resistance.

Storage

When not in use, store your watch in a cool, dry place, away from direct sunlight, extreme temperatures, and strong magnetic fields. The original packaging box can be used for safe storage.



The Skechers SR5255 watch comes in a branded protective box.

TROUBLESHOOTING

- **Watch not running:** Ensure the crown is fully pushed in. If it still does not run, the battery may need replacement.
- **Time is inaccurate:** Reset the time as described in the 'Setting the Time' section. If the inaccuracy persists, the battery may be low, or the movement may require servicing.
- **Condensation under crystal:** This indicates moisture has entered the watch. Immediately contact customer support or a professional watch repair service.

SPECIFICATIONS

Feature	Detail
Model Number	SR5255
Case Diameter	46 mm

Case Material	Polycarbonate
Case Thickness	12 mm
Strap Material	Silicone
Strap Width	22 mm
Band Length	20.5 cm
Movement Type	Quartz (Analog, Three-Hand)
Crystal Type	Acrylic (Scratch-Resistant)
Water Resistance	50 meters (5 ATM)
Clasp Type	Buckle
Weight	62 grams
Dial Color	Black (Sandblasted)
Strap Color	Black

WARRANTY INFORMATION

Your Skechers SR5255 Rosencrans watch comes with a limited warranty. For detailed information regarding the terms, conditions, and duration of your warranty, please refer to the official warranty documentation included with your purchase or visit the official Skechers website. Keep your proof of purchase for warranty claims.

CUSTOMER SUPPORT

If you encounter any issues or have questions not covered in this manual, please contact Skechers customer support. Refer to the contact information provided on the Skechers official website or your product packaging for assistance.