



Manuals.plus /

› FOSSIBOT /

› FOSSIBOT F119-14 Rugged Cellphone User Manual

FOSSIBOT F119-14

FOSSIBOT F119-14 Rugged Cellphone User Manual

1. INTRODUCTION

This manual provides essential information for the FOSSIBOT F119-14 Rugged Cellphone. The F119-14 is designed for durability and extended use, featuring a large battery, robust construction, and the Android 14 operating system. Please read this manual thoroughly to ensure proper use and maintenance of your device.

2. PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 x FOSSIBOT F119-14 Mobile Phone
- 1 x User Manual & Warranty Card
- 1 x USB Data Cable (2A)
- 1 x Power Adapter (5V2A)
- 1 x SIM Card Pin
- 1 x USB OTG Adapter

FOSSIBOT F105

Designed for outdoor Adventures ,Extreme work Environments



Image: Contents of the FOSSIBOT F119-14 retail package.

3. SETUP

3.1 SIM Card and Storage Card Installation

1. Locate the SIM card tray on the side of the device.
2. Insert the SIM card pin into the small hole next to the tray to eject it.
3. Place your Nano-SIM card(s) and/or a microSD card (up to 128GB) into the designated slots on the tray.
4. Carefully reinsert the tray into the phone.

3.2 Initial Power On and Charging

1. Press and hold the Power button (located on the right side) until the FOSSIBOT logo appears.
2. Follow the on-screen instructions to complete the initial setup, including language selection, Wi-Fi connection, and Google account login.
3. To charge the device, connect the USB cable to the phone's Type-C port and the power adapter, then plug the adapter into a wall outlet.

4. KEY FEATURES

4.1 Massive Battery Capacity

The FOSSIBOT F119-14 is equipped with a 10300mAh battery, providing extended usage times. This includes approximately 1400 hours of standby time, 70 hours of talk time, and 12 hours of video playback on a full charge. The device also supports OTG reverse charging, allowing it to function as a power bank for other devices.

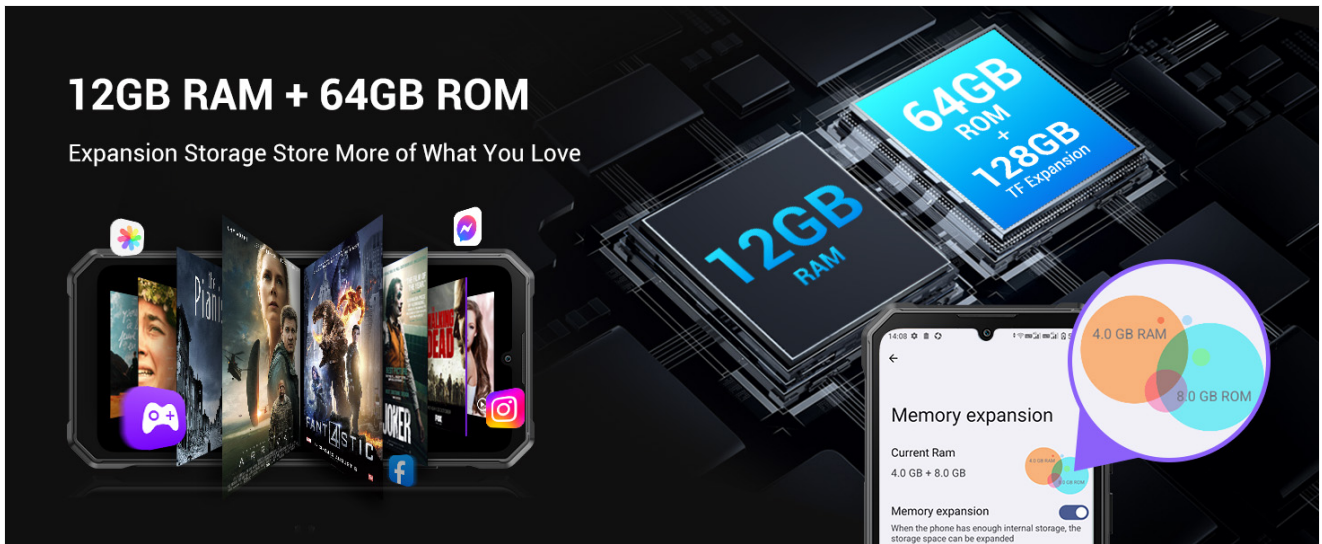


Image: FOSSIBOT F119-14 highlighting its 10300mAh battery and estimated usage times.

4.2 Rugged Durability

The F119-14 is built to withstand harsh environments, certified with IP68 and IP69K ratings. It can endure submersion in 1.5 meters of water for 30 minutes and withstands 1.5-meter drop tests. The device operates reliably in extreme temperatures ranging from -20°C to 50°C, offering impact and abrasion resistance.



Image: FOSSIBOT F119-14 showcasing its triple protection certifications.

Your browser does not support the video tag.

Video: Demonstration of rugged features and durability tests for a FOSSIBOT rugged smartphone model.

4.3 System and Storage

The F119-14 operates on the Android 14 system, powered by an MT8768 octa-core processor for enhanced security and smooth performance. It features 12GB of RAM (4GB physical + 8GB virtual) and 64GB of internal storage, expandable up to 128GB with a microSD card.



Image: FOSSIBOT F119-14 memory configuration and expansion capabilities.

4.4 Display

The device features a 6.745-inch TFT embedded LCD HD display with a resolution of 720x1600 pixels and a pixel density of 260 PPI. It offers 420 nits of brightness for clear visibility.

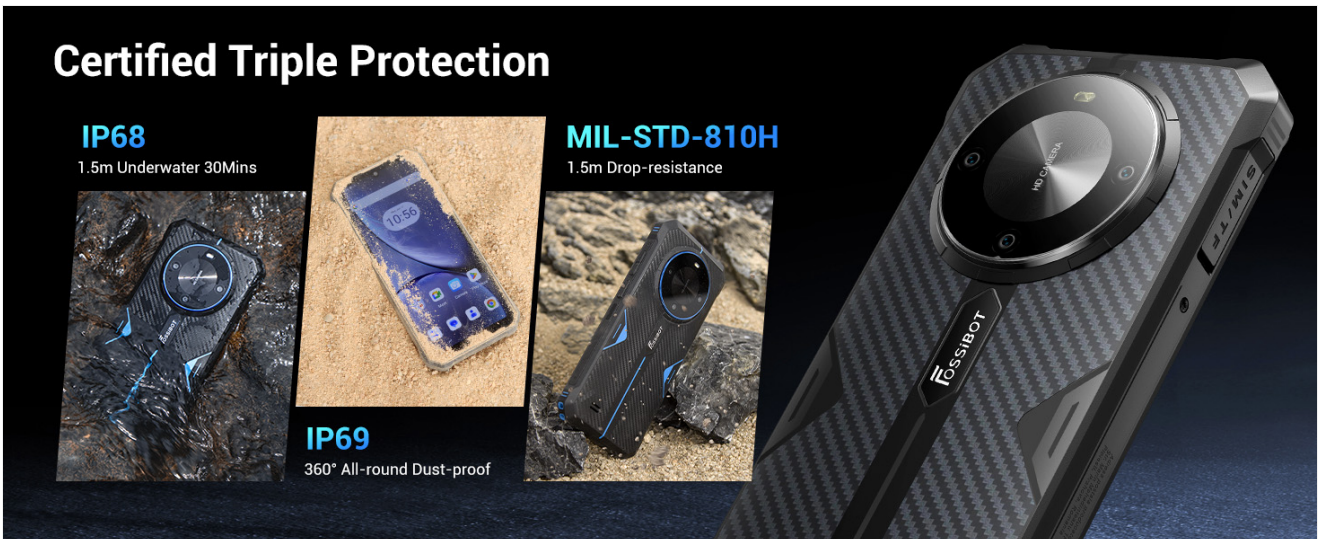


Image: FOSSIBOT F119-14 display size and resolution details.

4.5 Cameras

Capture moments with the F119-14's dual camera system, featuring a 20MP main rear camera and an 8MP front camera.



4.6 Security Features

The F119-14 offers multiple security options, including fingerprint unlock and face unlock for convenient and secure access to your device.



Image: FOSSIBOT F119-14 biometric security options.

4.7 Network and Connectivity

The FOSSIBOT F119-14 is an unlocked device with global network support, including GSM, WCDMA, TDD, and FDD bands. It supports 5G cellular technology and Wi-Fi connectivity. Supported carriers include T-Mobile, Boost Mobile, Metro by T-Mobile, Straight Talk, Consumer Cellular, Mint, Ultra Mobile, and Good2Go Mobile.

5. OPERATING INSTRUCTIONS

5.1 Basic Navigation

- **Touchscreen Gestures:** Tap to select, swipe to scroll, pinch to zoom.
- **Home Screen:** Access apps, widgets, and notifications.
- **Notifications:** Swipe down from the top of the screen to view notifications and quick settings.

5.2 Using Biometric Security

- **Fingerprint Unlock:** Register your fingerprint(s) in the Security settings. Place your registered finger on the fingerprint sensor to unlock the device.
- **Face Unlock:** Register your face in the Security settings. Look at the front camera to unlock the device.

5.3 Camera Operation

- Open the Camera application.
- Select desired mode (Photo, Video, Portrait, etc.).
- Tap the shutter button to capture images or start/stop video recording.

6. SPECIFICATIONS

Feature	Specification
Brand	FOSSIBOT
Model Name	F119-14
Operating System	Android 14
RAM Memory Installed Size	12 GB
Memory Storage Capacity	64 GB (Expandable to 128 GB)
Screen Size	6.745 Inches
Resolution	1280 x 720 (720x1600 Pixels Per Inch)
Refresh Rate	60 Hz
Cellular Technology	5G
SIM Card Slot Count	Dual SIM
Rear Facing Camera Photo Sensor Resolution	20 MP
Number of Rear Facing Cameras	2
Number of Front Cameras	1 (8 MP)
Battery Capacity	10300 Milliamp Hours
Ingress Protection (IP) Rating	IP68/IP69K
Biometric Security Feature	Fingerprint Recognition, Face Recognition

7. MAINTENANCE

- **Cleaning:** Use a soft, damp cloth to clean the device. Avoid harsh chemicals or abrasive materials.
- **Water Exposure:** While the device is waterproof, ensure all port covers are securely closed before exposing it to water. After water exposure, dry the device thoroughly before charging.
- **Temperature:** Avoid prolonged exposure to temperatures outside the operating range of -20°C to 50°C.
- **Impact Protection:** Despite its rugged design, avoid unnecessary drops or impacts to prolong the device's lifespan.

8. TROUBLESHOOTING

- **Device Not Powering On:** Ensure the battery is charged. Connect the charger and wait a few minutes before attempting to power on again.
- **Poor Network Signal:** Check SIM card installation. Ensure you are within network coverage. Restart the device.
- **Screen Unresponsive:** Restart the device by holding the power button. If unresponsive, force restart (refer to device-specific instructions if standard restart fails).
- **Battery Draining Quickly:** Close unused applications. Reduce screen brightness. Disable unnecessary features like Wi-Fi, Bluetooth, or GPS when not in use.
- **Apps Crashing:** Clear the cache of the problematic app or reinstall it. Ensure the operating system is up to

date.

9. WARRANTY AND SUPPORT

The FOSSIBOT F119-14 comes with a 2-year warranty. For technical assistance or warranty claims, please contact FOSSiBOT's 24/7 online after-sales support. Refer to the included Warranty Card for detailed terms and conditions.

Contact Information: Refer to the FOSSiBOT official website or the contact details provided in your warranty card for support.