

Airzeen R7

Airzeen R7 Robot Vacuum Cleaner User Manual

Model: R7

1. INTRODUCTION

Thank you for choosing the Airzeen R7 Robot Vacuum Cleaner. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new robotic vacuum. Please read it thoroughly before use and retain it for future reference.

2. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- 1x Airzeen R7 Robot Vacuum (including dust box, HEPA filter, sponge, roll brush, battery)
- 1x Charging Dock
- 1x Adapter
- 1x Roller Brush (pre-installed)
- 1x HEPA Filter (pre-installed)
- 2x Side Brushes (additional pair)
- 1x Cleaning Brush
- 1x Large Dustbin (pre-installed)
- 1x Remote Control (with batteries)
- 1x User Manual (this document)
- 1x Quick Guide

What's in the box



- | | |
|---------------------------------------|-----------------|
| 1 R7 Robot Vacuum Cleaner*1 | 6 Side Brush*2 |
| 2 Charging Dock*1 | 7 Clean Brush*1 |
| 3 Dust Box*1 | 8 Main Brush *1 |
| 4 Power Adapter (for Charging Dock)*1 | 9 Hepa*1 |
| 5 Remote Control with Battery*1 | |

Figure 1: Included components of the Airzeen R7 Robot Vacuum Cleaner. This image displays the robot vacuum, charging dock, adapter, remote control, side brushes, cleaning brush, and filters.

3. PRODUCT OVERVIEW

The Airzeen R7 is a robotic vacuum cleaner designed for efficient floor cleaning. It features a slim profile, powerful suction, and multiple cleaning modes.

3.1 Top View



Figure 2: The top surface of the Airzeen R7, showing the power button and Wi-Fi indicator.

3.2 Bottom View

The underside of the robot features drive wheels, side brushes, a main roller brush, charging contacts, and an optional mop attachment area.

3000Pa Ultra Suction Power

3 levels adjustable suction



Quiet



Standard



Max



Figure 3: The bottom of the Airzeen R7, illustrating the main brush, side brushes, and wheels.

3.3 Slim Design

With an ultra-slim 3.07-inch (7.8 cm) height, the R7 can easily navigate under furniture such as sofas and beds, reaching areas where dust often accumulates.



Figure 4: The slim profile of the R7 allows it to clean under low-clearance furniture.

4. SETUP

4.1 Initial Charging

Before first use, fully charge the robot vacuum for 6 hours to activate battery performance. Place the charging dock against a wall on a hard, flat, unobstructed surface. Ensure the adapter is connected to the charging dock and a power outlet.

4.2 Installing Side Brushes

Attach the two side brushes to the designated posts on the underside of the robot until they click into place.

4.3 App Connection (2.4 GHz Wi-Fi Only)

Download the 'HonySmart' app from your app store. Follow the in-app instructions to connect your R7 robot vacuum to your 2.4 GHz Wi-Fi network. This enables remote control, scheduling, and mode selection.

Q Does the R7 robot vacuum support mopping?

- A Yes, the R7 robot vacuum supports mopping. You will need to purchase the additional 2-in-1 water tank with mop holder and mop cloth from the Airzeen official store. Important: Remove the mop holder before cleaning carpeted areas. If used on carpets with the mop attached, the carpet may get wet.

Q Can I place the charging dock on a carpet? What should I do if the robot can't recharge?

- A Do not place the charging dock on carpet. The robot's ability to recharge is affected by its surroundings. Please place the charging base against a wall on a hard, flat, and unobstructed surface in a cool area. If the robot is unable to return to charge, place it approximately 1 meter in front of the charging dock and then press the "Recharge" button.

Figure 5: Visual guide for connecting the R7 to the mobile application.

4.4 Unboxing and Initial Setup Video

Your browser does not support the video tag.

Video 1: An unboxing and initial setup guide for the Airzeen R7 Robot Vacuum Cleaner, demonstrating how to prepare the device for first use.

4.5 Connecting to Bluetooth Video

Your browser does not support the video tag.

Video 2: Instructions on how to connect the R7 robot vacuum cleaner to Bluetooth for app control.

5. OPERATING MODES

The Airzeen R7 offers various cleaning modes to suit different needs, controllable via the app, remote, or voice commands (Alexa/Google Assistant).

5.1 Cleaning Modes

- **Automatic Cleaning:** The robot intelligently navigates to clean the entire area.
- **Spot Cleaning:** Focuses on a specific area for intensive cleaning.
- **Edge Cleaning:** Cleans along walls and furniture edges.
- **Scheduled Cleaning:** Set specific times for the robot to clean automatically.
- **Manual Cleaning:** Control the robot's movement manually using the remote or app.

Multiple Cleaning Modes



Edge Clean



Spot Clean



Figure 6: The R7 performing Edge Clean and Spot Clean modes.

5.2 Suction Power and Carpet Boost

The R7 provides up to 3000PA of suction power with 3 adjustable levels (Quiet, Standard, Max). It also features an automatic carpet boost function, increasing suction when it detects carpeted surfaces to absorb deep debris.

Auto Carpet Booster

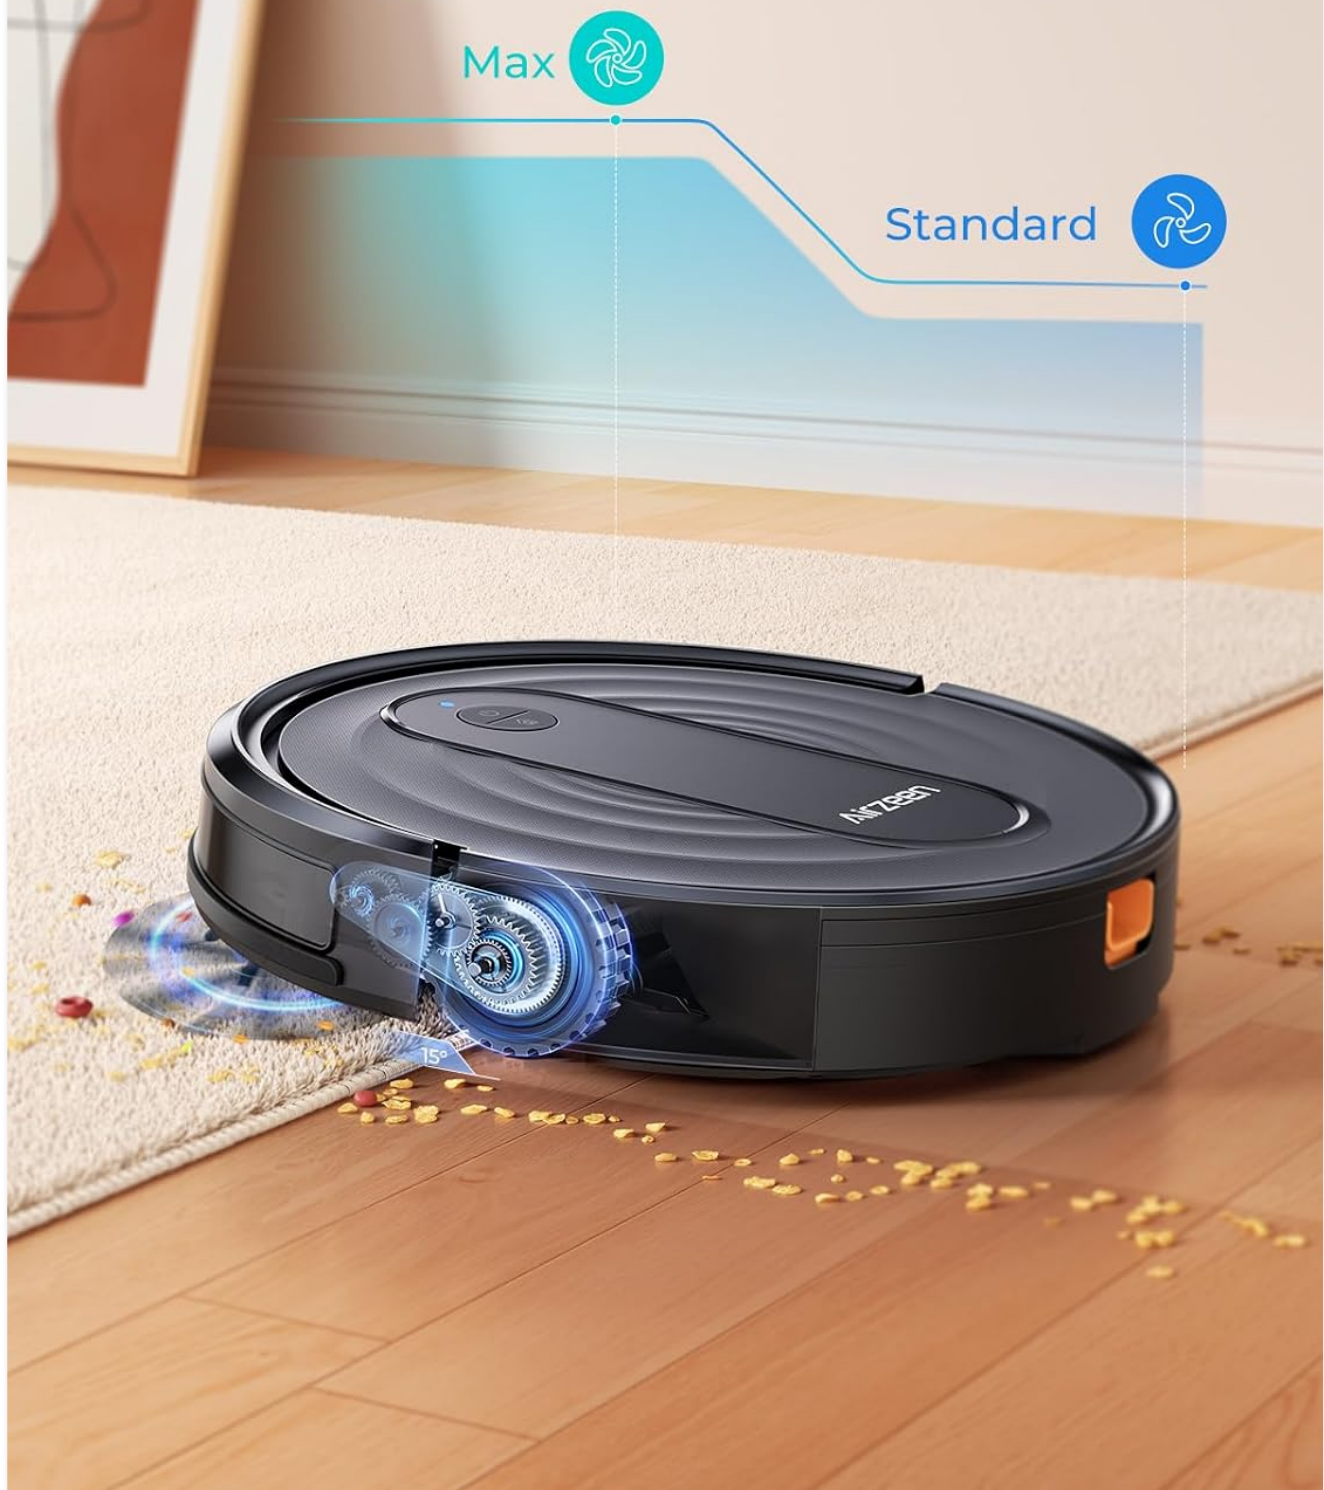


Figure 7: The R7 automatically boosts suction on carpets for enhanced cleaning.

5.3 Control Methods

Control your R7 using the included remote control, the dedicated mobile app, or voice commands through Alexa and Google Assistant.

Smart Control



Works with
Amazon Alexa



Works with
Google Assistant



Works with
Bluetooth

Alexa, turn on R7



Figure 8: The R7 can be controlled via app, remote, or voice commands.

5.4 Automatic Recharge

The R7 is equipped with a 2600mAh battery, providing up to 120 minutes of cleaning. When the battery level is below 15% or cleaning is complete, the robot will automatically return to its charging dock.



Figure 9: The R7 robot vacuum automatically docks for recharging.

6. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your Airzeen R7.

6.1 Dustbin and Filter Cleaning

The R7 features a 600ML oversized dustbin. Empty the dustbin after each cleaning cycle. The HEPA filter should be cleaned regularly with the provided cleaning brush and replaced periodically to maintain suction efficiency.

Extra Large 600ML Dust Box

Holds up to 200m² of dust and equipped with high-efficiency HEAP filter to freshen the air.



Figure 10: The R7's large dustbin and filter system.

6.2 Cleaning Charging Contacts

Periodically clean the charging contacts on both the robot and the charging dock with a dry cloth to ensure proper connection.

Your browser does not support the video tag.

Video 3: A demonstration on how to clean the charging shrapnel (contacts) of the R7 robot vacuum.

6.3 Drive Wheel Maintenance

Inspect the drive wheels regularly for any tangled hair or debris and clean them using the provided cleaning tool.

Your browser does not support the video tag.

Video 4: Guide on how to inspect and address potential issues with the drive wheel of the R7.

7. TROUBLESHOOTING

7.1 Robot Gets Stuck

The R7 has a height of 3.07 inches (7.8 cm). If the clearance under your furniture is exactly this height, the vacuum may get stuck. Place physical barriers to prevent the robot from entering such areas. Always tidy up loose items like power cords, shoes, or socks before cleaning.

7.2 Robot Stops Cleaning Quickly

If your robot returns to the charging dock after approximately 30 minutes, check if 'Room Mode' is enabled in the app. This mode is designed for shorter cleaning cycles. For longer cleaning, select 'Random Mode'. Ensure the robot is fully charged before starting a cycle. If the charging dock's plug is loose, the robot may not have charged correctly.

7.3 Mopping Functionality

The R7 robot vacuum supports mopping with an optional 2-in-1 dustbin and water tank. This accessory must be purchased separately from the Airzeen official store. Remember to remove the mop holder when cleaning carpets to avoid staining.

7.4 Robot Cannot Recharge

Do not place the charging dock on carpet. The robot's ability to recharge is affected by its surroundings. Place the charging base against a wall on a hard, flat, and unobstructed surface. If the robot is unable to return to charge, place it approximately 1 meter in front of the charging dock and then press the "Recharge" button.

7.5 Bumper Failure Video

Your browser does not support the video tag.

Video 5: A guide on how to diagnose and resolve bumper failure issues on the R7 robot vacuum.

8. SPECIFICATIONS

Brand	Airzeen
Model Name	R7
Special Feature	Anti-Collision, Anti-Fall, Scheduling
Color	Black
Product Dimensions	12"L x 12"W x 3"H
Filter Type	Sponge
Battery Life	120 minutes

Cleaning Path Width	15 Inches
Capacity (Dustbin)	600 Milliliters
Power Source	Battery Powered
Control Method	App, Remote, Voice
Compatible Devices	Google Home, Smartphones
Item Weight	7.43 pounds
Surface Recommendation	Wooden Floor, Hard Floor, Low-piled Carpet, Ceramic

9. WARRANTY AND SUPPORT

The Airzeen R7 Robot Vacuum comes with a 2-year warranty and lifetime technical support. For any questions or assistance, please contact Airzeen customer service.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question