

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Acedeck](#) /

› [Acedeck L01 Super Loud Alarm Clock User Manual](#)

Acedeck L01

Acedeck L01 Super Loud Alarm Clock User Manual

Model: L01

INTRODUCTION

Thank you for choosing the Acedeck L01 Super Loud Alarm Clock. This device is designed to provide a reliable and powerful wake-up experience, especially for heavy sleepers, with its 115dB dual alarms and adjustable features. This manual will guide you through the setup, operation, and maintenance of your new alarm clock.



Figure 1: Acedeck L01 Super Loud Alarm Clock with green digits.

SETUP

1. Power Connection

Connect the provided AC adapter to the DC 5V port on the back of the alarm clock and plug it into a standard wall outlet. The display will light up, indicating the clock is powered on.

2. Battery Backup (Optional)

For continuous operation during power outages, insert 3 AAA batteries (not included) into the battery compartment

on the bottom of the clock. The battery backup system retains time and alarm settings and will activate the alarm function during a power loss, though the display will turn off to conserve power.



Figure 2: Power connection and battery backup functionality.

3. Setting the Time

1. Press the **TIME SET** button. The hour digits will flash.
2. Use the **HOUR** button to adjust the hour. Press and hold for faster adjustment.
3. Press the **MIN** button to adjust the minutes. Press and hold for faster adjustment.
4. Press **TIME SET** again to confirm and exit time setting mode.

To toggle between 12-hour and 24-hour format, press the **12H/24H** button during time setting.

Figure 3: Switching between 12-hour and 24-hour display.

4. Daylight Saving Time (DST)

Press the **DST ON/OFF** button to activate or deactivate Daylight Saving Time. The clock will adjust automatically.

5. Button Overview

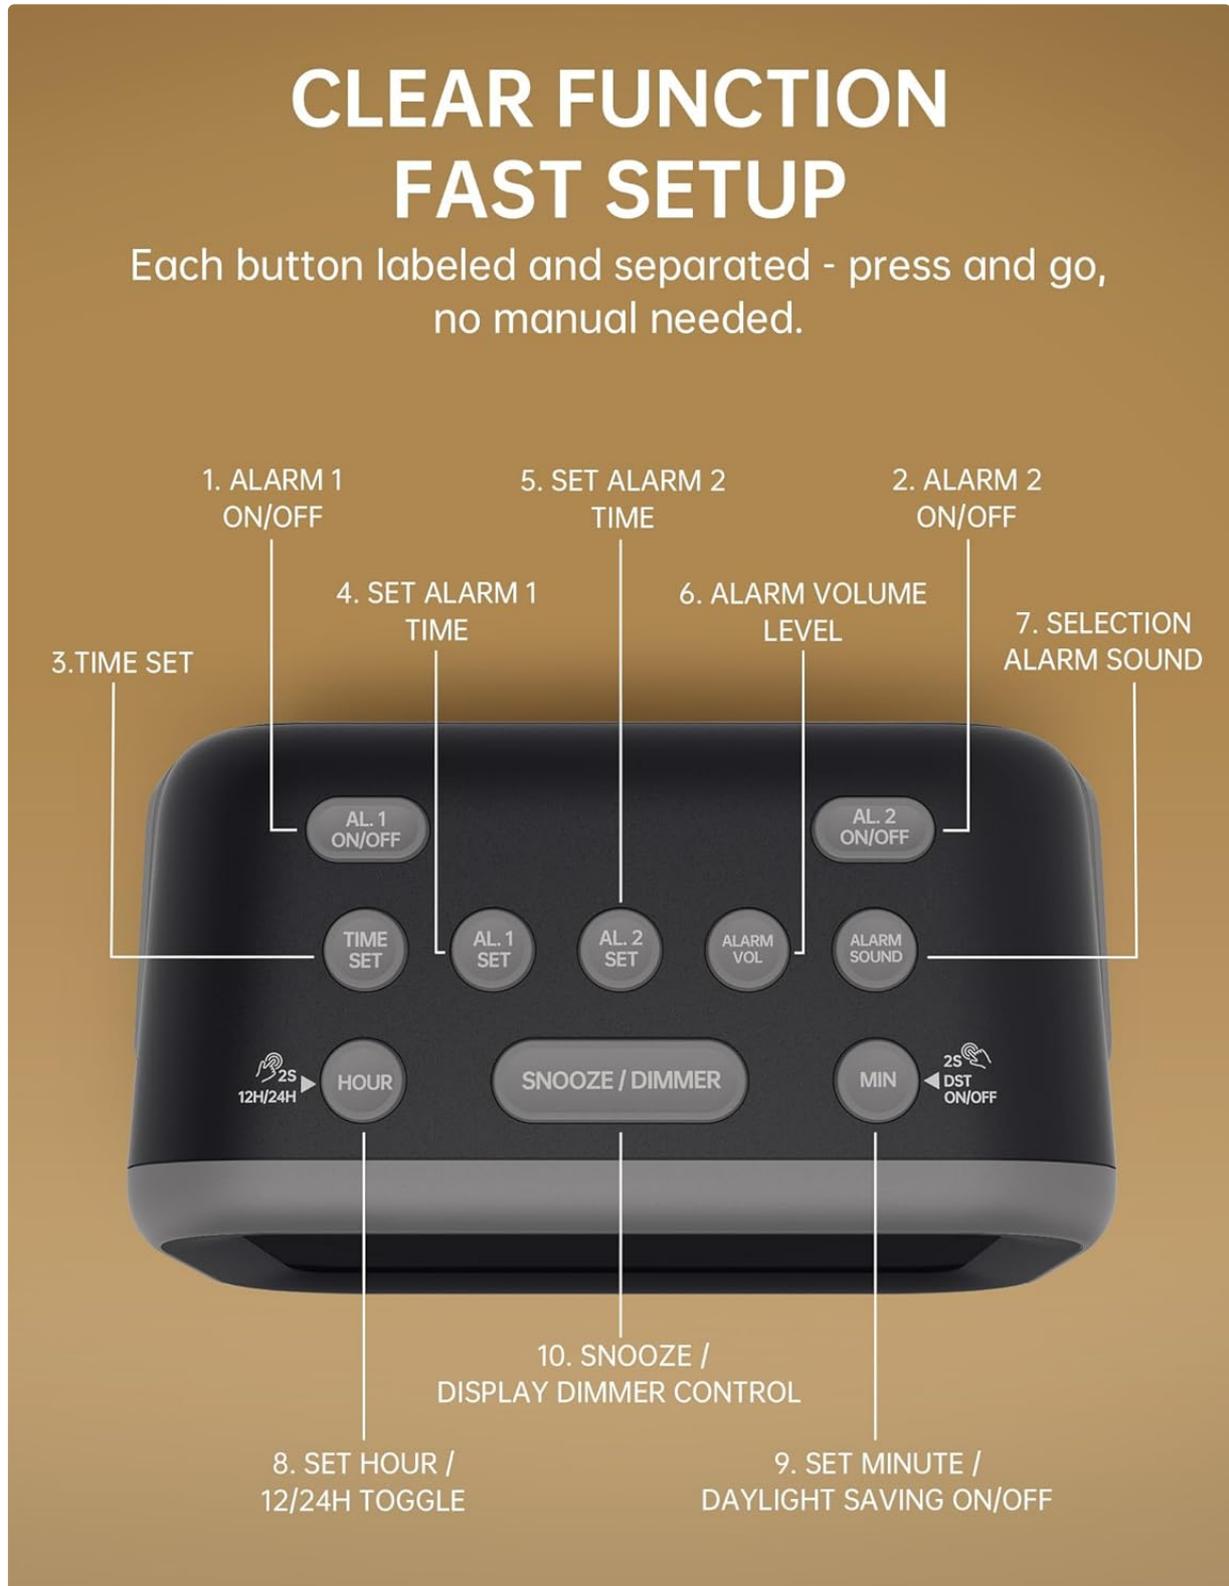


Figure 4: Labeled buttons for clear function and fast setup.

[Video: Setting the Time](#)

VIDEO: Setting the Time

This video demonstrates how to set the current time on your Acedeck L01 alarm clock, including toggling between 12-hour and 24-hour formats.

OPERATING INSTRUCTIONS

1. Setting Alarms (Dual Alarms)

The Acedeck L01 features two independent alarms (AL1 and AL2). This allows you to set different wake-up times for different schedules.

1. Press the **AL1 SET** or **AL2 SET** button. The hour digits for the selected alarm will flash.
2. Use the **HOUR** button to adjust the alarm hour.
3. Use the **MIN** button to adjust the alarm minutes.
4. Press the respective **AL SET** button again to confirm the alarm time.
5. To activate or deactivate an alarm, press the **AL1 ON/OFF** or **AL2 ON/OFF** button. An alarm icon will appear on the display when an alarm is active.

ONE ALARM MISSED ONE STILL COMING



With two fully independent alarms,
you're not counting on just one chance to wake up.

Figure 5: Dual alarm functionality for flexible scheduling.

2. Alarm Sounds

Choose from 6 distinct alarm sounds to suit your preference. While setting the alarm, press the **ALARM SOUND** button to cycle through the available sounds: Beep, Siren, Jackhammer, Music, Bird Song, and Rooster.



Figure 6: Selection of 6 unique alarm sounds.

3. Alarm Volume

The Acedeck L01 features an extra-loud 115dB alarm, ideal for heavy sleepers. You can adjust the alarm volume through 6 levels. Press the **ALARM VOL** button to cycle through the volume settings. The default volume is set to maximum, so adjust to a comfortable level before first use.

WAKE UP GRADUALLY, NOT ABRUPTLY

Sound starts soft and rises gently
— no more heart-pounding alarms.



Figure 7: Adjustable volume levels for the alarm.

4. Snooze Function

When the alarm sounds, press the large **SNOOZE/DIMMER** button to temporarily silence the alarm for a few minutes. The alarm will sound again after the snooze period ends.



Figure 8: Using the snooze function.

5. Adjustable Brightness

The 4.2-inch LED display offers 5 levels of adjustable brightness. Press the **SNOOZE/DIMMER** button (when the alarm is not sounding) to cycle through the brightness levels, from brightest to completely off. This allows for comfortable viewing day or night without disturbing sleep.

5-LEVEL ADJUSTABLE BRIGHTNESS DISPLAY

The lowest brightness level is soft enough for light-sensitive sleepers.



Figure 9: Adjusting the display brightness.

6. USB Charging Port

A built-in USB port on the back of the clock allows you to charge your smartphone or other USB-powered devices overnight. This feature is active when the clock is connected to AC power.



Figure 10: USB charging port in use.

Video: Setting the Alarm

This video demonstrates how to set and activate the dual alarms on your Acedeck L01 alarm clock.

Video: Product Features Overview

This video provides a detailed demonstration of the Acedeck L01 alarm clock's features, including alarm sounds, volume, and brightness settings.

MAINTENANCE

To ensure the longevity and optimal performance of your Acedeck L01 alarm clock, follow these simple maintenance guidelines:

- **Cleaning:** Wipe the clock with a soft, dry cloth. Do not use abrasive cleaners or solvents, as they may damage the finish.
- **Battery Replacement:** If using battery backup, replace the AAA batteries annually or when the battery indicator suggests low power to ensure continuous functionality during power outages.
- **Placement:** Place the clock on a stable, flat surface away from direct sunlight, excessive heat, or moisture.

TROUBLESHOOTING

Problem	Solution
Clock display is off.	Ensure the AC adapter is securely plugged into both the clock and a working power outlet. If using battery backup, the display turns off to save power, but the alarm function remains active.
Alarm does not sound.	Check if the alarm (AL1 or AL2) is activated (icon visible on display). Verify the alarm time is set correctly. Ensure the alarm volume is not set to zero. If running on battery backup, ensure batteries are fresh.

Problem	Solution
Time is incorrect.	Re-set the time following the 'Setting the Time' instructions. Check for power interruptions; if frequent, ensure battery backup is installed and functional.
USB charging is not working.	Ensure the alarm clock is connected to AC power. The USB charging port does not function when the clock is running on battery power. Check the USB cable and the device being charged.

SPECIFICATIONS

- **Brand:** Acedeck
- **Model:** L01
- **Display Type:** Digital LED
- **Display Color:** Green Digits
- **Alarm Volume:** Up to 115dB
- **Alarm Sounds:** 6 unique sounds
- **Brightness Levels:** 5 adjustable levels
- **Power Source:** Corded Electric (AC 100-240V)
- **Battery Backup:** 3 x AAA batteries (not included)
- **USB Charging Port:** Yes (for external devices)
- **Product Dimensions:** 4.8"W x 3.15"H
- **Item Weight:** 11 ounces
- **Material:** Plastic



Figure 11: Product dimensions.

WARRANTY & SUPPORT

Your Acedeck L01 Super Loud Alarm Clock comes with an 18-month warranty from the date of purchase. This warranty covers manufacturing defects and malfunctions under normal use.

For technical support, troubleshooting assistance, or warranty claims, please contact Acedeck customer service through the retailer where you purchased the product or visit the official Acedeck website for contact information.